




An interpretation of:
**Unicredit Tower, César Pelli &
Vertical Forest, Stefano Boeri Architetti, MILAN (Italy), 2014**




PROFILES FOR WALLS

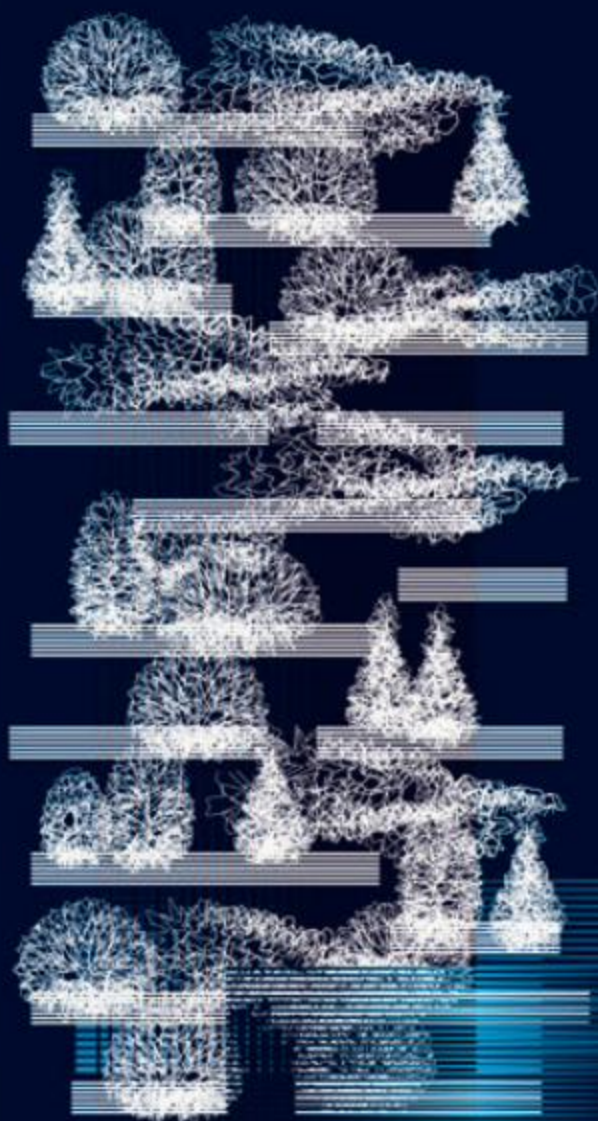

PROJOLLY SQUARE


POLISHED, SUPER POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY SQUARE is a square corner bead profile in polished, super polished, sanded, brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

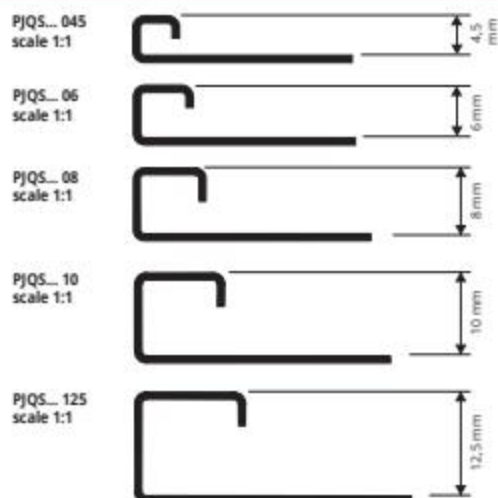

PJQSAC/S 11 & PJQSACML 11 AVAILABLE H 11 MM
PJQSAC/S 15 & PJQSACML 15 AVAILABLE H 15 MM

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

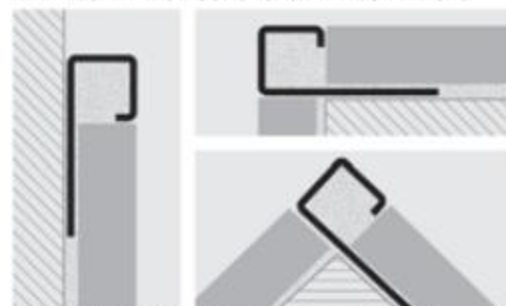

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - Pack 20 Pcs - 54 lm (H 4,5 - 108 lm) - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSAC 045	4,5	9,87	26,65
PJQSAC 06	6	10,38	28,03
PJQSAC 07	7	10,68	28,84
PJQSAC 08	8	11,00	29,70
PJQSAC 09	9	11,28	30,46
PJQSAC 10	10	11,59	31,29
PJQSAC 11	11	12,04	32,51
PJQSAC 125	12,5	12,25	33,08
PJQSAC 15	15	13,35	36,05

SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A
thermo Packed

bar length 2,7 lm - Pack 20 Pcs - 54 lm - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSACML 08	8	15,07	40,69
PJQSACML 10	10	16,45	44,42
PJQSACML 11	11	16,77	45,28
PJQSACML 125	12,5	17,04	46,01

MIRROR LINE



Brushed STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - Pack 20 Pcs - 54 lm (H 4,5 - 108 lm) - 8/10 mm

Article	H mm	€/lm	€/Pc
PJQSACS 045	4,5	11,44	30,89
PJQSACS 06	6	12,04	32,51
PJQSACS 07	7	13,28	35,86
PJQSACS 08	8	14,53	39,23
PJQSACS 09	9	14,90	40,23
PJQSACS 10	10	15,26	41,20
PJQSACS 11	11	15,52	41,90
PJQSACS 125	12,5	15,92	42,98
PJQSACS 15	15	16,91	45,66

COLOURS



SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED, SATIN FINISH ST. STEEL AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS STEEL AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSAC .../1	045/06/07/08/09/10/11/125/15	16,43
TPJQSAC .../1	045/06/07/08/09/10/11/125/15	3,32

Choose the desired height
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQSAC 045/1

CAPSULES AND END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSACS .../1	045/06/07/08/09/10/11/125/15	18,44
TPJQSACS .../1	045/06/07/08/09/10/11/125/15	3,32

Choose the desired height
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQSACS 045/1


JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/07/08/09/10/11/125/15	3,08

CAPSULES - SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJQSACML .../1	08/10/125	20,46
TPJQSACML .../1	08/10/125	3,02

Choose the desired height
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQSACML 045/1

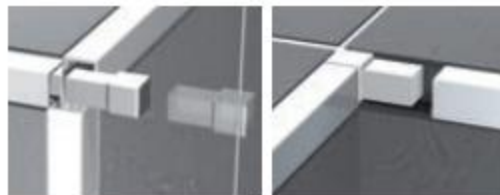

JOINT

CAPSULE

END CAP



GIJQ ...



CPJQSAC .../1



TPJQSAC .../1



PROJOLLY SQUARE is a square corner bead profile in polished stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

PROJOLLY SQUARE

POLISHED, BRUSHED STAINLESS STEEL
AISI 316LL/1.4404-V4A



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A with protective film

bar length 2,7 LM - Pack 20 Pcs - 54 lm - 8/10 mm



Article	H mm	€/lm	€/Pc
PJQSACM 08	8	14,28	38,56
PJQSACM 10	10	15,05	40,64
PJQSACM 125	12,5	15,91	42,96

COLOURS



ACM - Polished stainless steel AISI 316LL



BRUSHED STAINLESS STEEL AISI 316LL/1.4404-V4A with protective film

bar length 2,7 LM - Pack 20 Pcs - 54 lm - 8/10 mm



Article	H mm	€/lm	€/Pc
PJQSACMS 10	10	19,56	52,81
PJQSACMS 125	12,5	20,68	55,84

COLOURS



ACMS - Brushed stainless steel AISI 316LL

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

PJQSACM 08
scale 1:1



PJQS... 10
scale 1:1



PJQS... 125
scale 1:1



INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

STAINLESS STEEL AISI 316LL

CAPSULES and END CAPS - POLISHED STAINLESS STEEL AISI 316LL/1.4404

Article	H mm	€/Pc
CPJQSACM .../1	08/10/12,5	21,31
TPJQSACM .../1	08/10/12,5	3,94

Choose the desired height

Ex.: 10 mm capsule in 1 Pcs PACMk - CPJQSACM 10/1

CAPSULES and END CAPS - BRUSHED STAINLESS STEEL AISI 316LL/1.4404

Article	H mm	€/Pc
CPJQSACMS .../1	10/125	21,31
TPJQSACMS .../1	10/125	3,94

Choose the desired height

Ex.: 10 mm capsule in 1 Pcs PACMk - CPJQSACMS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	08/10/125	3,08



END CAP



TPJQSACM .../1



CAPSULE

CPJQSACM .../1



JOINT

GIJQ ...





PROJOLLY SQUARE is a square corner bead profile in chromed brass or antique brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor and wall coverings. Its particular section and elegance and the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

CHROMED BRASS, BRUSHED AND ANTIQUE BRASS




CHROMED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQSOC 045	4,5	21,48	58,00
PJQSOC 06	6	24,50	66,15
PJQSOC 08	8	28,97	78,22
PJQSOC 10	10	30,93	83,51
PJQSOC 125	12,5	32,06	86,56



BRUSHED BRASS thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQSOS 06	6	16,60	44,82
PJQSOS 10	10	18,14	48,98
PJQSOS 125	12,5	20,12	54,32

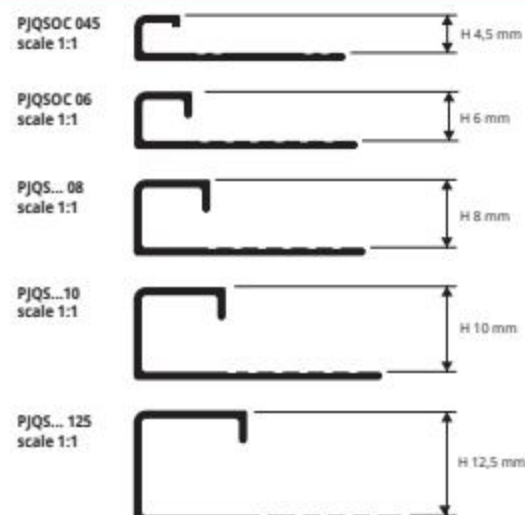

ANTIQUÉ BRASS thermo Packed bar length 2,7 lm
Pack 20 Pcs - 54 lm (PJQSOS 125 - Pack 10 Pcs)

Article	H mm	€/lm	€/Pc
PJQSOS 08	8	36,59	98,79
PJQSOS 10	10	39,74	107,30
PJQSOS 125	12,5	41,93	113,21


COLOURS



INSTRUCTIONS FOR LAYING

1. Choose "PROJOLLY SQUARE" according to the tile thickness.
2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

EXAMPLES OF LAYING

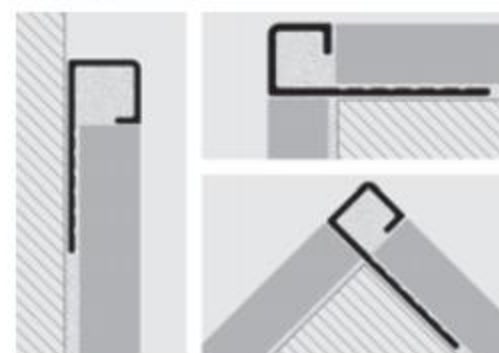

CAPSULES, END CAPS and THREE-WAYS JOINTS

CHROMED BRASS, BRUSHED AND ANTIQUE BRASS - PLASTIC

CAPSULES and END CAPS - CHROMED BRASS

Article	H mm	€/Pc
CPJQSOC .../1	045/06/08/10/125	17,53
TPJQSOC .../1	045/06/08/10/125	4,38

Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSOS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/125	3,08

CAPSULES and END CAPS - ANTIQUE BRASS

Article	H mm	€/Pc
CPJQSOS .../1	08/10/125	22,58
TPJQSOS .../1	08/10/125	4,38

Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSOS 10/1

CAPSULES and END CAPS - BRUSHED BRASS

Article	H mm	€/Pc
CPJQSOS .../1	06/10/125	23,00
TPJQSOS .../1	06/10/125	4,38


Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSOS 10/1



PROJOLLY SQUARE

ANODIZED ALUMINIUM

PROJOLLY SQUARE is a square corner bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability in numerous finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

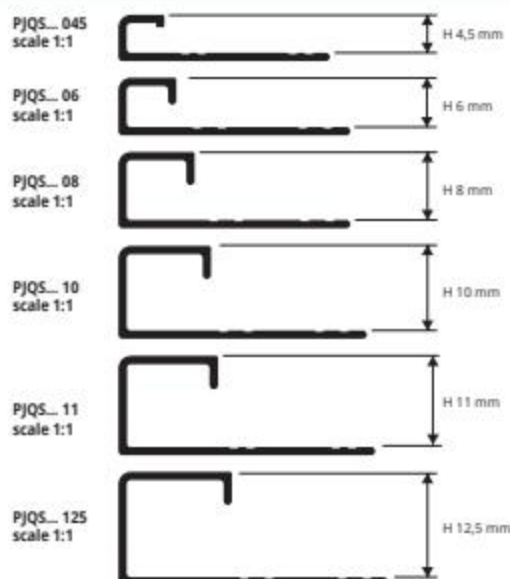

ANODIZED ALUMINIUM thermo Packed (silver-gold-copper-titanium)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSAA 045	4,5	5,71	15,42
PJQSAA 06	6	5,81	15,69
PJQSAA 08	8	5,85	15,80
PJQSAA 10	10	6,28	16,96
PJQSAA 11	11	6,79	18,33
PJQSAA 125	12,5	7,18	19,39
PJQSAO 10	10	7,25	19,58
PJQSAO 125	12,5	8,01	21,63
PJQSAR 08	8	8,01	21,63
PJQSAR 10	10	8,43	22,76
PJQSAR 125	12,5	8,99	24,27
PJQSAT 045	4,5	6,09	16,44
PJQSAT 06	6	6,43	17,36
PJQSAT 08	8	6,71	18,12
PJQSAT 10	10	7,25	19,58
PJQSAT 11	11	7,66	20,68
PJQSAT 125	12,5	8,01	21,63
PJQSAB 10	10	8,49	22,92
PJQSAB 125	12,5	9,69	26,16



ANODIZED ALUMINIUM thermo Packed (black-grey gun)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSNEO 06	6	7,74	20,90
PJQSNEO 08	8	8,01	21,63
PJQSNEO 10	10	8,43	22,76
PJQSNEO 11	11	8,76	23,65
PJQSNEO 125	12,5	8,99	24,27
PJQSAG 08	8	7,42	20,03
PJQSAG 10	10	7,93	21,41
PJQSAG 125	12,5	8,76	23,65

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

ANODIZED					
AA - Anod. silver alum.	AO - Anod. gold alum.	AR - Anod. copper alum.	AT - Anod. titanium alum.	AB - Anodized bronze alum.	NEO - Anod. black alum.
AG - Anod. grey gun alum.					

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJQSAA .../1	045/06/08/10/11/125	7,04
TPJQSAA .../1	045/06/08/10/11/125	3,32
CPJQSAO .../1	10/125	7,71
TPJQSAO .../1	10/125	3,32
CPJQSAR .../1	08/10/125	7,71
TPJQSAR .../1	08/10/125	3,32
CPJQSAT .../1	045/06/08/10/11/125	7,71
TPJQSAT .../1	045/06/08/10/11/125	3,32
CPJQSNEO .../1	06/08/10/11/125	10,37
TPJQSNEO .../1	06/08/10/11/125	3,32

CPJQSAG .../1	08/10/125	7,71
TPJQSAG .../1	08/10/125	3,32
CPJQSAB 10/1	10	7,71
TPJQSAB 10/1	10	3,32
CPJQSAB 125/1	125	7,71
TPJQSAB 125/1	125	3,32

Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSAA 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08

Choose the desired height
Ex: 8 mm joint in 1 Pcs Pack - GIJQ 08/1



PROJOLLY SQUARE is a square corner bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

POLISHED ALUMINIUM




POLISHED ALUMINIUM thermo Packed (chrome-gold-titanium-copper)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBC 045	4,5	9,49	25,62
PJQSBC 06	6	9,59	25,89
PJQSBC 08	8	9,68	26,14
PJQSBC 10	10	10,64	28,73
PJQSBC 11	11	11,32	30,56
PJQSBC 125	12,5	12,02	32,45
PJQSBO 08	8	9,68	26,14
PJQSBO 10	10	10,64	28,73
PJQSBO 125	12,5	12,02	32,45
PJQSB 06	6	9,59	25,89
PJQSB 08	8	9,68	26,14
PJQSB 10	10	10,64	28,73
PJQSB 125	12,5	12,02	32,45
PJQSBT 08	8	9,68	26,14
PJQSBT 10	10	10,64	28,73
PJQSBT 11	11	11,32	30,56
PJQSBT 125	12,5	12,02	32,45




POLISHED ALUMINIUM thermo Packed (black-grey gun) bar length 2,7 lm -
Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSB 08	8	12,45	33,62
PJQSB 10	10	13,17	35,56
PJQSB 11	11	13,59	36,69
PJQSB 125	12,5	14,05	37,94
PJQSBG 08	8	10,61	28,65
PJQSBG 10	10	11,74	31,70
PJQSBG 125	12,5	13,18	35,59

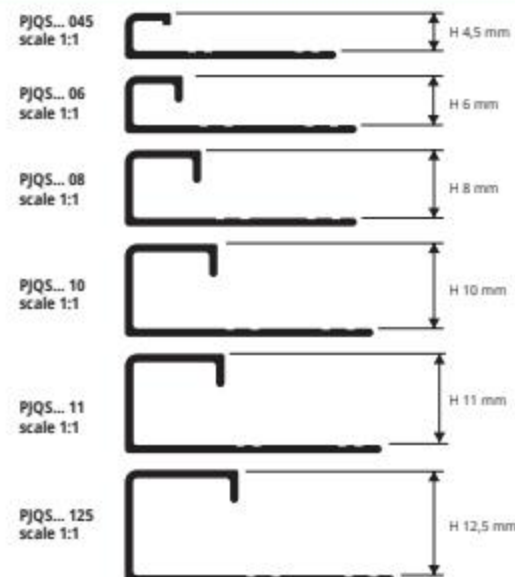

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

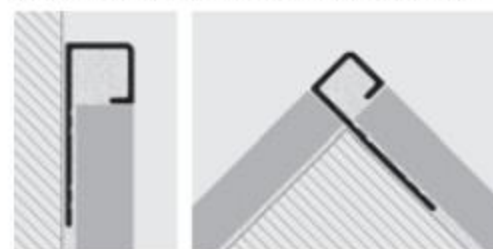

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

POLISHED					
BC - Pol. chrome alum.	BO - Pol. gold alum.	BR - Pol. copper alum.	BT - Pol. titanium alum.	BN - Pol. black alum.	BG - Pol. grey gun alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQSBC .../1	045/06/08/10/11/125	7,04
TPJQSBC .../1	045/06/08/10/11/125	3,32
CPJQSBO .../1	8/10/125	7,71
TPJQSBO .../1	8/10/125	3,32
CPJQSBR .../1	06/08/10/125	7,71
TPJQSBR .../1	06/08/10/125	3,32
CPJQSBT .../1	08/10/125	7,71
TPJQSBT .../1	08/10/125	3,32
CPJQSBN .../1	08/10/11/125	10,37
TPJQSBN .../1	08/10/11/125	3,32

CPJQSBG .../1	08/10/125	7,71
TPJQSBG .../1	08/10/125	3,32

Choose the desired height.
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSBC 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08


Choose the desired height.
Ex: 8 mm joint in 1 Pcs Pack - GIJQ 08/1



PROJOLLY SQUARE

BRUSHED POLISHED ALUMINIUM

PROJOLLY SQUARE is a square corner bead profile in brushed and tiltex aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance, the availability in numerous finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

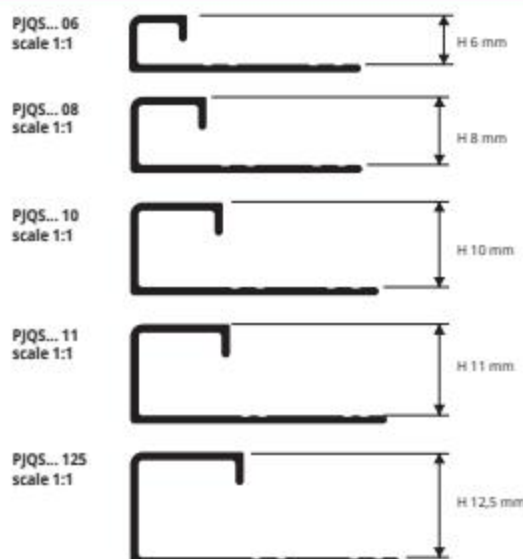

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



BRUSHED POLISHED ALUM. thermo Packed (silver-gold-copper titanium-black)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBS 06	6	10,77	29,08
PJQSBS 08	8	10,90	29,43
PJQSBS 10	10	11,74	31,70
PJQSBS 11	11	12,45	33,62
PJQSBS 125	12,5	13,26	35,80
PJQSRS 08	8	10,90	29,43
PJQSRS 10	10	11,74	31,70
PJQSRS 125	12,5	13,26	35,80
PJQSTS 06	6	10,77	29,08
PJQSTS 08	8	10,90	29,43
PJQSTS 10	10	11,74	31,70
PJQSTS 11	11	12,45	33,62
PJQSTS 125	12,5	13,26	35,80
PJQSBOS 08	8	10,90	29,43
PJQSBOS 10	10	11,74	31,70
PJQSBOS 125	12,5	13,26	35,80
PJQSBRS 10	10	11,74	31,70
PJQSNS 08	8	14,18	38,29
PJQSNS 10	10	15,26	41,20
PJQSNS 11	11	16,20	43,74
PJQSNS 125	12,5	17,24	46,55



BRUSHED POLISHED ALUM. thermo Packed (grey gun)
bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBGS 06	6	11,85	32,00
PJQSBGS 08	8	11,95	32,27
PJQSBGS 10	10	12,88	34,78
PJQSBGS 11	11	13,70	36,99
PJQSBGS 125	12,5	14,63	39,50

COLOURS

BRUSHED POLISHED		
BS - Br. polish, silver alum.	BOS - Br. polish, gold alum.	RS - Br. polish, copper alum.
TS - Br. polish, titanium alum.	NS - Br. polish, black alum.	BRAS - Br. polish, antique bronze alum.
BGS - Br. polish, grey gun alum.		

CAPSULES, END CAPS and THREE-WAYS JOINTS

BRUSHED POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - BRUSHED POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQSBS .../1	06/08/10/11/125	7,71
TPJQSBS .../1	06/08/10/11/125	3,32
CPJQSRS .../1	08/10/125	7,71
TPJQSRS .../1	08/10/125	3,32
CPJQTS .../1	06/08/10/11/125	7,71
TPJQTS .../1	06/08/10/11/125	3,32
CPJQSBOS .../1	08/10/125	7,71
TPJQSBOS .../1	08/10/125	3,32
CPJQSBRAS .../1	10	15,41
TPJQSBRAS .../1	10	3,32
CPJQSNS .../1	08/10/11/125	7,71
TPJQSNS .../1	08/10/11/125	3,32

CPJQSBGS .../1	06/08/10/11/125	7,71
TPJQSBGS .../1	06/08/10/11/125	3,32

Choose the desired height.
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSBS 10/1



JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	045/06/08/10/11/125	3,08

PROJOLLY SQUARE is a square corner bead profile in brushed and tiltex aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY SQUARE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY SQUARE

ANODIZED BRUSHED TILTEX ALUMINIUM




ANOD. BRUSHED TILTEX ALUM. thermo Packed (copper-titanium)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSRX 08	8	13,76	37,15
PJQSRX 10	10	14,72	39,74
PJQSRX 125	12,5	16,29	43,98
PJQSTX 08	8	13,76	37,15
PJQSTX 10	10	14,72	39,74
PJQSTX 11	11	15,48	41,80
PJQSTX 125	12,5	16,29	43,98



ANOD. BRUSHED TILTEX ALUM. thermo Packed (silver)
- bar length 2,7 lm - Pack 40 Pcs - 108 lm (H 12,5 mm - Pack 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJQSBX 08	8	13,76	37,15
PJQSBX 10	10	14,72	39,74
PJQSBX 11	11	15,48	41,80
PJQSBX 125	12,5	16,29	43,98

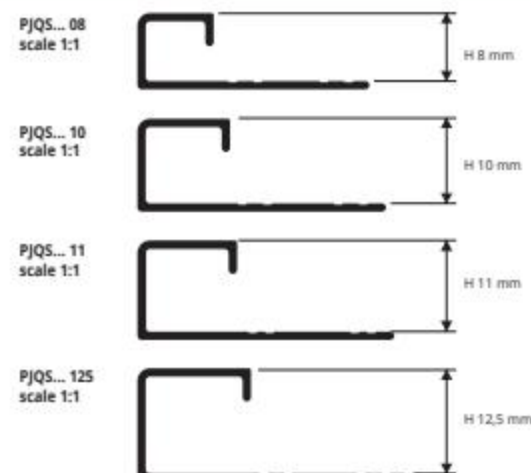

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

ANOD. BRUSHED TILTEX		
BX - Silver TILTEX	RX - Copper TILTEX	TX - Titanium TILTEX

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED BRUSHED TILTEX ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED BRUSHED TILTEX ALUMINIUM

Article	H mm	€/Pc
CPJQSBX .../1	08/10/11/125	9,99
TPJQSBX .../1	08/10/11/125	3,32
CPJQSRX .../1	08/10/125	9,99
TPJQSRX .../1	08/10/125	3,32
CPJQSTX .../1	08/10/11/125	9,99
TPJQSTX .../1	08/10/11/125	3,32

Choose the desired height
Ex: 10 mm capsule in 1 Pcs Pack - CPJQSBX 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	08/10/11/125	3,08




PROJOLLY SQUARE


ALUMINIUM STONE LINE, VARNISHED

PROJOLLY SQUARE is a corner bead profile in powder coated aluminum that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability of several finishes and special pieces such as internal and external corners, junctions and end caps make **PROJOLLY SQUARE** an elegant and much-sought after profile.

NEWS
KALEIDOS

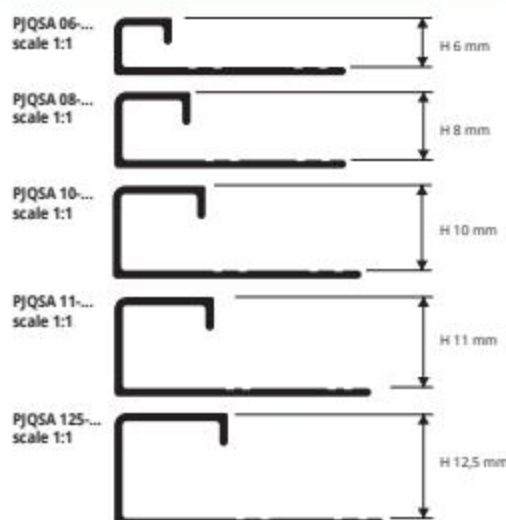

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

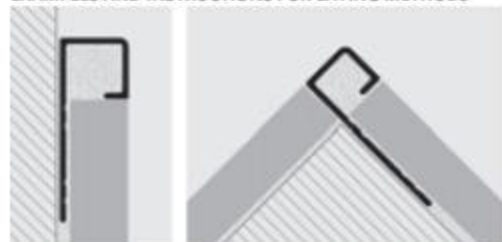

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



STONE LINE thermo Packed
bar length 2,7 lm - Pack 20 Pcs-54 lm

Article	H mm	€/lm	€/Pc
PJQSA 06-SL...	6	9,40	25,38
PJQSA 08-SL...	8	9,75	26,33
PJQSA 10-SL...	10	10,09	27,24
PJQSA 10-SL19	10	10,09	27,24
PJQSA 10-SL20	10	10,09	27,24
PJQSA 10-SL21	10	10,09	27,24
PJQSA 11-SL...	11	10,42	28,13
PJQSA 125-SL...	12,5	10,76	29,05



VARNISHED ALUMINIUM thermo Packed
bar length 2,7 lm - Pack 20 Pcs - 54 lm (white colour 40 Pcs-108 lm)

Article	H mm	€/lm	€/Pc
PJQSA 08-01	8	7,06	19,06
PJQSA 08-11	8	7,06	19,06
PJQSA 10-...	10	7,59	20,49
PJQSA 125-01	12,5	8,27	22,33
PJQSA 125-0106	12,5	8,27	22,33
PJQSA 125-11	12,5	8,27	22,33

ALUMINIUM EASY LINE
bar length 2,7 lm - Pack 20 Pcs-54 lm

Article	H mm	€/lm	€/Pc
PJQSA 10-EYP...	10	7,59	20,49
PJQSA 10-EY...	10	8,79	23,73

COLOURS

VARNISHED				
01 - White varnished aluminium (9016)	0106 - White ivory varnished aluminium (9001)	02 - Light grey varnished aluminium (7035)	11 - Black varnished aluminium (9005)	0211 - Varnished quartz grey alum. (7039)

KALEIDOS

STONE LINE						
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone crystal gray	SL07 - Stone anthracite
SL08 - Stone antiradark	SL09 - Stone bronze	SL10 - Stone corten	SL12 - Stone black	SL13 - Stone oyster grey	SL14 - Stone taupe grey	SL15 - Stone grey smoke
SL16 - Stone grey gun	SL17 - Stone tobacco	SL18 - Stone white cement				
STONE LINE - ONLY IN H10						
SL19 - Stone Sahara	SL20 - Stone Cement Grey	SL21 - Blue Grey				
EASY LINE						
EYP01 - MATT white varnished (RAL 9016)	EYP11 - MATT black varnished					
EY151 - EASY Hazel Brown	EY006 - EASY Light Grey	EY007 - EASY Beige				
EY008 - EASY Dark Grey	EY109 - EASY Warm Grey	EY110 - EASY Dark Beige				

CAPSULES, END CAPS and THREE-WAYS JOINTS

ALUMINIUM STONE LINE AND VARNISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - STONE LINE

Article	H mm	€/Pc
CPJQSA ...-SL.../1	06/08/10/11/12,5	8,26
TPJQSA ...-SL.../1	06/08/10/11/12,5	5,48
CPJQSA 10-SL19/1	10	8,26
TPJQSA 10-SL19/1	10	5,48
CPJQSA 10-SL20/1	10	8,26
TPJQSA 10-SL20/1	10	5,48
CPJQSA 10-SL21/1	10	8,26
TPJQSA 10-SL21/1	10	5,48

Choose the desired height
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSA 10-SL01/1

CAPSULES and END CAPS - VARNISHED

Article	H mm	€/Pc
CPJQSA 08-01/1	08	7,19
TPJQSA 08-01/1	08	3,32
CPJQSA 08-11/1	08	7,19
TPJQSA 08-11/1	08	3,32
CPJQSA 10-.../1	10	7,19
TPJQSA 10-.../1	10	3,32
CPJQSA 125-01/1	125	7,19
TPJQSA 125-01/1	125	3,32
CPJQSA 125-0106/1	125	7,19
TPJQSA 125-0106/1	125	3,32
CPJQSA 125-11/1	125	7,19
TPJQSA 125-11/1	125	3,32

Choose the desired height
Ex.: 10 mm capsule in 1 Pcs Pack - CPJQSA 10-03/1

CAPSULES and END CAPS - EASY LINE

Article	H mm	€/Pc
CPJQSA 10-EYP.../1	10	7,19
TPJQSA 10-EYP.../1	10	3,32
CPJQSA 10-EY.../1	10	7,19
TPJQSA 10-EY.../1	10	3,32

Choose the desired height
Ex.: 8 mm joint in 1 Pcs Pack
CPJQSA 10-EY001/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQ ...	06/08/10/11/125	3,08

JOINT



GIJQ ...

CAPSULE



CPJQSA .../1

END CAP



TPJQSA .../1

PROJOLLY SQUARE is a square corner bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section, the availability in different colours also on demand and special pieces such as internal and external corners make **PROJOLLY SQUARE** a much sought-after profile. It can be easily matched with the wall covering and that allows an elegant workmanlike application.

PROJOLLY SQUARE

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN



NON-TOXIC SHOCKPROOF VINYL RESIN


bar length 2,7 lm - Pack 20 Pcs - 54 lm (white colour 40 Pcs-108 lm)

Article	H mm	€/lm	€/Pc
PJQ 06-01	6	1,36	3,67
PJQ 06-02	6	1,36	3,67
PJQ 08-01	8	1,42	3,83
PJQ 08-02	8	1,42	3,83
PJQ 08-06	8	1,42	3,83
PJQ 08-11	8	1,42	3,83
PJQ 08-12	8	1,42	3,83
PJQ 08-17	8	1,42	3,83
PJQ 08-18	8	1,42	3,83
PJQ 10-01	10	1,55	4,19
PJQ 10-0106	10	1,55	4,19
PJQ 10-03	10	1,55	4,19
PJQ 10-05	10	1,55	4,19
PJQ 10-06	10	1,55	4,19
PJQ 10-11	10	1,55	4,19
PJQ 10-12	10	1,55	4,19
PJQ 10-17	10	1,55	4,19
PJQ 10-18	10	1,55	4,19
PJQ 125-01	12,5	1,68	4,54
PJQ 125-05	12,5	1,68	4,54
PJQ 125-12	12,5	1,68	4,54
PJQ 125-17	12,5	1,68	4,54

The code of the selected colour must be added to the article code.
E.g.: PJQ 08-... (chosen colour white) PJQ 08-01.

COLOURS

01 - White	0106 - White ivory	02 - Light grey
03 - Cement grey	05 - Dark beige	06 - Ivory
11 - Black	12 - Silver	17 - Bahama beige
18 - Grey		

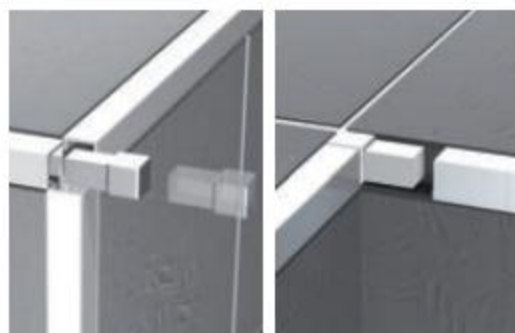

CAPSULES AND THREE-WAYS JOINTS

POLYPROPYLENE / POLYETHYLENE UV RESISTANT

Article	H mm	€/Pack 5 Pcs
CPJQ 06-01/5	6	6,83
IPJQ 06-01/5	6	6,83
CPJQ 06-02/5	6	6,83
IPJQ 06-02/5	6	6,83
CPJQ 08-01/5	8	6,95
IPJQ 08-01/5	8	6,95
CPJQ 08-02/5	8	6,95
IPJQ 08-02/5	8	6,95
CPJQ 08-06/5	8	6,95
IPJQ 08-06/5	8	6,95
CPJQ 08-11/5	8	6,95
IPJQ 08-11/5	8	6,95
CPJQ 08-12/5	8	6,95
IPJQ 08-12/5	8	6,95
CPJQ 08-17/5	8	6,95
IPJQ 08-17/5	8	6,95
CPJQ 08-18/5	8	6,95
IPJQ 08-18/5	8	6,95
CPJQ 10-01/5	10	7,12
IPJQ 10-01/5	10	7,12
CPJQ 10-0106/5	10	7,12
IPJQ 10-0106/5	10	7,12
CPJQ 10-03/5	10	7,12
IPJQ 10-03/5	10	7,12
CPJQ 10-05/5	10	7,12
IPJQ 10-05/5	10	7,12
CPJQ 10-06/5	10	7,12
IPJQ 10-06/5	10	7,12
CPJQ 10-11/5	10	7,12
IPJQ 10-11/5	10	7,12
CPJQ 10-12/5	10	7,12
IPJQ 10-12/5	10	7,12
CPJQ 10-17/5	10	7,12
IPJQ 10-17/5	10	7,12
CPJQ 10-18/5	10	7,12
IPJQ 10-18/5	10	7,12
CPJQ 125-05/5	125	8,01
IPJQ 125-05/5	125	8,01
CPJQ 125-12/5	125	8,01
IPJQ 125-12/5	125	8,01
CPJQ 125-17/5	125	8,01
IPJQ 125-17/5	125	8,01

The code of the selected colour must be added to the article code.
E.g.: CPJQ 08-.../5 (chosen colour white) CPJQ 08-01/5.
IPJQ 08-.../5 (chosen colour white) IPJQ 08-01/5.

PJQ 06-...
scale 1:1



PJQ 08-...
scale 1:1




PJQ 10-...
scale 1:1



PJQ 125-...
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

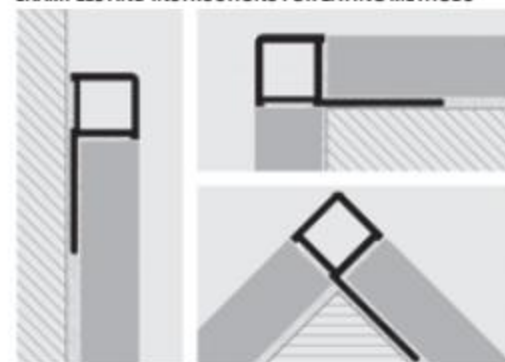

1. Choose "PROJOLLY SQUARE" according to the tile thickness and desired colour. 2. Cut "PROJOLLY SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY SQUARE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

INTERNAL CAPSULES



IPJQ .../5

EXTERNAL CAPSULES




CPJQ .../5

PROJOLLY QUART

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY QUART is a quarter-circle rounded bead profile in polished, super polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

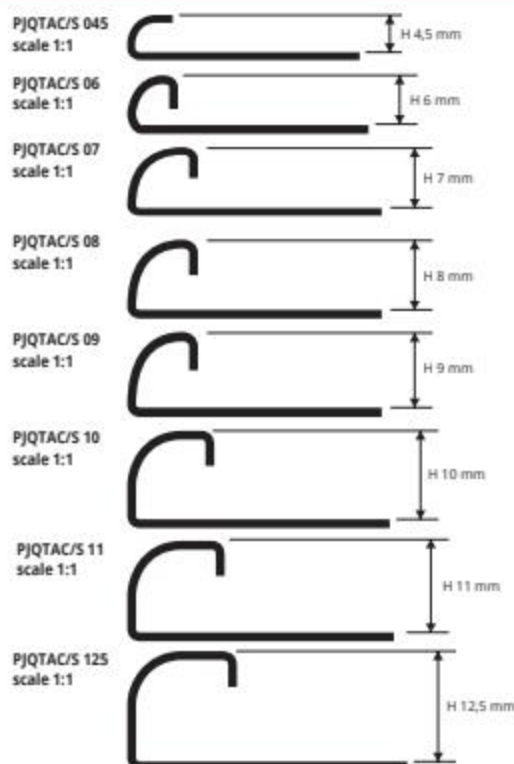

EXAMPLES FOR LAYING METHODS



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm (H 4,5 mm - 108 lm) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJTAC 045	4,5	10,93	29,51
PJTAC 06	6	11,91	32,16
PJTAC 07	7	12,31	33,24
PJTAC 08	8	12,70	34,29
PJTAC 09	9	13,18	35,59
PJTAC 10	10	13,68	36,94
PJTAC 11	11	14,21	38,37
PJTAC 125	12,5	14,67	39,61

SUPER POLISHED STAINLESS STEEL AISI 304/1.4301-V2A thermo packed
bar length 2,7 lm - pack. 20 Pcs 54 lm (H 4,5 mm - 108 ml) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJTACML 08	8	15,66	42,28
PJTACML 10	10	16,64	44,93
PJTACML 125	12,5	17,56	47,41



Brushed STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm (H 4,5 mm - 108 lm) - 10/10 mm

Article	H mm	€/lm	€/Pc
PJTACS 045	4,5	13,75	37,13
PJTACS 06	6	14,27	38,53
PJTACS 07	7	14,74	39,80
PJTACS 08	8	15,12	40,82
PJTACS 09	9	15,67	42,31
PJTACS 10	10	16,18	43,69
PJTACS 11	11	16,66	44,98
PJTACS 125	12,5	17,04	46,01

COLOURS

AC - Polished stainless st. AISI 304/1.4301-V2A	ACML - Super polished stainless st. AISI 304/1.4301-V2A	ACS - Brushed stainless st. AISI 304/1.4301-V2A

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS ST. AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJTAC 045/1	4,5	15,76
IPJTAC 045/1	4,5	15,76
CPJTAC 06/1	6	16,77
IPJTAC 06/1	6	16,77
CPJTAC 07/1	7	16,92
IPJTAC 07/1	7	16,92
CPJTAC 08/1	8	17,07
IPJTAC 08/1	8	17,07
CPJTAC 09/1	9	17,25
IPJTAC 09/1	9	17,25
CPJTAC 10/1	10	17,43
IPJTAC 10/1	10	17,43
CPJTAC 11/1	11	18,10
IPJTAC 11/1	11	18,10
CPJTAC 125/1	12,5	18,78
IPJTAC 125/1	12,5	18,78
TPJTAC 045-06-08-10-11-125/1		3,32

CAPSULES and END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJTACS 045/1	4,5	18,10
IPJTACS 045/1	4,5	18,10
CPJTACS 06/1	6	18,44
IPJTACS 06/1	6	18,44
CPJTACS 07/1	7	18,64
IPJTACS 07/1	7	18,64
CPJTACS 08/1	8	18,78
IPJTACS 08/1	8	18,78
CPJTACS 09/1	9	18,96
IPJTACS 09/1	9	18,96
CPJTACS 10/1	10	19,11
IPJTACS 10/1	10	19,11
CPJTACS 11/1	11	19,62
IPJTACS 11/1	11	19,62
CPJTACS 125/1	12,5	20,12
IPJTACS 125/1	12,5	20,12
TPJTACS 045-06-08-10-11-125/1		3,32

CAPSULES - SUPER POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJTACML 08/1	8	18,78
IPJTACML 08/1	8	18,78
CPJTACML 10/1	10	19,11
IPJTACML 10/1	10	19,11
CPJTACML 125/1	12,5	20,12
IPJTACML 125/1	12,5	20,12

EXTERNAL CAPSULES
CPJT... /1




END CAPS
TPJT... /1



INTERNAL CAPSULES
IPJT... /1



JOINT
GIJT...

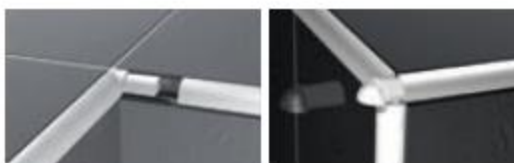

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJT 045	4,5	3,08
GIJT 06	6	3,08
GIJT 07	7	3,08
GIJT 08	8	3,08
GIJT 09	9	3,08
GIJT 10	10	3,08
GIJT 11	11	3,08
GIJT 125	12,5	3,08

PROJOLLY QUART is a quarter-circle rounded bead profile in natural, antique brass, polished varnished and chromed brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like (only natural and chromed version) a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY QUART

NATURAL, POLISHED VARNISHED, CHROMED AND ANTIQUE BRASS




NATURAL BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTON 08	8	18,03	48,68
PJQTON 10	10	19,06	51,46
PJQTON 125	12,5	20,55	55,49



ANTIQU BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTOB 10	10	39,14	105,68
PJQTOB 125	12,5	42,23	114,02

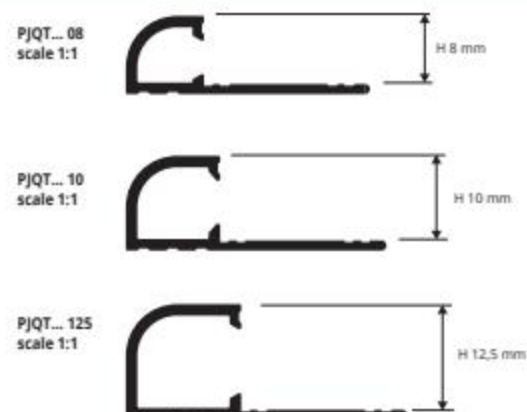

SUPER POLISHED VARNISHED CHROMED BRASS
thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm


Article	H mm	€/lm	€/Pc
PJQTOC 10	10	30,39	82,05
PJQTOC 125	12,5	32,96	88,99



POLISHED VARNISHED BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTOL 10	10	26,27	70,93
PJQTOL 125	12,5	29,61	79,95

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

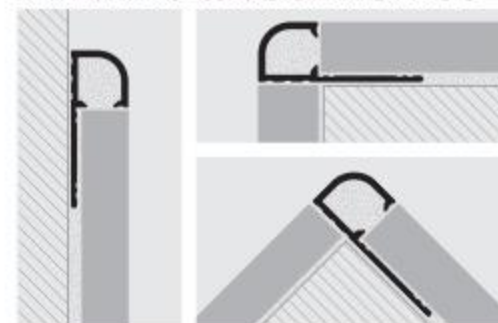

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS



Polished varnished brass is not suitable for frequent pedestrian traffic places and/or scratching.

CAPSULES, END CAPS and THREE-WAYS JOINTS

NATURAL, POLISHED, ANTIQUE, CHROMED BRASS / PLASTIC

CAPSULES & END CAPS - CHROMED BRASS

Article	H mm	€/Pc
CPJQTOC .../1	10/125	23,00
IPJQTOC .../1	10/125	26,00
TPJQTOC .../1	10/125	3,75

Choose the desired height:

E.g.: CPJQTOC.../1 (Pack. 1 pz)

CAPSULES & END CAPS - ANTIQUE BRASS

Article	H mm	€/Pc
CPJQTOB .../1	10/125	31,50
IPJQTOB .../1	10/125	35,50

Choose the desired height:

E.g.: CPJQTOB .../1 (Pack. 1 pz)

CAPSULES & END CAPS - POLISHED BRASS

Article	H mm	€/Pc
CPJQTOL .../1	10/125	23,00
IPJQTOL .../1	10/125	26,00

Choose the desired height:

E.g.: CPJQTOL.../1 (Pack. 1 pz)

CAPSULES & END CAPS - NATURAL BRASS

Article	H mm	€/Pc
CPJQTON .../1	08/10/125	14,85
IPJQTON .../1	08/10/125	14,85

Choose the desired height:

E.g.: CPJQTON.../1 (Pack. 1 pz)

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT ...	06/08/10/125	3,08

EXTERNAL CAPSULES

CPJQT.../...



END CAP

TPJQT.../...



INTERNAL CAPSULES

IPJQT.../...



JOINT

GIJQT...





PROJOLLY QUART is a quarter-circle rounded bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance, the special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY QUART

ANODIZED ALUMINIUM



ANODIZED ALUMINIUM (silver-titanium-gold-antique bronze) thermo packed bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTAA 06	6	5,40	14,58
PJQTAA 08	8	5,74	15,50
PJQTAA 10	10	6,19	16,71
PJQTAA 11	11	6,88	18,58
PJQTAA 125	12,5	6,98	18,85
PJQTAA 15	15	7,80	21,06
PJQTAO 10	10	6,19	16,71
PJQTAO 125	12,5	6,98	18,85
PJQTAT 08	8	6,33	17,09
PJQTAT 10	10	6,88	18,58
PJQTAT 125	12,5	7,75	20,93
PJQTBRA 10	10	10,99	29,67



ANODIZED ALUMINIUM (black-grey gun) thermo packed bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTNEO 10	10	8,29	22,38
PJQTNEO 11	11	9,22	24,89
PJQTNEO 125	12,5	9,37	25,30
PJQTAG 10	10	7,52	20,30

PJQT... 06
scale 1:1



PJQT... 08
scale 1:1



PJQT... 10
scale 1:1




AVAILABLE PJQT... 11 - H 11MM

PJQT... 125
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

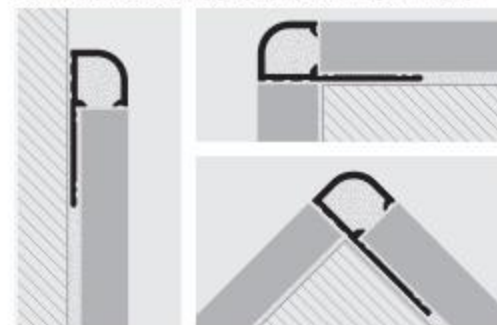

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

ANODIZED					
AA - Anodized silver alum.	BRA - Anod. antique bronze alum.	AO - Anod. gold alum.	AT - Anod. titanium alum.	NEO - Anod. black alum.	AG - Anod. grey gun alum.

CAPSULES, END CAPS and THREE-WAYS JOINTS

ANODIZED, POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJQTAA .../1	06/08/10/11/125/15	6,85
IPJQTAA .../1	06/08/10/11/125/15	6,85
TPJQTAA .../1	06/08/10/11/125/15	3,32
CPJQTAO .../1	10/125	6,85
IPJQTAO .../1	10/125	6,85
TPJQTAO .../1	10/125	3,32
CPJQTAT .../1	08/10/125	7,38
IPJQTAT .../1	08/10/125	7,38
TPJQTAT .../1	08/10/125	3,32
CPJQTBRA .../1	10	7,38
IPJQTBRA .../1	10	7,38
TPJQTBRA .../1	10	3,32

Choose the desired height:
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQTAA 10/1


CAPSULES and END CAPS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJQTNEO .../1	10/11/125	9,21
IPJQTNEO .../1	10/11/125	9,21
TPJQTNEO .../1	10/11/125	3,32
CPJQTAG .../1	10	7,38
IPJQTAG .../1	10	7,38
TPJQTAG .../1	10	3,32

Choose the desired height:
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQTAA 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	06/08/10/11/125/15	3,08

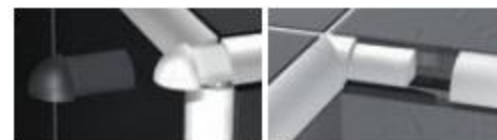

EXTERNAL CAPSULES
CPJQT... .../1

INTERNAL CAPSULES
IPJQT... .../1



END CAP
TPJQT... .../1




JOINT
GIJQT...




PROJOLLY QUART

POLISHED ALUMINIUM

PROJOLLY QUART is a quarter-circle rounded bead profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

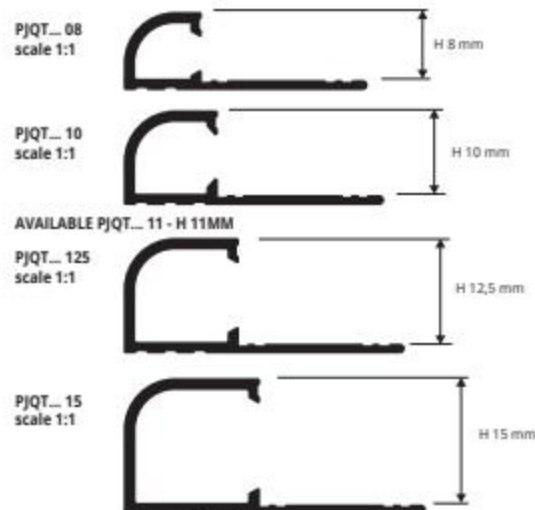

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

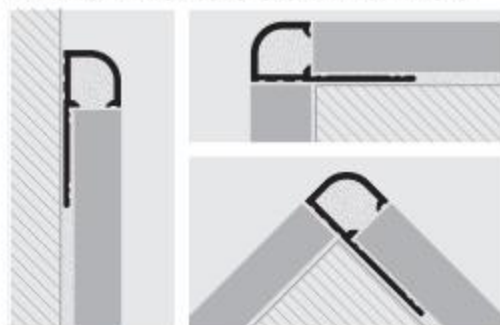

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED ALUMINIUM (chrome-titanium-gold) thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 15 mm - 54 lm) - (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBC 08	8	9,47	25,57
PJQTBC 10	10	10,51	28,38
PJQTBC 11	11	11,17	30,16
PJQTBC 125	12,5	11,87	32,05
PJQTBC 15	15	12,34	33,32
PJQTBO 08	8	9,47	25,57
PJQTBO 10	10	10,51	28,38
PJQTBO 125	12,5	11,87	32,05
PJQBT 10	10	10,51	28,38



POLISHED ALUMINIUM (chrome-titanium-gold) thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 15 mm - 54 lm) - (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTN 08	8	12,26	33,10
PJQTN 10	10	12,88	34,78
PJQTBG 10	10	11,54	31,16

COLOURS

POLISHED				
BC - Polished chrome alum.	BO - Polished gold alum.	BT - Polished titanium alum.	BN - Polished black alum.	ON DEMAND
BG - Polished grey alum.				

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM / PLASTIC

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBC .../1	08/10/11/125/15	6,85
IPJQTBC .../1	08/10/11/125/15	6,85
TPJQTBC .../1	08/10/11/125/15	3,32
CPJQTBO .../1	08/10/125	6,85
IPJQTBO .../1	08/10/125	6,85
TPJQTBO .../1	08/10/125	3,32
CPJQBT 10/1	10	7,38
IPJQBT 10/1	10	7,38
TPJQBT 10/1	10	3,32

Choose the desired height:
Ex.: 4,5 mm capsule in 1 Pcs Pack - CPJQTBC 10/1

CAPSULES and END CAPS - POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTN 08/1	08	6,85
IPJQTN 08/1	08	6,85
TPJQTN 08/1	08	3,32
CPJQTN 10/1	10	6,85
IPJQTN 10/1	10	6,85
TPJQTN 10/1	10	3,32
CPJQTBG 10/1	10	6,85
IPJQTBG 10/1	10	6,85
TPJQTBG 10/1	10	3,32

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	06/08/10/11/125/15	3,08



EXTERNAL CAPSULES
CPJQT.../1



END CAP
TPJQT.../1



INTERNAL CAPSULES
IPJQT.../1



JOINT
GIJQT...



PROJOLLY QUART is a quarter-circle rounded bead profile in brushed and varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and (only brushed version) like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY QUART** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY QUART

BRUSHED POLISHED, BRUSHED AND VARNISHED ALUMINIUM



BRUSHED POLISHED ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)

Article	H mm	€/lm	€/Pc
PJQTBS 08	8	10,90	29,43
PJQTBS 10	10	11,87	32,05
PJQTBS 125	12,5	13,26	35,80
PJQTBS 10	10	11,87	32,05
PJQTBS 125	12,5	13,26	35,80
PJQTTS 125	12,5	13,24	35,75
PJQTBS 10	10	13,08	35,32

BRUSHED ANTIQUE BRONZE ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm (H 12,5 mm, 15 mm - pack. 20 Pcs)


Article	H mm	€/lm	€/Pc
PJQTBAS 10	10	10,99	29,67
PJQTBAS 125	12,5	11,96	32,29

BRAS - ITEM AVAILABLE WHILE STOCKS LAST.



VARNISHED ALUMINIUM thermo packed - bar length 2,7 M
pack. 20 Pcs - 54 lm (white colour 40 Pcs - 108 lm)

Article	H mm	€/lm	€/Pc
PJQTA 06-01	6	6,21	16,77
PJQTA 08-01	8	6,91	18,66
PJQTA 10-01	10	7,48	20,20
PJQTA 11-01	11	7,75	20,93
PJQTA 125-01	12,5	8,01	21,63

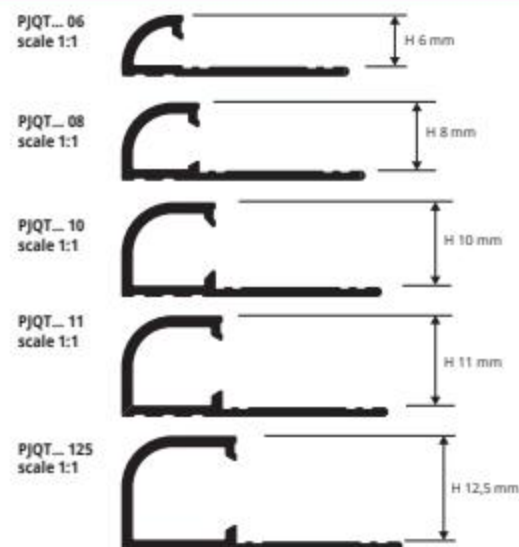

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

BRUSHED					VARNISHED
BS - Brushed polished silver aluminium	BRAS - Brushed antique bronze alum.	TS - Brushed Titanium alum.	BOS - Brushed gold alum.	BGS - Brushed Polished Grey gun	01 - Varnished white alum. (9016)

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED BRUSHED, VARNISHED ALUMINIUM/ PLASTIC

CAPSULES & CAPS - POLISHED BRUSHED ALUMINIUM

Article	H mm	€/Pc
CPJQTBS .../1	08/10/125	7,71
IPJQTBS .../1	08/10/125	7,71
TPJQTBS .../1	08/10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32
CPJQTBS .../1	10/125	7,71
IPJQTBS .../1	10/125	7,71
TPJQTBS .../1	10/125	3,32

Choose the desired height:

Ex: 4,5 mm capsule in 1 Pcs Pack - CPJQTBS 10/1

CAPSULES & CAP - VARNISHED ALUMINIUM

Article	H mm	€/Pc
CPJQTA ...-01/1	06/08/10/11/125	7,02
IPJQTA ...-01/1	06/08/10/11/125	7,02
TPJQTA ...-01/1	06/08/10/11/125	3,05

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	06/08/10/11/125	3,08

EXTERNAL CAPSULES



CPJQT... /1

INTERNAL CAPSULES



IPJQT... /1

END CAP



TPJQT... /1

JOINT



GIJQT...





PROJOLLY QUART

STONE LINE ALUMINIUM

NEWS
KALEIDOS


PROJOLLY QUART is a quarter-circle rounded bead profile in powder coated aluminum that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability of numerous finishes Kaleidos and special pieces such as internal and external corners, junctions and end caps make **PROJOLLY QUART** an elegant and much-sought after profile.



STONE LINE ALUMINIUM thermo packed
bar length 2,7 M - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJQTA 08-SL...	8	9,07	24,49
PJQTA 10-SL...	10	9,40	25,38
PJQTA 125-SL...	12,5	10,09	27,24


The code of the selected colour must be added to the article code.
E.g.: PJQTA 08... (chosen colour stone white) PJQTA 08-SL01.

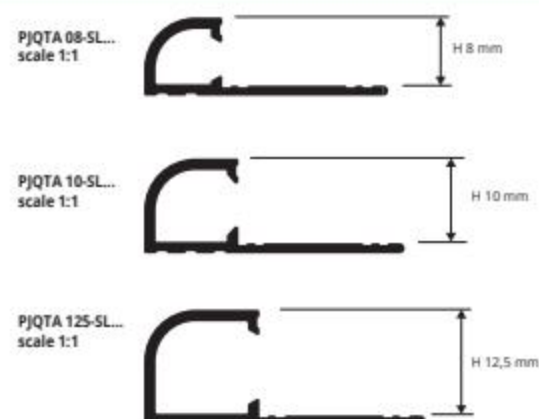

COLOURS KALEIDOS

STONE LINE						
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone cristal gray	SL07 - Stone antragrav
SL08 - Stone antradrak	SL09 - Stone bronze	SL10 - Stone corten	SL12 - Stone black	SL13 - Stone oyster grey	SL14 - Stone taupe grey	SL15 - Stone grey smoke
SL16 - Stone grey gun	SL17 - Stone tobacco	SL18 - Stone white cement				

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

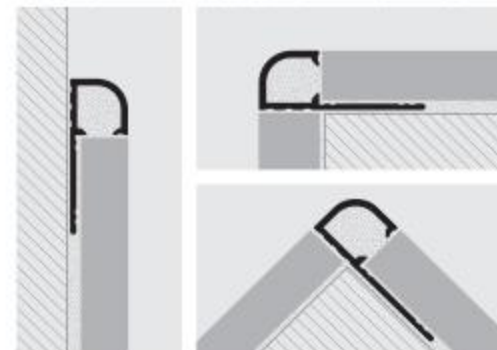

1. Choose "PROJOLLY QUART" according to the tile thickness and desired finish. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

STONE LINE ALUMINIUM / PLASTIC


JOINTS - PLASTIC

Article	H mm	€/Pc
GIJQT...	08/10/125	3,08

CAPSULES & CAP - STONE LINE ALUMINIUM

Article	H mm	€/Pc
CPJQTA ...-SL.../1	08/10/125	8,26
IPJQTA ...-SL.../1	08/10/125	8,26
TPJQTA ...-SL.../1	08/10/125	5,47


Choose the desired height:
Ex: 08 mm capsule in 1 Pcs Pack - CPJQTA 08-SL06/1

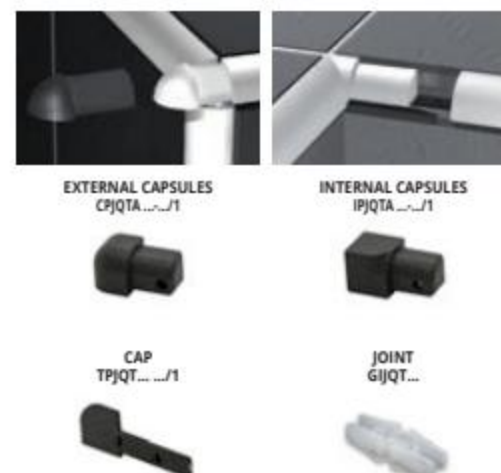

PROJOLLY QUART

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN

PROJOLLY QUART is a quarter-circle rounded bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and special pieces such as internal and external corners make **PROJOLLY QUART** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

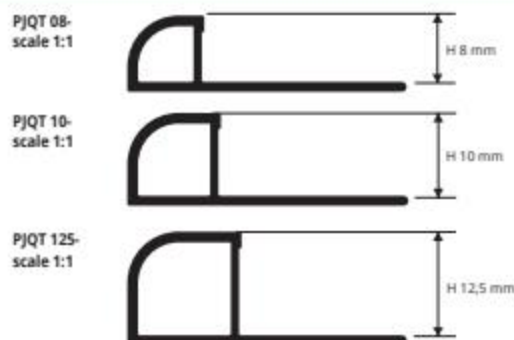

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY QUART" according to the tile thickness and desired colour. 2. Cut "PROJOLLY QUART" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY QUART" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



NON-TOXIC SHOCKPROOF VINYL RESIN

bar length 2,7 lm - pack 54 lm (white colour pack 108 lm)

Article	H mm	€/lm	€/Pc
PJQT 08-01	8	1,42	3,83
PJQT 08-02	8	1,42	3,83
PJQT 08-03	8	1,42	3,83
PJQT 08-17	8	1,42	3,83
PJQT 08-18	8	1,42	3,83
PJQT 10-...	10	1,55	4,19
PJQT 125-01	12,5	1,68	4,54
PJQT 125-02	12,5	1,68	4,54
PJQT 125-03	12,5	1,68	4,54
PJQT 125-06	12,5	1,68	4,54
PJQT 125-11	12,5	1,68	4,54


The code of the selected colour must be added to the article code. E.g.: PJQT 08-... (chosen colour white) PJQT 08-01.

COLOURS

00 - White ice	01 - White	02 - Light grey	03 - Cement grey	05 - Dark beige	06 - Ivory
11 - Black	17 - Bahama beige	18 - Grey			

CAPSULES and THREE-WAYS JOINTS

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

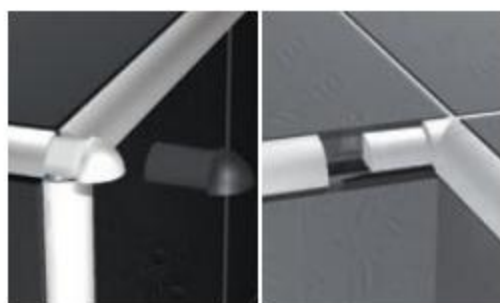

EXTERNAL CAPSULES



CPJQT .../5

INTERNAL CAPSULES



IPJQT .../5

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

Article	H mm	€/Pack. 5 Pcs
CPJQT 08-01/5	8	6,77
IPJQT 08-01/5	8	6,77
CPJQT 08-02/5	8	6,77
IPJQT 08-02/5	8	6,77
CPJQT 08-03/5	8	6,77
IPJQT 08-03/5	8	6,77
CPJQT 08-17/5	8	6,77
IPJQT 08-17/5	8	6,77
CPJQT 08-18/5	8	6,77
IPJQT 08-18/5	8	6,77
CPJQT 10-.../5	10	6,91
IPJQT 10-.../5	10	6,91
CPJQT 125-01/5	12,5	7,17
IPJQT 125-01/5	12,5	7,17
CPJQT 125-02/5	12,5	7,17
IPJQT 125-02/5	12,5	7,17
CPJQT 125-03/5	12,5	7,17
IPJQT 125-03/5	12,5	7,17
CPJQT 125-06/5	12,5	7,17
IPJQT 125-06/5	12,5	7,17
CPJQT 125-11/5	12,5	7,17
IPJQT 125-11/5	12,5	7,17



The code of the selected colour must be added to the article code. E.g.: CPJQT 08-.../5 (chosen colour white) CPJQT 08-01/5.

PROJOLLY is a rounded bead profile in polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

PROJOLLY

POLISHED AND BRUSHED STAINLESS STEEL
AISI 304/1.4301-V2A




POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJAC 06	6	11,85	32,00
PJAC 08	8	12,63	34,10
PJAC 10	10	13,62	36,77
PJAC 11	11	14,19	38,31
PJAC 125	12,5	14,61	39,45
PJAC 15	15	16,30	44,01



BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJACS 06	6	14,20	38,34
PJACS 08	8	15,00	40,50
PJACS 10	10	16,06	43,36
PJACS 11	11	16,59	44,79
PJACS 125	12,5	16,97	45,82
PJACS 15	15	18,67	50,41

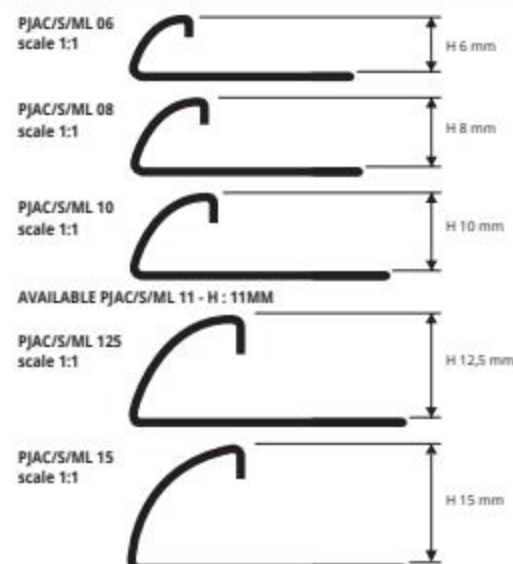

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile, leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

COLOURS



CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED, SUPER POLISHED AND BRUSHED STAINLESS ST. AISI 304/1.4301-V2A / PLASTIC

CAPSULES and END CAPS - POLISHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJAC 06/1	6	16,10
IPJAC 06/1	6	16,10
CPJAC 08/1	8	16,77
IPJAC 08/1	8	16,77
CPJAC 10/1	10	17,43
IPJAC 10/1	10	17,43
CPJAC 11/1	11	18,10
IPJAC 11/1	11	18,10
CPJAC 125/1	12,5	18,78
IPJAC 125/1	12,5	18,78
CPJAC 15/1	15	20,46
IPJAC 15/1	15	20,46
TPJAC 06-08-10-11-125-15-.../1		3,32

Choose the desired height:

E.g.:

CPJAC .../1 (Pack 1 Pcs)

CAPSULES and END CAPS - BRUSHED STAINLESS ST. AISI 304/1.4301-V2A

Article	H mm	€/Pc
CPJACS 06/1	6	16,77
IPJACS 06/1	6	16,77
CPJACS 08/1	8	17,43
IPJACS 08/1	8	17,43
CPJACS 10/1	10	18,44
IPJACS 10/1	10	18,44
CPJACS 11/1	11	19,29
IPJACS 11/1	11	19,29
CPJACS 125/1	12,5	20,12
IPJACS 125/1	12,5	20,12
CPJACS 15/1	15	21,80
IPJACS 15/1	15	21,80
TPJACS 06-08-10-11-125-15-.../1		3,32

Choose the desired height:

E.g.:

CPJACS .../1 (Pack 1 Pcs)

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJAC 06	6	3,08
GIJAC 08	8	3,08
GIJAC 10	10	3,08
GIJAC 11	11	3,08
GIJAC 125	12,5	3,08
GIJAC 15	15	3,08



PROJOLLY

POLISHED STAINLESS STEEL INOX AISI 316LL/1.4404-V4A

PROJOLLY is a rounded bead profile in polished stainless steel INOX AISI 316LL/1.4404-V4A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in three different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical and chemical stresses.

PJACM 06
scale 1:1



PJACM 08
scale 1:1



PJACM 10
scale 1:1



AVAILABLE PJACM 11 - H : 11MM

PJACM 125
scale 1:1



EXAMPLES OF LAYING



1. Choose "PROJOLLY" according to the tile thickness. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A
with protective film

- bar length 2,7 lm - pack 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PJACM 06	6	14,87	40,15
PJACM 08	8	15,99	43,17
PJACM 10	10	17,16	46,33
PJACM 11	11	17,88	48,28
PJACM 125	12,5	18,30	49,41

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

COLOURS



ACM - Polished stainless st.
AISI 316LL

CAPSULES and THREE-WAYS JOINTS

POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A



POLISHED STAINLESS STEEL AISI 316LL/1.4404-V4A

Article	H mm	€/Pc
CPJACM 06/1	6	18,44
IPJACM 06/1	6	18,44
CPJACM 08/1	8	19,11
IPJACM 08/1	8	19,11
CPJACM 10/1	10	20,12
IPJACM 10/1	10	20,12
CPJACM 11/1	11	20,80
IPJACM 11/1	11	20,80
CPJACM 125/1	12,5	21,46
IPJACM 125/1	12,5	21,46

Choose the desired height:
E.g.: CPJACM .../1 (Pack 1 Pcs)

EXTERNAL CAPSULES



CPJACM .../1

INTERNAL CAPSULES




IPJACM .../1



PROJOLLY

ANODIZED ALUMINIUM
SILVER

PROJOLLY is a rounded bead profile in anodized aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

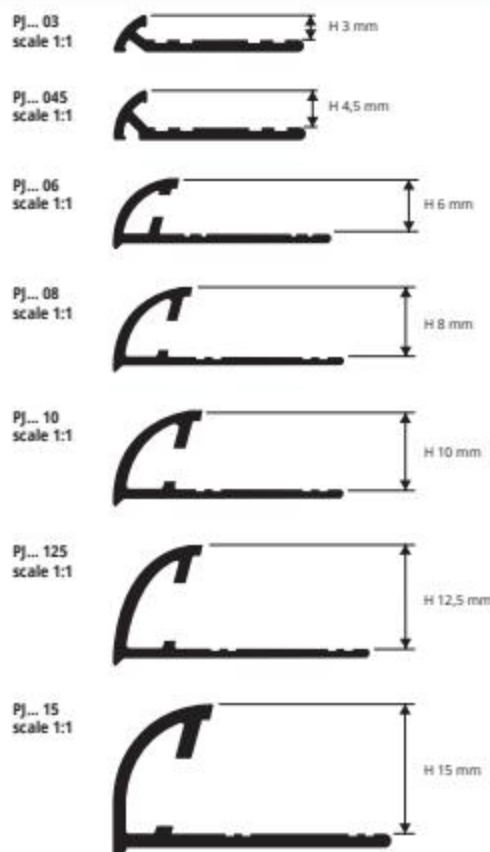


EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS



ANODIZED ALUM. (silver-copper-gold-titanium-black) thermo packed bar length 2,7 lm - pack. 40 Pcs - 108 lm (for H 15 anodized silver alum. pack. 20 Pcs - 54 lm)

Article	H mm	€/lm	€/Pc
PJAA 03	3	4,77	12,88
PJAA 045	4,5	5,04	13,61
PJAA 06	6	5,40	14,58
PJAA 08	8	5,74	15,50
PJAA 10	10	6,19	16,71
PJAA 125	12,5	6,98	18,85
PJAA 15	15	7,80	21,06

CAPSULES, END CAPS and THREE-WAYS JOINTS

Anodized ALUMINIUM / PLASTIC

LEFT CAPSULES ANODIZED ALUMINIUM (silver, copper, titanium and gold)

Article	H mm	€/Pc
CPJAA .../1	06/08/10/125	6,85
CPJAA 15/1	15	7,60
IPJAA .../1	06/08/10/125	6,85
IPJAA 15/1	15	7,96
TPJAA .../1	06/08/10/125/15	3,32

Choose the desired height:
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJAA 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJA ...	06/08/10/125/15	3,08

EXTERNAL CAPSULES



INTERNAL CAPSULES



CAPS



JOINTS



The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDAA 06.

Add "D" to the article code. For example: IPJDAA 06.

B) as an alternative to end-caps (right side).



LEFT CAPSULES

RIGHT CAPSULES

Add "D" to the article code. For example: CPJDAA 06.

PROJOLLY is a rounded bead profile in polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY

POLISHED ALUMINIUM
CHROME



POLISHED ALUMINIUM (chrome-titanium)

thermo packed - bar length 2,7 lm - pack 40 Pcs - 108 lm (H 15 mm - 54 lm)

Article	H mm	€/lm	€/Pc
PJBC 03	3	8,33	22,49
PJBC 045	4,5	8,57	23,14
PJBC 06	6	8,79	23,73
PJBC 08	8	9,47	25,57
PJBC 10	10	10,51	28,38
PJBC 125	12,5	11,87	32,05
PJBC 15	15	12,93	34,91


EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS




1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS

POLISHED



BC - Polished chrome alum.

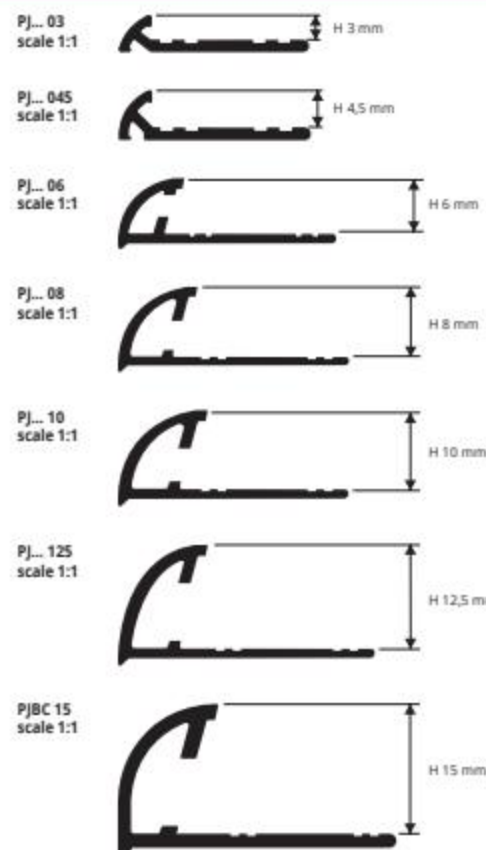

CAPSULES, END CAPS and THREE-WAYS JOINTS

POLISHED ALUMINIUM / PLASTIC

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJA ...	06/08/10/ 125/15	3,08

END CAP



TPJ... /1

JOINT



GIJA ...

EXTERNAL
CAPSULES



CPJ... /1



CPJD... /1

INTERNAL
CAPSULES



IPJ... /1



IPJD... /1

LEFT CAPSULES POLISHED ALUMINIUM

Article	H mm	€/Pc
CPJBC .../1	06/08/10/125	6,85
CPJBC 15/1	15	7,60
IPJBC .../1	06/08/10/125	6,44
IPJBC 15/1	15	7,96
TPJBC .../1	06/08/10/125/15	3,32

Choose the desired height:
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJBC 10/1

(*) 12,5/15 mm NOT SUITABLE FOR THREE-WAYS CORNER

The right capsules are available on demand and must be used only in the following cases:
A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code.
For example: CPJDBC 06.



Add "D" to the article code.
For example: IPJDBC 06.

B) as an alternative to end-caps (right side).




LEFT CAPSULES
Add "D" to the article code. For example: CPJDBC 06.

RIGHT CAPSULES

PROJOLLY

BRUSHED ALUMINIUM

PROJOLLY is a rounded bead profile in brushed aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability of special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

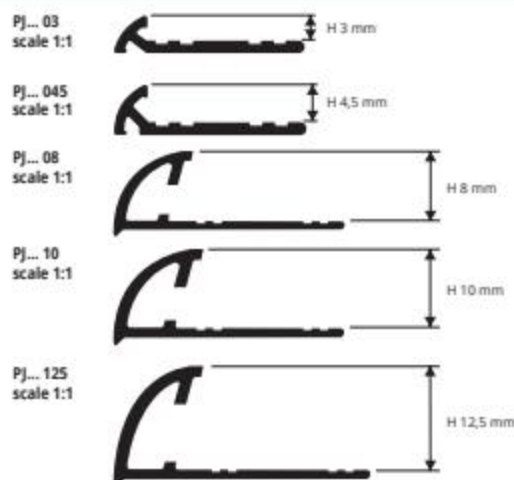

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired finish. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



BRUSHED POLISHED ALUMINIUM (silver)
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJBS 03	3	9,81	26,49
PJBS 045	4,5	10,17	27,46
PJBS 08	8	10,90	29,43
PJBS 10	10	11,87	32,05
PJBS 125	12,5	13,26	35,80

BRUSHED POLISHED ALUMINIUM (titanium)
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJTS 03	3	9,81	26,49
PJTS 045	4,5	10,17	27,46
PJTS 08	8	10,90	29,43
PJTS 10	10	11,87	32,05
PJTS 125	12,5	13,26	35,80



COLOURS

BRUSHED POLISHED	
BS - Brushed polished silver alum.	TS - Brushed polished titanium alum.

BS 03 - ITEM AVAILABLE WHILE STOCKS LAST.

CAPSULES, END CAPS and THREE-WAYS JOINTS

BRUSHED POLISHED ALUMINIUM (silver, titanium) / PLASTIC

LEFT CAPSULES - BRUSHED POLISHED ALUMINIUM silver-titanium

Article	H mm	€/Pc
CPJBS .../1	08/10/125	7,71
IPJBS .../1	08/10/125	7,71
TPJBS .../1	08/10/125	3,32
CPJTS .../1	08/10/125	7,71
IPJTS .../1	08/10/125	7,71
TPJTS .../1	08/10/125	3,32

Choose the desired height:
Ex: 4,5 mm capsule in 1 Pcs Pack - CPJBS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJA ...	08/10/125	3,08

EXTERNAL CAPSULES



CPJ... .../1



CPJD... .../1

INTERNAL CAPSULES



IPJ... .../1



IPJD... .../1

The right capsules are available on demand and must be used only in the following cases:
A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDBS 08.



Add "D" to the article code. For example: IPJDBS 08.

B) as an alternative to end-caps (right side).



LEFT CAPSULES

Add "D" to the article code. For example: CPJDBS 08.



RIGHT CAPSULES

END CAP



TPJ... .../1

JOINT



GIJA ...

PROJOLLY is a rounded bead profile in varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and elegance and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

PROJOLLY

VARNISHED ALUMINIUM



VARNISHED ALUMINIUM (HOT-WORKED 200°) thermo packed
bar length 2,7 lm - pack 20 Pcs-54 lm (colour white 40 Pcs - 108 lm)

Article	H mm	€/lm	€/Pc
PJA 08-01	8	6,91	18,66
PJA 10-01	10	7,48	20,20

The code of the selected colour must be added to the article code.
E.g.: PJA 08... (chosen colour white) PJA 08-01.

PJA 08-.....
scale 1:1



PJA 10-...
scale 1:1



COLOURS

01 - Varnished white alum. (9016)

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired colour. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS and THREE-WAYS JOINTS

VARNISHED ALUMINIUM / PLASTIC

LEFT CAPSULES VARNISHED ALUMINIUM (HOT-WORKED 200°)

Article	H mm	€/Pc
CPJA ...-01/1	08/10/125	7,02
IPJA ...-01/1	08/10/125	7,02
TPJA ...-01/1	08/10/125	3,32

Choose the desired height:
Ex: 10 mm capsule in 1 Pcs Pack - CPJA 10-01/1

EXTERNAL CAPSULES



CPJA ...-01/1



CPJA ...-01/1

INTERNAL CAPSULES



IPJA ...-01/1



IPJA ...-01/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJA ...	08/10/125	3,08

END CAP



TPJA ...-01/1

JOINT



GIJA ...

The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code.
For example: CPJDA 06-01.

Add "D" to the article code.
For example: IPJDA 06-01.

B) as an alternative to end-caps (right side).



LEFT CAPSULES


RIGHT CAPSULES

Add "D" to the article code. For example: CPJDA 06-01.

PROJOLLY

SHOCKPROOF NON - TOXIC
COLORED VINYL RESIN

PROJOLLY is a rounded bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section, the availability in different colours also on demand and special pieces such as internal and external corners make **PROJOLLY** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

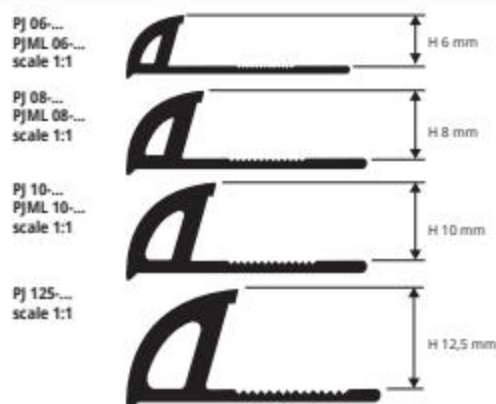

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY" according to the tile thickness and desired colour. 2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



NON-TOXIC SHOCKPROOF VINYL RESIN
MIRROR LINE EXTRA POLISHED - bar length 2,7 lm
pack. 54 lm (colour white pack. 108 lm)

Article	H mm	€/lm	€/Pc
PJML 08-01	8	1,72	4,64
PJML 10-01	10	1,85	5,00



NON-TOXIC SHOCKPROOF VINYL RESIN

bar length 2,7 lm - pack. 54 lm (colour white pack. 108 lm)


Article	H mm	€/lm	€/Pc
PJ 06-01	6	1,28	3,46
PJ 06-06	6	1,28	3,46
PJ 06-11	6	1,28	3,46
PJ 06-12	6	1,28	3,46
PJ 08-00	8	1,42	3,83
PJ 08-01	8	1,42	3,83
PJ 08-0106	8	1,42	3,83
PJ 08-02	8	1,42	3,83
PJ 08-03	8	1,42	3,83
PJ 08-04	8	1,42	3,83
PJ 08-05	8	1,42	3,83
PJ 08-06	8	1,42	3,83
PJ 08-11	8	1,42	3,83
PJ 08-12	8	1,42	3,83
PJ 08-13	8	1,42	3,83
PJ 08-17	8	1,42	3,83
PJ 08-18	8	1,42	3,83
PJ 10-00	10	1,55	4,19
PJ 10-01	10	1,55	4,19
PJ 10-0106	10	1,55	4,19
PJ 10-02	10	1,55	4,19
PJ 10-03	10	1,55	4,19
PJ 10-04	10	1,55	4,19
PJ 10-05	10	1,55	4,19
PJ 10-06	10	1,55	4,19
PJ 10-11	10	1,55	4,19
PJ 10-12	10	1,55	4,19
PJ 10-13	10	1,55	4,19
PJ 10-15	10	1,55	4,19
PJ 10-17	10	1,55	4,19
PJ 10-18	10	1,55	4,19
PJ 125-01	12,5	1,68	4,54
PJ 125-0106	12,5	1,68	4,54
PJ 125-02	12,5	1,68	4,54
PJ 125-03	12,5	1,68	4,54
PJ 125-04	12,5	1,68	4,54
PJ 125-05	12,5	1,68	4,54
PJ 125-06	12,5	1,68	4,54
PJ 125-11	12,5	1,68	4,54
PJ 125-12	12,5	1,68	4,54
PJ 125-13	12,5	1,68	4,54
PJ 125-15	12,5	1,68	4,54
PJ 125-17	12,5	1,68	4,54
PJ 125-18	12,5	1,68	4,54



EXTERNAL CAPSULES



CPJ .../5

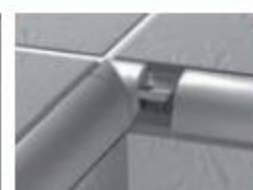

INTERNAL CAPSULES



IPJ .../5

CAPSULES FOR THREE-WAYS JOINTS

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

EXTERNAL	INTERNAL	H	€/5 Pc
CPJ 06-01/5	IPJ 06-01/5	6	6,82
CPJ 06-06/5	IPJ 06-06/5	6	6,82
CPJ 06-11/5	IPJ 06-11/5	6	6,82
CPJ 06-12/5	IPJ 06-12/5	6	6,82
CPJ 08-00/5	IPJ 08-00/5	8	6,91
CPJ 08-01/5	IPJ 08-01/5	8	6,91
CPJ 08-0106/5	IPJ 08-0106/5	8	6,91
CPJ 08-02/5	IPJ 08-02/5	8	6,91
CPJ 08-03/5	IPJ 08-03/5	8	6,91
CPJ 08-04/5	IPJ 08-04/5	8	6,91
CPJ 08-05/5	IPJ 08-05/5	8	6,91
CPJ 08-06/5	IPJ 08-06/5	8	6,91
CPJ 08-11/5	IPJ 08-11/5	8	6,91
CPJ 08-12/5	IPJ 08-12/5	8	6,91
CPJ 08-13/5	IPJ 08-13/5	8	6,91
CPJ 08-17/5	IPJ 08-17/5	8	6,91
CPJ 08-18/5	IPJ 08-18/5	8	6,91
CPJ 10-00/5	IPJ 10-00/5	10	7,11
CPJ 10-01/5	IPJ 10-01/5	10	7,11
CPJ 10-0106/5	IPJ 10-0106/5	10	7,11
CPJ 10-02/5	IPJ 10-02/5	10	7,11
CPJ 10-03/5	IPJ 10-03/5	10	7,11
CPJ 10-04/5	IPJ 10-04/5	10	7,11
CPJ 10-05/5	IPJ 10-05/5	10	7,11
CPJ 10-06/5	IPJ 10-06/5	10	7,11
CPJ 10-11/5	IPJ 10-11/5	10	7,11
CPJ 10-12/5	IPJ 10-12/5	10	7,11
CPJ 10-13/5	IPJ 10-13/5	10	7,11
CPJ 10-15/5	IPJ 10-15/5	10	7,11
CPJ 10-17/5	IPJ 10-17/5	10	7,11
CPJ 10-18/5	IPJ 10-18/5	10	7,11
CPJ 125-01/5	IPJ 125-01/5	12,5	7,33
CPJ 125-0106/5	IPJ 125-0106/5	12,5	7,33
CPJ 125-02/5	IPJ 125-02/5	12,5	7,33
CPJ 125-03/5	IPJ 125-03/5	12,5	7,33
CPJ 125-04/5	IPJ 125-04/5	12,5	7,33
CPJ 125-05/5	IPJ 125-05/5	12,5	7,33
CPJ 125-06/5	IPJ 125-06/5	12,5	7,33
CPJ 125-11/5	IPJ 125-11/5	12,5	7,33
CPJ 125-12/5	IPJ 125-12/5	12,5	7,33
CPJ 125-13/5	IPJ 125-13/5	12,5	7,33
CPJ 125-15/5	IPJ 125-15/5	12,5	7,33
CPJ 125-17/5	IPJ 125-17/5	12,5	7,33
CPJ 125-18/5	IPJ 125-18/5	12,5	7,33

COLOURS

00 - White ice	01 - White	0106 - White ivory	02 - Light grey	03 - Cement gray	04 - Light beige	05 - Dark beige	06 - Ivory	11 - Black
12 - Silver	13 - Gold	15 - Brown	17 - Bahama beige	18 - Grey				

PROJOLLY MARBLE is a rounded bead profile in shockproof non - toxic marbled vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section, the availability of different marble effect finishes and special pieces such as internal and external corners make **PROJOLLY MARBLE** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

PROJOLLY MARBLE

SHOCKPROOF NON - TOXIC
MARBLED VINYL RESIN



PJ...06
scale 1:1



PJ...08
scale 1:1



PJ...10
scale 1:1



PJ...125
scale 1:1



MARBLED NON-TOXIC VINYL RESIN

bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJMC 08	8	2,72	7,34
PJMBS 08	8	2,72	7,34
PJMTC 08	8	2,72	7,34
PJMTS 08	8	2,72	7,34
PJMB 08	8	2,72	7,34
PJMR 08	8	2,72	7,34
PJMV 08	8	2,72	7,34
PJMAS 08	8	2,72	7,34
PJMC 10	10	2,95	7,97
PJMBS 10	10	2,95	7,97
PJMTC 10	10	2,95	7,97
PJMTS 10	10	2,95	7,97
PJMB 10	10	2,95	7,97
PJMA 10	10	2,95	7,97
PJMV 10	10	2,95	7,97
PJMAS 10	10	2,95	7,97
PJMRS 10	10	2,95	7,97
PJMC 125	12,5	3,20	8,64
PJMTC 125	12,5	3,20	8,64
PJMTS 125	12,5	3,20	8,64

COLOURS

MC - White carrara	MBS - Soft beige	MTC - Travertino light
MTS - Travertino dark	MB - Real yellow beige	MA - Sky blue
MR - Pink portugal	MV - Green guatemalan	MAS - Soft blue
MRS - Soft pink		

EXAMPLES OF LAYING



INSTRUCTIONS FOR LAYING


1. Choose "PROJOLLY MARBLE" according to the tile thickness and desired colour. 2. Cut "PROJOLLY MARBLE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY MARBLE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



PROJOLLY ECO

SHOCKPROOF NON - TOXIC
COLORED VINYL RESIN

PROJOLLY ECO is a rounded bead profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section, the availability of different colours also on demand and special pieces such as internal and external corners make **PROJOLLY ECO** a practical and economic profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

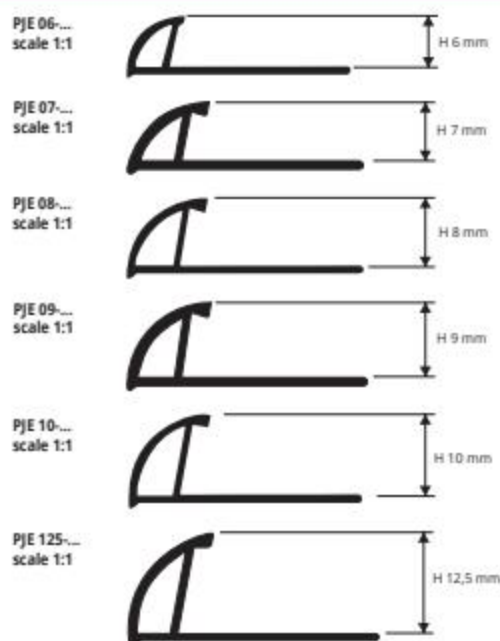

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY ECO" according to the tile thickness and desired colour. 2. Cut "PROJOLLY ECO" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY ECO" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



COLOURED VINYL RESIN

bar length 2,7 lm - pack 80 Pcs - 216 lm


Article	H mm	€/lm	€/Pc
PJE 06-01	6	0,91	2,46
PJE 06-03	6	0,91	2,46
PJE 08-01	8	1,05	2,84
PJE 08-0106	8	1,05	2,84
PJE 08-02	8	1,05	2,84
PJE 08-03	8	1,05	2,84
PJE 08-04	8	1,05	2,84
PJE 08-05	8	1,05	2,84
PJE 08-06	8	1,05	2,84
PJE 08-11	8	1,05	2,84
PJE 08-12	8	1,05	2,84
PJE 08-17	8	1,05	2,84
PJE 08-18	8	1,05	2,84
PJE 10-01	10	1,19	3,21
PJE 10-0106	10	1,19	3,21
PJE 10-02	10	1,19	3,21
PJE 10-03	10	1,19	3,21
PJE 10-04	10	1,19	3,21
PJE 10-05	10	1,19	3,21
PJE 10-06	10	1,19	3,21
PJE 10-08	10	1,19	3,21
PJE 10-11	10	1,19	3,21
PJE 10-12	10	1,19	3,21
PJE 10-13	10	1,19	3,21
PJE 10-15	10	1,19	3,21
PJE 10-17	10	1,19	3,21
PJE 10-18	10	1,19	3,21
PJE 125-01	12,5	1,48	4,00
PJE 125-0106	12,5	1,48	4,00
PJE 125-02	12,5	1,48	4,00
PJE 125-03	12,5	1,48	4,00
PJE 125-05	12,5	1,48	4,00
PJE 125-06	12,5	1,48	4,00
PJE 125-11	12,5	1,48	4,00
PJE 125-12	12,5	1,48	4,00
PJE 125-17	12,5	1,48	4,00
PJE 125-18	12,5	1,48	4,00



EXTERNAL CAPSULES



CPJ .../5

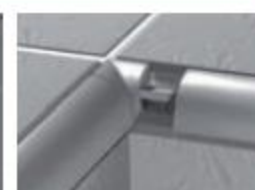

INTERNAL CAPSULES



IPJ .../5

CAPSULES FOR THREE-WAYS JOINTS

POLYPROPYLENE/POLYETHYLENE UV RESISTANT

EXTERNAL	INTERNAL	H	€/5 Pc
CPJE 06-01/5	IPJE 06-01/5	6	5,38
CPJE 06-03/5	IPJE 06-03/5	6	5,38
CPJE 08-01/5	IPJE 08-01/5	8	5,72
CPJE 08-0106/5	IPJE 08-0106/5	8	5,72
CPJE 08-02/5	IPJE 08-02/5	8	5,72
CPJE 08-03/5	IPJE 08-03/5	8	5,72
CPJE 08-04/5	IPJE 08-04/5	8	5,72
CPJE 08-05/5	IPJE 08-05/5	8	5,72
CPJE 08-06/5	IPJE 08-06/5	8	5,72
CPJE 08-11/5	IPJE 08-11/5	8	5,72
CPJE 08-12/5	IPJE 08-12/5	8	5,72
CPJE 08-17/5	IPJE 08-17/5	8	5,72
CPJE 08-18/5	IPJE 08-18/5	8	5,72
CPJE 10-01/5	IPJE 10-01/5	10	6,09
CPJE 10-0106/5	IPJE 10-0106/5	10	6,09
CPJE 10-02/5	IPJE 10-02/5	10	6,09
CPJE 10-03/5	IPJE 10-03/5	10	6,09
CPJE 10-04/5	IPJE 10-04/5	10	6,09
CPJE 10-05/5	IPJE 10-05/5	10	6,09
CPJE 10-06/5	IPJE 10-06/5	10	6,09
CPJE 10-08/5	IPJE 10-08/5	10	6,09
CPJE 10-11/5	IPJE 10-11/5	10	6,09
CPJE 10-12/5	IPJE 10-12/5	10	6,09
CPJE 10-13/5	IPJE 10-13/5	10	6,09
CPJE 10-15/5	IPJE 10-15/5	10	6,09
CPJE 10-17/5	IPJE 10-17/5	10	6,09
CPJE 10-18/5	IPJE 10-18/5	10	6,09
CPJE 125-01/5	IPJE 125-01/5	12,5	6,99
CPJE 125-0106/5	IPJE 125-0106/5	12,5	6,99
CPJE 125-02/5	IPJE 125-02/5	12,5	6,99
CPJE 125-03/5	IPJE 125-03/5	12,5	6,99
CPJE 125-05/5	IPJE 125-05/5	12,5	6,99
CPJE 125-06/5	IPJE 125-06/5	12,5	6,99
CPJE 125-11/5	IPJE 125-11/5	12,5	6,99
CPJE 125-12/5	IPJE 125-12/5	12,5	6,99
CPJE 125-17/5	IPJE 125-17/5	12,5	6,99
CPJE 125-18/5	IPJE 125-18/5	12,5	6,99

COLOURS

01 - White	0106 - White ivory	02 - Light grey	03 - Cement gray	04 - Light beige	05 - Dark beige	06 - Ivory	11 - Black	12 - Silver
13 - Gold	15 - Brown	17 - Bahama beige	18 - Grey					

PROJOLLY ECO MARBLE is a rounded bead profile in shockproof non - toxic marbled vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability of different marble effect finishes and special pieces such as internal and external corners make **PROJOLLY ECO MARBLE** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

PROJOLLY ECO MARBLE

SHOCKPROOF NON - TOXIC
MARBLED VINYL RESIN




SHOCKPROOF MARBLED VINYL RESIN
bar length 2,7 lm - pack. 80 Pcs - 216 lm

Article	H mm	€/lm	€/Pc
PJEMC 08	8	1,76	4,75
PJEMBS 08	8	1,76	4,75
PJEMTC 08	8	1,76	4,75
PJEMTS 08	8	1,76	4,75
PJEMB 08	8	1,76	4,75
PJEMR 08	8	1,76	4,75
PJEMAS 08	8	1,76	4,75
PJEMC 10	10	1,88	5,08
PJEMBS 10	10	1,88	5,08
PJEMTC 10	10	1,88	5,08
PJEMTS 10	10	1,88	5,08
PJEMBC 10	10	1,88	5,08
PJEMB 10	10	1,88	5,08
PJEMR 10	10	1,88	5,08
PJEMAS 10	10	1,88	5,08

COLOURS

MC - White canvas	MBS - Soft beige	MTC - Travertino light
MTS - Travertino dark	MB - Real yellow beige	MBC - Polished chrome
MR - Pink portugal	MAS - Soft blue	

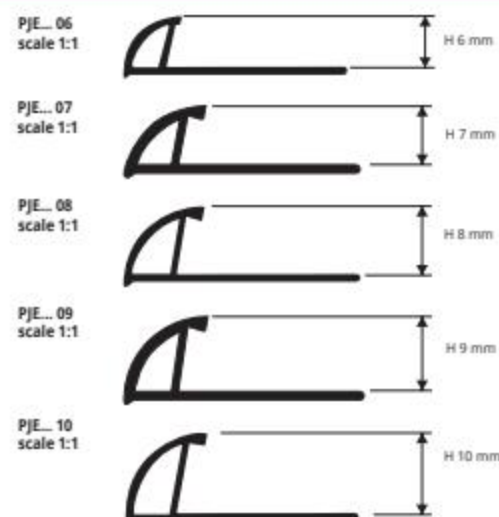

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY ECO MARBLE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY ECO MARBLE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY ECO MARBLE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



PROJOLLY TRIANGLE

POLISHED, BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

PROJOLLY TRIANGLE is a triangle-shaped bead profile polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY TRIANGLE** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

PJTRAC... 06
scale 1:1



PJTRAC... 08
scale 1:1



PJTRAC... 10
scale 1:1



PJTRAC... 11
scale 1:1



PJTRAC... 125
scale 1:1



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm	€/lm	€/Pc
PJTRAC 06	6	9,87	26,65
PJTRAC 08	8	10,37	28,00
PJTRAC 10	10	10,89	29,40
PJTRAC 11	11	11,21	30,27
PJTRAC 125	12,5	11,66	31,48



BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 8/10 mm

Article	H mm	€/lm	€/Pc
PJTRACS 06	6	11,41	30,81
PJTRACS 08	8	12,04	32,51
PJTRACS 10	10	12,55	33,89
PJTRACS 11	11	12,94	34,94
PJTRACS 125	12,5	13,45	36,32

COLOURS



SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY TRIANGLE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY TRIANGLE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY TRIANGLE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES, END CAPS, THREE-WAYS JOINTS and JOINTS

POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A / PLASTIC

EXTERNAL / INTERNAL / THREE-WAYS CAPSULES and END CAPS - POLISHED STAINLESS STEEL

Article	H mm	€/Pc
CPJTRAC .../1	06-08-10-11-12,5	15,51
IPJTRAC .../1	06-08-10-11-12,5	15,51
CTPJTRAC .../1	06-08-10-11-12,5	20,16
TPJTRAC .../1	06-08-10-11-12,5	5,05

Choose the desired packaging: E.g.: CPJTRAC.../1 (Pack. 1 Pcs)

EXTERNAL / INTERNAL / THREE-WAYS CAPSULES AND CAPS - BRUSHED STAINLESS STEEL

Article	H mm	€/Pc
CPJTRACS .../1	06-08-10-11-12,5	17,70
IPJTRACS .../1	06-08-10-11-12,5	17,70
CTPJTRACS .../1	06-08-10-11-12,5	23,04
TPJTRACS .../1	06-08-10-11-12,5	5,72

Choose the desired packaging: E.g.: CPJTRACS.../1 (Pack. 1 Pcs)

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJTRA ...	06-08-10-11-12,5	2,80

EXTERNAL CAPSULE



CPJTR... .../1

INTERNAL CAPSULE



IPJTR... .../1

THREE-WAYS CAPSULE



CTPJTR... .../1

END CAPS



TPJTR... .../1

JOINTS



GIJTRA ...

PROJOLLY TRIANGLE is a triangle-shaped bead profile in brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section, the availability in different finishes make **PROJOLLY TRIANGLE** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY TRIANGLE

NATURAL CHROMED AND ANTIQUE BRASS



PJTR... 10
scale 1:1



PJTR... 125
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY TRIANGLE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY TRIANGLE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY TRIANGLE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

SUPER POLISHED CHROMED BRASS

thermo packed bar length 2,7 lm - pack. 20 Pcs - 54 lm

MIRROR LINE

Article	H mm	€/lm	€/Pc
PJTROC 10	10	32,49	87,72
PJTROC 125	12,5	35,27	95,23

ANTIQU BRASS thermo packed

bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PJTROB 10	10	40,92	110,48
PJTROB 125	12,5	43,96	118,69


COLOURS



PROJOLLY TRIANGLE

ANODIZED, POLISHED AND
BRUSHED ALUMINIUM

PROJOLLY TRIANGLE is a triangle-shaped bead profile in anodized, polished and brushed aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and special pieces such as internal and external corners, end caps and joints make **PROJOLLY TRIANGLE** a much sought-after profile that allows an elegant workmanlike application.

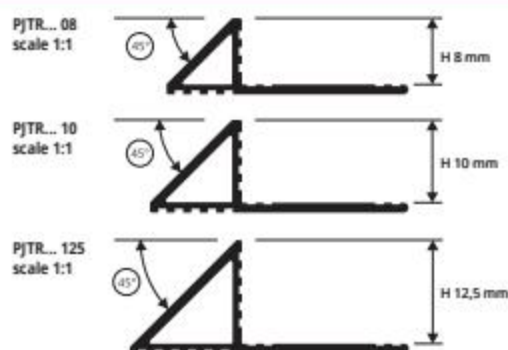

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROJOLLY TRIANGLE" according to the tile thickness and desired finish. 2. Cut "PROJOLLY TRIANGLE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY TRIANGLE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



ANODIZED ALUMINIUM (silver - titanium - gold) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJTRAA 08	8	5,72	15,44
PJTRAA 10	10	6,26	16,90
PJTRAA 125	12,5	7,07	19,09
PJTRAT 08	8	6,19	16,71
PJTRAT 10	10	6,86	18,52
PJTRAT 125	12,5	7,54	20,36
PJTRAO 08	8	5,85	15,80
PJTRAO 10	10	6,45	17,42
PJTRAO 125	12,5	7,20	19,44

BRUSHED POLISHED ALUMINIUM (silver - gold) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJTRBS 08	8	10,36	27,97
PJTRBS 10	10	11,17	30,16
PJTRBS 125	12,5	12,64	34,13



POLISHED ALUMINIUM (chrome - titanium - gold) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PJTRBC 08	8	9,60	25,92
PJTRBC 10	10	10,09	27,24
PJTRBC 125	12,5	11,43	30,86
PJTRBT 08	8	9,60	25,92
PJTRBT 10	10	10,09	27,24
PJTRBT 125	12,5	11,43	30,86
PJTRBO 08	8	9,60	25,92
PJTRBO 10	10	10,09	27,24
PJTRBO 125	12,5	11,43	30,86

**ITEMS AVAILABLE WHILE STOCKS LAST,
EXCEPT PJTRAA 08 AND PJTRAA 10**

COLOURS

ANODIZED			POLISHED			BRUSHED
AA - Anodized silver alum.	AT - Anodized titanium alum.	AO - Anodized gold alum.	BC - Polished chrome alum.	BT - Polished titanium alum.	BO - Polished gold alum.	BS - Brushed pol. silver alum.

CAPSULES, END CAPS, THREE-WAYS JOINTS and JOINTS

ANODIZED, POLISHED, BRUSHED POLISHED ALUMINIUM

CAPSULES, END CAPS, THREE-WAYS - ANODIZED ALUMINIUM

Article	H mm	€/Pc
CPJTAA .../1	08/10/125	10,35
IPJTAA .../1	08/10/125	10,35
TPJTAA .../1	08/10/125	5,05
CPJTRAT .../1	08/10/125	10,35
IPJTRAT .../1	08/10/125	10,35
TPJTRAT .../1	08/10/125	5,05
CPJTAAO .../1	08/10/125	10,35
IPJTAAO .../1	08/10/125	10,35
TPJTAAO .../1	08/10/125	5,05

Choose the desired height:

Ex: 4,5 mm capsule in 1 Pcs Pack - CPJTAA 10/1

CAPSULES, END CAPS, THREE-WAYS - POLISHED ALUM.

Article	H mm	€/Pc
CPJTRBC .../1	08/10/125	11,85
IPJTRBC .../1	08/10/125	11,85
TPJTRBC .../1	08/10/125	5,72
CPJTRBT .../1	08/10/125	11,85
IPJTRBT .../1	08/10/125	11,85
TPJTRBT .../1	08/10/125	5,72
CPJTRBO .../1	08/10/125	11,85
IPJTRBO .../1	08/10/125	11,85
TPJTRBO .../1	08/10/125	5,72

Choose the desired height:

Ex: 4,5 mm capsule in 1 Pcs Pack - CPJTRBC 10/1

CAPSULES, END CAPS, THREE-WAYS - BRUSHED POLISHED ALUM.

Article	H mm	€/Pc
CPJTRBS .../1	08/10/125	13,50
IPJTRBS .../1	08/10/125	13,50
TPJTRBS .../1	08/10/125	6,39

Choose the desired height:

Ex: 4,5 mm capsule in 1 Pcs Pack - CPJTRBS 10/1

JOINTS - PLASTIC

Article	H mm	€/Pc
GIJTAA ...	08/10/125	2,80



PROJOLLY ANGLE 135 is a polished and satin stainless steel profile that can be used as protection for the 135° corners of coverings. Its particular section, the availability in 2 different finishes make **PROJOLLY ANGLE 135** a much sought-after profile that allows an elegant workmanlike application.

PROJOLLY ANGLE 135

POLISHED AND BRUSHED
STAINLESS STEEL AISI 304/1.4301-V2A



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJTR135AC 08	8	16,10	43,47
PJTR135AC 10	10	16,73	45,17
PJTR135AC 11	11	17,10	46,17
PJTR135AC 125	12,5	17,53	47,33

COLOURS



AC - Polished stainless steel AISI 304/1.4301-V2A
ACS - Brushed stainless steel AISI 304/1.4301-V2A



BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PJTR135ACS 08	8	19,02	51,35
PJTR135ACS 10	10	19,65	53,06
PJTR135ACS 11	11	20,15	54,41
PJTR135ACS 125	12,5	20,52	55,40

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS

PJTR135... 08
scale 1:1



PJTR135... 10
scale 1:1




PJTR135... 11
scale 1:1



PJTR135... 125
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

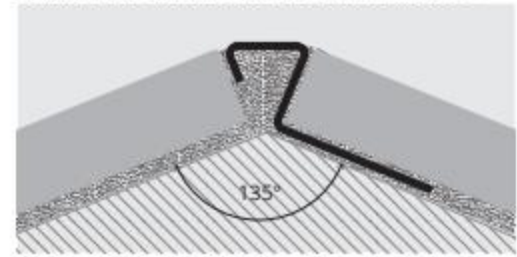

1. Choose "PROJOLLY ANGLE 135" according to the tile thickness and desired finish. 2. Cut "PROJOLLY ANGLE 135" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROJOLLY ANGLE 135" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.




PROLISTEL CHANNEL


STAINLESS STEEL AISI 304/1.4301-V2A

PROLISTEL CHANNEL is a F-shaped strip in satin-finish stainless steel AISI 304/1.4301-V2A suitable to decorate the wall coverings in ceramic tiles and natural stones. Its section allows the realization of a decorative joint which can also be used as a guide for the fixing of sheets of glass on floors and walls. Its particular section make **PROLISTEL CHANNEL** a much sought-after profile that allows an easy workmanlike application.

PLTCH... 08 - 10 - 11 - 12,5
scale 1:1

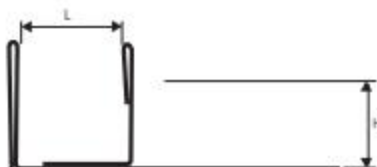

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

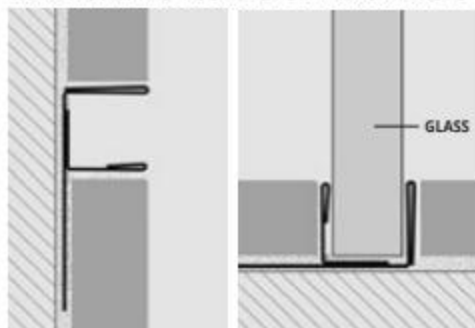

1. Choose "PROLISTEL CHANNEL" according to the visible surface and desired finish. 2. Cut "PROLISTEL CHANNEL" to the desired length and apply the adhesive on the surface where the profile will be laid. 3. Press "PROLISTEL CHANNEL" into the adhesive, aligning it with the tiles leaving a 2 mm. joint. Remove immediately all remains of adhesive from the surface of the profile. 4. Fill the joint between the profile and tiles with grout in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



SATIN-FINISH STAINLESS STEEL AISI 304/1.4301-V2A

bar length 2,7 lm - pack. 1 Pc

Article	H mm	L mm	€/lm	€/Pc
PLTCHACS 0808	8	08	48,50	130,95
PLTCHACS 1008	10	08	51,00	137,70
PLTCHACS 1108	11	08	53,48	144,40
PLTCHACS 12508	12,5	08	55,97	151,12

SATIN-FINISH STAINLESS STEEL AISI 304/1.4301-V2A

bar length 2,7 lm - pack. 1 Pc

Article	H mm	L mm	€/lm	€/Pc
PLTCHACS 0812	8	12	48,50	130,95
PLTCHACS 1012	10	12	51,00	137,70
PLTCHACS 1112	11	12	53,48	144,40
PLTCHACS 12512	12,5	12	55,97	151,12



SATIN-FINISH STAINLESS STEEL AISI 304/1.4301-V2A

bar length 2,7 lm - pack. 1 Pc

Article	H mm	L mm	€/lm	€/Pc
PLTCHACS 0810	8	10	48,50	130,95
PLTCHACS 1010	10	10	51,00	137,70
PLTCHACS 1110	11	10	53,48	144,40
PLTCHACS 12510	12,5	10	55,97	151,12

COLOURS



ACS - Brushed stainless steel AISI 304/1.4301-V2A

PROLISTEL CHANNEL


ANODIZED AND POLISHED ALUMINIUM

PROLISTEL CHANNEL is a F-shaped strip in anodized and polished aluminum suitable to decorate the wall coverings in ceramic tiles and natural stones. Its section allows the realization of a decorative joint which can also be used as a guide for the fixing of sheets of glass on floors and walls. Its particular section and the availability in different finishes make **PROLISTEL CHANNEL** a much sought-after profile that allows an easy workmanlike application.

PLTCH... 08 - 10 - 11 - 12,5
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

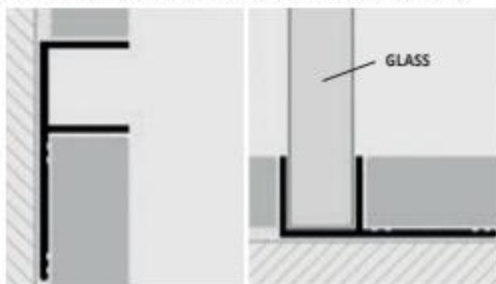

1. Scegliere "PROLISTEL CHANNEL" in funzione della superficie a vista e della finitura desiderata. 2. Tagliare "PROLISTEL CHANNEL" della lunghezza desiderata ed applicare l'adesivo sul supporto dove sarà applicato il listello. 3. Premere "PROLISTEL CHANNEL" nell'adesivo avendo cura di allinearne i bordi con la superficie del rivestimento e di lasciare una fuga di circa 2 mm. Rimuovere immediatamente residui di adesivo dalla superficie del profilo. 4. Stuccare accuratamente le fughe tra profilo e piastrella onde evitare il ristagno di eventuale acqua. Rimuovere immediatamente residui di stucco dalla superficie del profilo.



ANODIZED ALUMINIUM

bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTCHAA 10	10	9,12	24,62
PLTCHAA 11	11	9,27	25,03
PLTCHAA 125	12,5	9,48	25,60
PLTCHAB 10	10	16,48	44,50
PLTCHAB 125	12,5	17,77	47,98
PLTCHAT 10	10	16,48	44,50
PLTCHAT 125	12,5	17,77	47,98

COLOURS

ANODIZED		POLISHED
AA - Anodized silver alum.	AT - Anod. titanium alum.	BC - Polished chrome alum.
AB - Anodized bronze alum.	NEO - Anodized black alum.	



POLISHED CHROME ALUMINIUM

bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTCHBC 10	10	19,51	52,68
PLTCHBC 11	11	20,52	55,40
PLTCHBC 125	12,5	21,52	58,10

ANODIZED BLACK ALUMINIUM

bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTCHNEO 10	10	17,51	47,28
PLTCHNEO 11	11	18,39	49,65
PLTCHNEO 125	12,5	19,06	51,46

NEWS
KALEIDOS

PROLISTEL CHANNEL is a F-shaped strip in stone line varnished aluminium suitable to decorate the wall coverings in ceramic tiles and natural stones. Its section allows the realization of a decorative joint which can also be used as a guide for the fixing of sheets of glass on floors and walls. Its particular section and the availability in different Stone Line finishes make **PROLISTEL CHANNEL** a much sought-after profile that allows an easy workmanlike application.

PROLISTEL CHANNEL


STONE LINE VARNISHED ALUMINIUM



STONE LINE VARNISHED ALUMINIUM
bar length 2,7 lm - pack. 40 Pcs - 108 lm


Article	H mm	€/ml	€/Pc
PLTCHA 10-SL..	10	22,56	60,91
PLTCHA 125-SL..	12,5	25,24	68,15

PLTCHA 08/10/11/12,5 - SL..
scale 1:1 scale 1:1

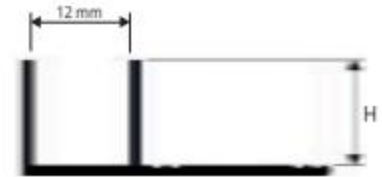

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROLISTEL CHANNEL" according to the visible surface and desired finish. 2. Cut "PROLISTEL CHANNEL" to the desired length and apply the adhesive on the surface where the profile will be laid. 3. Press "PROLISTEL CHANNEL" into the adhesive, aligning it with the tiles leaving a 2 mm. joint. Remove immediately all remains of adhesive from the surface of the profile. 4. Fill the joint between the profile and tiles with grout in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

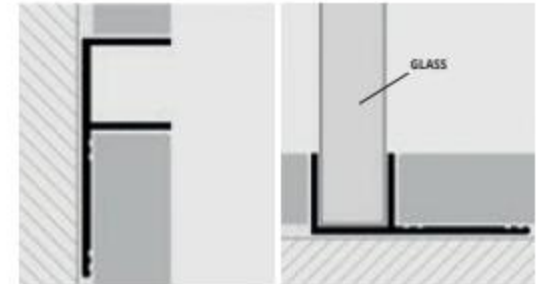

COLOURS

KALEIDOS

STONE LINE					
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL07 - Stone antracy	SL12 - Stone black

PROTERMINAL INT is a profile in anodized and polished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and the availability in different finishes make **PROTERMINAL INT** a much sought-after profile that allows an elegant workmanlike application.

PROTERMINAL INT

ANODIZED AND POLISHED ALUMINIUM



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROTERMINAL INT" according to the tile thickness and desired finish. 2. Cut "PROTERMINAL INT" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTERMINAL INT" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

ANODIZED ALUMINIUM (silver - titanium) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PTIAA 08	8	9,14	24,68
PTIAA 10	10	9,69	26,16
PTIAA 125	12,5	11,76	31,75
PTIAT 08	8	10,40	28,08
PTIAT 10	10	10,96	29,59
PTIAT 125	12,5	13,17	35,56

POLISHED ALUMINIUM (chrome - titanium) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PTIBC 10	10	13,72	37,04
PTIBC 125	12,5	15,81	42,69
PTIBT 10	10	14,99	40,47
PTIBT 125	12,5	17,22	46,49

INTERNAL, EXTERNAL, THREE-WAYS JOINTS
ANODIZED POLISHED ALUMINIUM

Article	€/Pc
RIPTI AA 08 - 10 - 125/1	6,73
REPTI AA 08 - 10 - 125/1	6,73
RTPIT AA 08 - 10 - 125/1	6,73
RIPTI AT 08 - 10 - 125/1	6,73
REPTI AT 08 - 10 - 125/1	6,73
RTPIT AT 08 - 10 - 125/1	6,73
RIPTI BC 10 - 125/1	6,73
REPTI BC 10 - 125/1	6,73
RTPIT BC 10 - 125/1	6,73
RIPTI BT 10 - 125/1	6,73
REPTI BT 10 - 125/1	6,73
RTPIT BT 10 - 125/1	6,73

INTERNAL CORNER
RIPTI ... 08 - 10 - 125



EXTERNAL CORNER
REPTI ... 08 - 10 - 125



3 WAYS JOINT
RTPIT ... 08 - 10 - 125




COLOURS

ANODIZED		POLISHED	
AA - Anodized silver alum.	AT - Anodized titanium alum.	BC - Polished chrome alum.	BT - Polished titanium alum.

PROTERMINAL

POLISHED AND BRUSHED
STAINLESS STEEL AISI 304/1.4301-V2A

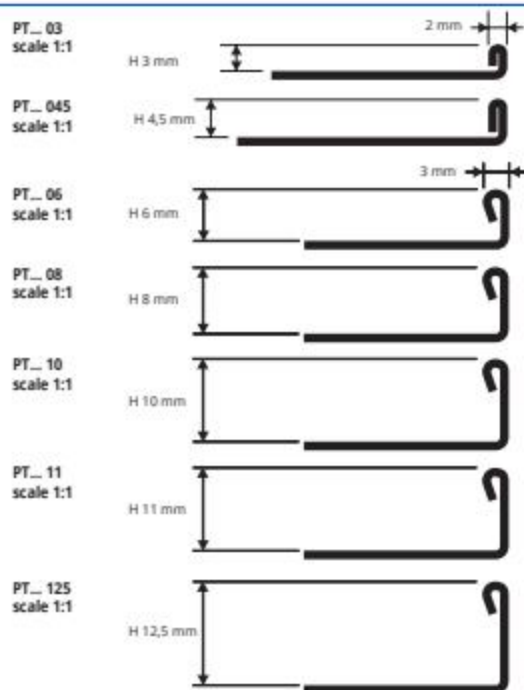

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROTERMINAL" according to the tile thickness and desired finish. 2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTERMINAL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROTERMINAL is a L-shaped profile in polished and brushed stainless steel AISI 304/1.4301-V2A that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic and natural stone tiles, and also as separation profile for floor coverings. Its particular section and the availability in two different finishes make **PROTERMINAL** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PTAC 03	3	8,95	24,17
PTAC 045	4,5	9,12	24,62
PTAC 06	6	9,51	25,68
PTAC 08	8	9,84	26,57
PTAC 10	10	10,35	27,95
PTAC 11	11	10,53	28,43
PTAC 125	12,5	10,73	28,97

BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PTACS 03	3	10,72	28,94
PTACS 045	4,5	11,70	31,59
PTACS 06	6	12,10	32,67
PTACS 08	8	12,50	33,75
PTACS 10	10	12,96	34,99
PTACS 11	11	13,16	35,53
PTACS 125	12,5	13,42	36,23

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.




Curve version available

COLOURS



PROTERMINAL

POLISHED STAINLESS STEEL
AISI 316L/1.4404-V4A

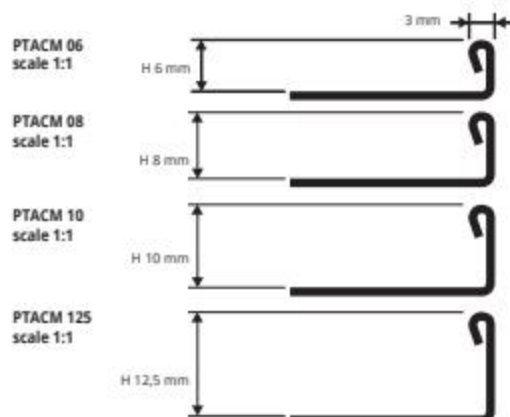

1. Choose "PROTERMINAL" according to the tile thickness. 2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTERMINAL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED STAINLESS ST. AISI 316/1.4404-V4A
with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PTACM 06	6	12,75	34,43
PTACM 08	8	13,18	35,59
PTACM 10	10	13,86	37,42
PTACM 125	12,5	14,36	38,77



COLOURS



SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

PROTERMINAL is a L-shaped profile in chromed and antique brass that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and elegance make PROJOLLY a much sought-after profile that allows a workmanlike application.

PROTERMINAL

CHROMED BRASS, BRUSHED BRASS AND ANTIQUE BRASS



CHROMED BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PTOC 06	6	20,98	56,65
PTOC 08	8	21,87	59,05
PTOC 10	10	22,42	60,53
PTOC 125	12,5	23,13	62,45




BRUSHED BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PTOS 06	6	12,32	33,26
PTOS 08	8	13,03	35,18
PTOS 10	10	14,04	37,91
PTOS 125	12,5	15,17	40,96



ANTIQU BRASS thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PTOB 08	8	31,47	84,97
PTOB 10	10	34,32	92,66
PTOB 125	12,5	37,01	99,93

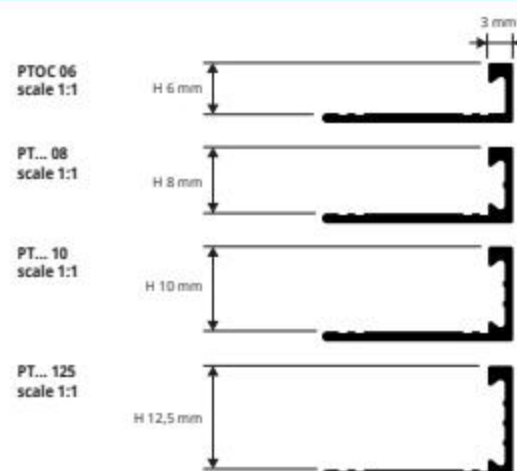

EXAMPLES OF LAYING



INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROTERMINAL" according to the tile thickness. 2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTERMINAL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES THREE-WAYS JOINTS

CHROMED BRASS, BRUSHED BRASS AND ANTIQUE BRASS

CAPSULES - pack. 1 Pcs


Article	H mm	€/lm
CPTOC 06/1	6	8,25
CPTOS 06/1	6	8,25
CPTOC 08/1	8	8,25
CPTOB 08/1	8	8,25
CPTOS 08/1	8	8,25
CPTOC 10/1	10	8,25
CPTOB 10/1	10	8,25
CPTOS 10/1	10	8,25
CPTOC 125/1	12,5	8,25
CPTOB 125/1	12,5	8,25
CPTOS 125/1	12,5	8,25



PROTERMINAL

POLISHED, BRUSHED AND
VARNISHED ALUMINIUM

PROTERMINAL is a L-shaped profile in polished, brushed and varnished aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles and also as separation profile for floor and wall coverings (the varnished only for wall application). Its particular section and the availability in different finishes make **PROTERMINAL** a much sought-after profile that allows a workmanlike application.

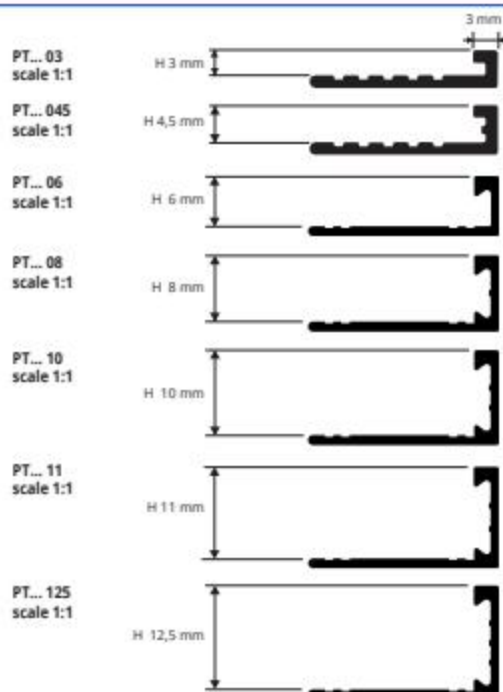

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



COATED ALUMINIUM thermo packed
bar length 2,7 lm - pack 20 Pcs - 54 lm (colour white 40 Pcs - 108 lm)

Article	H mm	€/lm	€/Pc
PTA 06-01	6	5,51	14,88
PTA 08-01	8	5,67	15,31
PTA 10-...	10	6,15	16,61
PTA 11-01	11	6,39	17,25
PTA 125-01	12,5	6,63	17,90

The code of the selected colour must be added to the article code.
E.g.: PTA 10-.../1 (chosen colour white ivory varnished alum.)
PTA 10-0106/1.

CAPSULES FOR THREE-WAYS JOINTS

COATED ALUMINIUM

Article	H mm	€/Pc
CPTA 06-01/1	6	8,25
CPTA 08-01/1	8	8,25
CPTA 10-.../1	10	8,25
CPTA 11-01/1	11	8,25
CPTA 125-01/1	12,5	8,25

The code of the selected colour must be added to the article code.
E.g.: CPTA 10-.../1 (chosen colour white ivory varnished alum.)
CPTA 10-0106/1.



POLISHED ALUMINIUM - BRUSHED
thermo packed - bar length 2,7 lm - pack 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PTBC 03	3	8,02	21,65
PTBC 045	4,5	8,44	22,79
PTBC 06	6	8,64	23,33
PTBC 08	8	8,99	24,27
PTBC 10	10	9,19	24,81
PTBC 11	11	9,41	25,41
PTBC 125	12,5	9,65	26,06
PTBO 03	3	8,26	22,30
PTBO 045	4,5	8,69	23,46
PTBO 06	6	8,90	24,03
PTBO 08	8	9,26	25,00
PTBO 10	10	9,47	25,57
PTBO 11	11	9,69	26,16
PTBO 125	12,5	9,94	26,84
PTBT 08	8	10,09	27,24
PTBT 10	10	10,48	28,30
PTBT 125	12,5	11,17	30,16
PTBR 08	8	10,09	27,24
PTBR 10	10	10,48	28,30
PTBR 125	12,5	11,47	30,16
PTBN 06	6	9,80	26,46
PTBN 08	8	10,09	27,24
PTBN 10	10	10,48	28,30
PTBN 125	12,5	11,17	30,16
PTBG 08	8	11,12	30,02
PTBG 10	10	11,54	31,16
PTBG 11	11	11,85	32,00
PTBG 125	12,5	12,26	33,10
PTBS 045	4,5	9,58	25,87
PTBS 08	8	9,69	26,16
PTBS 10	10	10,29	27,78
PTBS 11	11	10,63	28,70
PTBS 125	12,5	11,04	29,81
PTRS 045	4,5	10,58	28,57
PTRS 08	8	10,89	29,40
PTRS 10	10	11,30	30,51
PTRS 125	12,5	12,25	33,08
PTTS 045	4,5	10,58	28,57
PTTS 08	8	10,89	29,40
PTTS 10	10	11,30	30,51
PTTS 11	11	11,76	31,75
PTTS 125	12,5	12,25	33,08
PTBOS 06	6	9,60	25,92
PTBOS 08	8	9,69	26,16
PTBOS 10	10	10,29	27,78
PTBOS 125	12,5	11,04	29,81
PTNS 08	8	10,89	29,40
PTNS 10	10	11,30	30,51
PTNS 125	12,5	12,25	33,08
PTBRAS 10	10	11,30	30,51
PTBRAS 125	12,5	12,25	33,08
PTBGS 08	8	11,95	32,27
PTBGS 10	10	12,46	33,64
PTBGS 11	11	12,98	35,05
PTBGS 125	12,5	13,49	36,42



CAPSULES FOR THREE-WAYS JOINTS
POLISHED ALUMINIUM - BRUSHED

Article	H mm	€/Pc
CPTBC 03 /1	3	7,06
CPTBC 045 /1	4,5	7,06
CPTBC 06 /1	6	7,06
CPTBC 08 /1	8	7,06
CPTBC 10 /1	10	7,06
CPTBC 11 /1	11	7,06
CPTBC 125 /1	12,5	7,06
CPTBO 03/1	3	7,98
CPTBO 045/1	4,5	7,98
CPTBO 06/1	6	7,98
CPTBO 08/1	8	7,98
CPTBO 10/1	10	7,98
CPTBO 11/1	11	7,98
CPTBO 125/1	12,5	7,98
CPTBT 08/1	8	7,98
CPTBT 10/1	10	7,98
CPTBT 125/1	12,5	7,98
CPTBR 08 /1	8	10,38
CPTBR 10 /1	10	10,38
CPTBR 125 /1	12,5	10,38
CPTBN 06/1	6	10,38
CPTBN 08/1	8	10,38
CPTBN 10/1	10	10,38
CPTBN 125/1	12,5	10,38
CPTBG 08/1	8	7,98
CPTBG 10/1	10	7,98
CPTBG 11/1	11	7,98
CPTBG 125/1	12,5	7,98
CPTBS 045/1	4,5	7,98
CPTBS 08/1	8	7,98
CPTBS 10/1	10	7,98
CPTBS 11/1	11	7,98
CPTBS 125/1	12,5	7,98
CPTRS 045/1	4,5	7,98
CPTRS 08/1	8	7,98
CPTRS 10/1	10	7,98
CPTRS 125/1	12,5	7,98
CPTTS 045/1	4,5	7,98
CPTTS 08/1	8	7,98
CPTTS 10/1	10	7,98
CPTTS 11/1	11	7,98
CPTTS 125/1	12,5	7,98
CPTBOS 06/1	6	8,22
CPTBOS 08/1	8	8,22
CPTBOS 10/1	10	8,22
CPTBOS 125/1	12,5	8,22
CPTNS 08/1	8	10,38
CPTNS 10/1	10	10,38
CPTNS 125/1	12,5	10,38
CPTBRAS 10/1	10	7,98
CPTBRAS 125/1	12,5	7,98
CPTBGS 08/1	8	7,98
CPTBGS 10/1	10	7,98
CPTBGS 11/1	11	7,98
CPTBGS 125/1	12,5	7,98

COLOURS

VARNISHED					BRUSHED POLISHED				
01 - Varnished white alum. (9016)	0106 - Varnished white ivory alum. (9001)	11 - Varnished black alum. (9005)	02 - Varnished light grey alum. (7035)	03 - Varnished grey tone alum. (7030)	BS - Brushed polished silver alum.	RS - Brushed Polished copper alum.	TS - Brushed Polished titanium alum.	BOS - Brushed polished gold alum.	BGS - Brushed polish. grey gun aluminium
POLISHED					BRUSHED				
BC - Polished chrome alum.	BO - Polished gold alum.	BT - Polished titanium alum.	BN - Polished black alum.	BG - Polished grey gun alum.	BR - Polished copper alum.	NS - Brushed black alum.	BRAS - Brushed antique bronze alum.		

PROTERMINAL is a L-shaped profile in natural and anodized aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings, like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles and also as separation profile for floor and wall coverings. Its particular section and the availability in different finishes make **PROTERMINAL** a much sought-after profile that allows a workmanlike application.

PROTERMINAL

ANODIZED ALUMINIUM



ANODIZED ALUMINIUM (gold - silver) thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PTAA 03	3	3,90	10,53
PTAA 045	4,5	4,08	11,02
PTAA 06	6	4,23	11,42
PTAA 08	8	4,29	11,58
PTAA 10	10	4,56	12,31
PTAA 11	11	4,97	13,42
PTAA 125	12,5	5,24	14,15
PTAA 15	15	5,57	15,04
PTAA 20	20	6,51	17,58
PTAO 045	4,5	4,20	11,34
PTAO 06	6	4,36	11,77
PTAO 08	8	4,42	11,93
PTAO 10	10	4,70	12,69
PTAO 11	11	5,12	13,82
PTAO 125	12,5	5,40	14,58


COLOURS

ANODIZED		
AA - Anodized silver alum.	AO - Anod. gold alum.	NEO - Anodized black alum.
AT - Anodized titanium alum.	AR - Anodized copper alum.	AB - Anodized bronze.
BRA - Anod. antique bronze.	AG - Anodized grey gun alum.	



ANODIZED ALUMINIUM (black-titanium-copper-bronze-antique bronze-grey
gun) thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PTNEO 045	4,5	5,67	15,31
PTNEO 06	6	5,83	15,74
PTNEO 08	8	6,07	16,39
PTNEO 10	10	6,32	17,06
PTNEO 11	11	6,49	17,52
PTNEO 125	12,5	6,65	17,96
PTAT 06	6	5,83	15,74
PTAT 08	8	6,07	16,39
PTAT 10	10	6,32	17,06
PTAT 11	11	6,45	17,42
PTAT 125	12,5	6,65	17,96
PTAR 045	4,5	5,67	15,31
PTAR 08	8	6,07	16,39
PTAR 10	10	6,32	17,06
PTAR 125	12,5	6,65	17,96
PTAB 045	4,5	5,67	15,31
PTAB 08	8	6,07	16,39
PTAB 10	10	6,32	17,06
PTAB 125	12,5	6,65	17,96
PTBRA 10	10	9,12	24,62
PTBRA 125	12,5	9,59	25,89
PTAG 08	8	6,70	18,09
PTAG 10	10	6,90	18,63
PTAG 11	11	7,11	19,20
PTAG 125	12,5	7,31	19,74

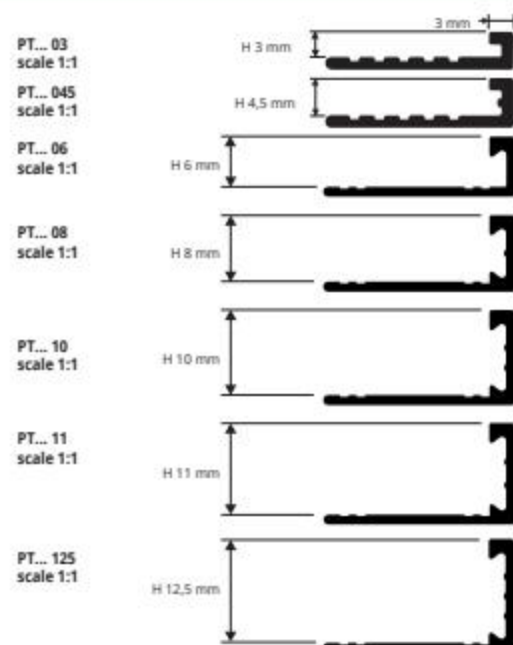

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROTERMINAL" according to the tile thickness and desired finish.
2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROTERMINAL" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES THREE-WAYS JOINTS

ANODIZED ALUMINIUM

CAPSULES - pack. 1 Pcs

Article	H mm	€/Pc
CPTAA 03/1	3	7,06
CPTAA 045/1	4,5	7,06
CPTAA 06/1	6	7,06
CPTAA 08/1	8	7,06
CPTAA 10/1	10	7,06
CPTAA 11/1	11	7,06
CPTAA 125/1	12,5	7,06
CPTAA 15/1	15	7,06
CPTAA 20/1	20	7,06
CPTAO 045/1	4,5	7,98
CPTAO 06/1	6	7,98
CPTAO 08/1	8	7,98
CPTAO 10/1	10	7,98
CPTAO 11/1	11	7,98
CPTAO 125/1	12,5	7,98
CPTNEO 045/1	4,5	10,38
CPTNEO 06/1	6	10,38
CPTNEO 08/1	8	10,38
CPTNEO 10/1	10	10,38
CPTNEO 11/1	11	10,38
CPTNEO 125/1	12,5	10,38


CPTAT 06/1	6	7,98
CPTAT 08/1	8	7,98
CPTAT 10/1	10	7,98
CPTAT 11/1	11	7,98
CPTAT 125/1	12,5	7,98
CPTAR 045/1	4,5	7,98
CPTAR 08/1	8	7,98
CPTAR 10/1	10	7,98
CPTAR 125/1	12,5	7,98
CPTAB 045/1	4,5	7,98
CPTAB 08/1	8	7,98
CPTAB 10/1	10	7,98
CPTAB 125/1	12,5	7,98
CPTBRA 10/1	10	7,98
CPTBRA 125/1	12,5	7,98
CPTAG 08/1	8	7,98
CPTAG 10/1	10	7,98
CPTAG 11/1	11	7,98
CPTAG 125/1	12,5	7,98




PROTERMINAL

SHOCKPROOF NON - TOXIC
COLORED VINYL RESIN

PROTERMINAL is a L-shaped profile in shockproof non - toxic colored vinyl resin that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability in different colours also on demand make **PROTERMINAL** a much sought-after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

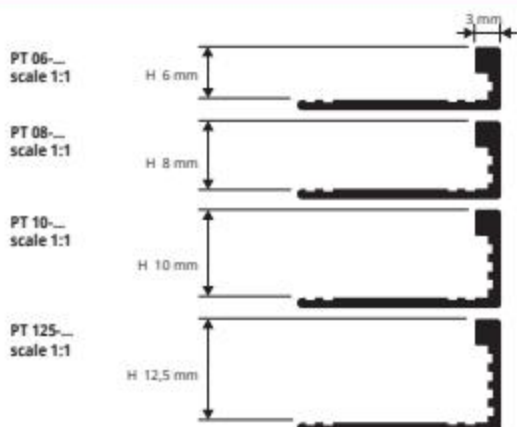

EXAMPLE AND INSTRUCTIONS FOR LAYING METHODS

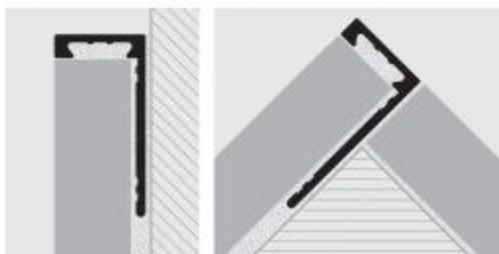

1. Choose "PROTERMINAL" according to the tile thickness and desired colour. 2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTERMINAL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.



NON-TOXIC SHOCKPROOF COLOURED VINYL RESIN
bar length 2,7 lm - pack 54 lm (white 108 lm)

Article	H mm	€/lm	€/Pc
PT 06-01	6	1,24	3,35
PT 06-0106	6	1,24	3,35
PT 06-02	6	1,24	3,35
PT 06-03	6	1,24	3,35
PT 06-06	6	1,24	3,35
PT 06-11	6	1,24	3,35
PT 06-12	6	1,24	3,35
PT 06-17	6	1,24	3,35
PT 06-18	6	1,24	3,35
PT 08-...	8	1,38	3,73
PT 10-...	10	1,51	4,08
PT 125-...	12,5	1,80	4,86

The code of the selected colour must be added to the article code.
E.g.: PT 06-... (chosen colour white) PT 06-01.

COLOURS

01 - White	0106 - White ivory	02 - Light grey	03 - Cement grey
04 - Light beige	05 - Dark beige	06 - Ivory	11 - Black
12 - Silver	17 - Bahama beige	18 - Grey	



PROTERMINAL is a L-shaper profile in powder coated aluminum that can be applied on external corners of coverings. It can be used to close the perimeter of coverings. Its particular section and the availability in different finishes make **PROTERMINAL** an elegant and much-sought after profile.

PROTERMINAL

STONE LINE ALUMINIUM / EASY LINE




STONE LINE thermo packed
bar length 2,7 lm - pack 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PTA 06-SL...	6	8,08	21,82
PTA 08-SL...	8	8,42	22,73
PTA 10-SL...	10	8,74	23,60
PTA 10-SL19	10	8,74	23,60
PTA 10-SL20	10	8,74	23,60
PTA 10-SL21	10	8,74	23,60
PTA 11-SL...	11	9,07	24,49
PTA 125-SL...	12,5	9,40	25,38

ALUMINIUM EASY LINE
bar length 2,7 lm - Pack 20 Pcs-54 lm







Article	H mm	€/lm	€/Pc
PTA 08-EY151	8	7,58	20,47
PTA 08-EY006	8	7,58	20,47
PTA 08-EY007	8	7,58	20,47
PTA 10-EYP...	10	6,15	16,61
PTA 10-EY...	10	7,87	21,25


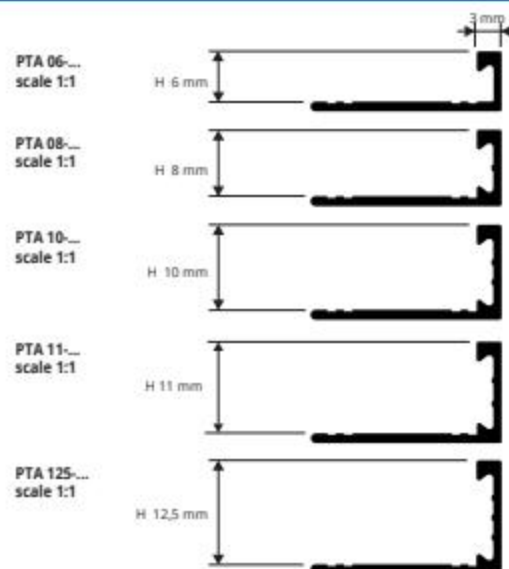


The code of the selected colour must be added to the article code.
E.g.: PTA 08... (chosen colour Stone white) PTA 08-SL01.


COLOURS

KALEIDOS

STONE LINE						
						
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone crystal gray	SL07 - Stone antragray
						
SL08 - Stone antradark	SL09 - Stone bronze	SL10 - Stone corten	SL12 - Stone black	SL13 - Stone oyster grey	SL14 - Stone taupe grey	SL15 - Stone grey smoke
						
SL16 - Stone grey gun	SL17 - Stone tobacco	SL18 - Stone white cement				
STONE LINE - ONLY IN H10						
						
SL19 - Stone Sahara	SL20 - Stone Cement Grey	SL21 - Blue Grey				

EASY LINE		
		
EYP01 - MATT white varnished (RAL 9016)	EYP11 - MATT black varnished	
		
EY151 - EASY Hazel Brown	EY006 - EASY Light Grey	EY007 - EASY Beige
		
EY008 - EASY Dark Grey	EY109 - EASY Warm Grey	EY110 - EASY Dark Beige

EXAMPLES FOR LAYING METHODS

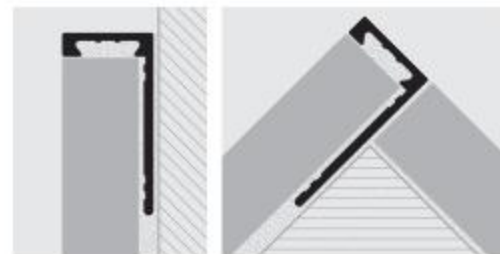

1. Choose "PROTERMINAL" according to the tile thickness and desired finish (color).
2. Cut "PROTERMINAL" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROTERMINAL" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

CAPSULES THREE-WAYS JOINTS

STONE LINE ALUMINIUM

CAPSULES STONE LINE - pack 1 Pcs

Article	H mm	€/Pc
CPTA 06-SL.../1	6	8,25
CPTA 08-SL.../1	8	8,25
CPTA 10-SL.../1	10	8,25
CPTA 10-SL19/1	10	8,25
CPTA 10-SL20/1	10	8,25
CPTA 10-SL21/1	10	8,25
CPTA 11-SL.../1	11	8,25
CPTA 125-SL.../1	12,5	8,25

CAPSULES EASY LINE - pack 1 Pcs

Article	H mm	€/Pc
CPTA 08-EY151/1	8	8,25
CPTA 08-EY006/1	8	8,25
CPTA 08-EY007/1	8	8,25
CPTA 10-EYP.../1	10	8,25
CPTA 10-EY.../1	10	8,25


The code of the selected colour must be added to the article code.
E.g.: CPTA 10-EY.../1 (chosen colour Hazel Brown) CPTA 10-EY151/1.




PROLISTEL ACC

POLISHED, BRUSHED
STAINLESS STEEL AISI 304/1.4301-V2A

PROLISTEL ACC is a listel in polished, brushed, sanded stainless steel AISI 304/1.4301-V2A with a flat and U-shaped (internal use) visible surface, suitable to decorate the wall coverings in ceramic, mosaic and natural stone. Its particular section and availability in different finishes, make **PROLISTEL ACC** a much sought after profile. It can be used with the range of PROJOLLY profiles to decorate the wall coverings and to allow an elegant workmanlike application.

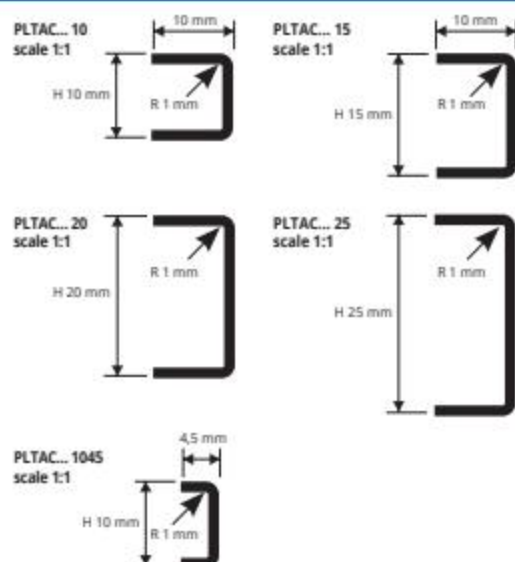

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

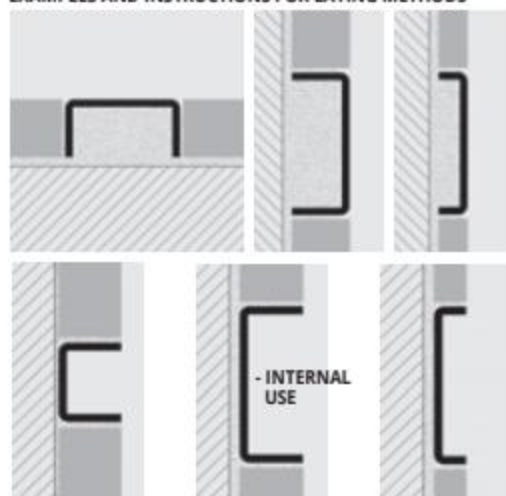

1. Choose "PROLISTEL ACC" according to the width and desired finish. 2. Cut "PROLISTEL ACC" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press "PROLISTEL ACC" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 8/10mm

Article	HxL mm	€/lm	€/Pc
PLTAC 10	10 x 10	7,44	20,09
PLTAC 1045	10 x 4,5	7,12	19,22
PLTAC 15	15 x 10	9,90	26,73
PLTAC 20	20 x 10	13,20	35,64
PLTAC 25	25 x 10	16,51	44,58

Brushed STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 8/10mm

Article	HxL mm	€/lm	€/Pc
PLTACS 10	10 x 10	8,92	24,08
PLTACS 1045	10 x 4,5	9,07	24,49
PLTACS 15	15 x 10	12,88	34,78
PLTACS 20	20 x 10	17,15	46,31
PLTACS 25	25 x 10	19,01	51,33

COLOURS



PROLISTEL P OTT is a decorative listel in polished, chromed and antique brass with a flat visible surface. The profile is suitable to decorate the wall coverings in ceramic, mosaic and natural stone. Its particular section and availability in different finishes and two widths, make **PROLISTEL P OTT** a much sought after profile. It could be matched with PROJOLLY, PROJOLLY SQUARE e PROTERMINAL profiles to decorate the wall coverings and to allow an elegant workmanlike application.

PROLISTEL P OTT

POLISHED, CHROMED,
ANTIQUE BRASS



PLTP... 25
scale 1:1



POLISHED, CHROMED AND ANTIQUE BRASS thermo packed - Bar
length 2,7 lm - pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PLTPOL 25	25	29,08	78,52
PLTPOC 25	25	43,10	116,37
PLTPOB 25	25	63,33	170,99

COLOURS

OL - Polished brass	OC - Chromed brass	OB - Antique brass

EXAMPLES AND INSTRUCTIONS FOR LAYING



1. Choose "PROLISTEL P OTT" according to the width and desired finish. 2. Cut "PROLISTEL P OTT" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press "PROLISTEL P OTT" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROLISTEL LED is a listel in anodized and polished aluminium equipped with an integrated LED lighting system that can generate a cold, hot and neutral suffused light. It is suitable to decorate the wall coverings in ceramic, mosaic and natural stone. Its particular section and availability in different finishes, make **PROLISTEL LED** a much sought after profile that decorates the wall coverings.

PROLISTEL LED

ANODIZED AND POLISHED ALUMINIUM



PLTLED... 20
scale 1:1



ANODIZED ALUM. SILVER, POLISHED CHROME ALUMINIUM
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm
ADAPTOR LED, LED & FLAT NOT INCLUDED

Article	H mm	€/lm	€/Pc
PLTLEDAA 20	20	12,78	34,51
PLTLEDBC 20	20	14,46	39,04

ADHESIVE FLEXIBLE LED COIL
length 5 lm - pack. 1 ROLL

Article	€/lm	€/Pack
LEDN	23,14	115,70
LEDF	23,14	115,70
LEDC	23,14	115,70

COLOURS

AA - Anodized silver alum.	BC - Polished chrome alum.

POLYCARBONATE FLAT bar length 2,7 lm - pack. 20 Pc - 54 lm
(AL = transparent / AO = matt)

Article	€/lm	€/Pc
PIAL 17	5,31	14,34
PIAO 17	5,31	14,34

END CAPS - R/L (1 right & 1 left)

Article	H mm	€/Pack
TPLTLEDAA 20/1	20	7,52
TPLTLEDBC 20/1	20	7,52


LED ADAPTOR AC/DC 75W - 12V (15 lm)

Article	€/Pc
ALL 7512	84,74

LED ADAPTOR AC/DC 25W - 12V (5 lm)

Article	€/Pc
ALL 2512	58,11

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

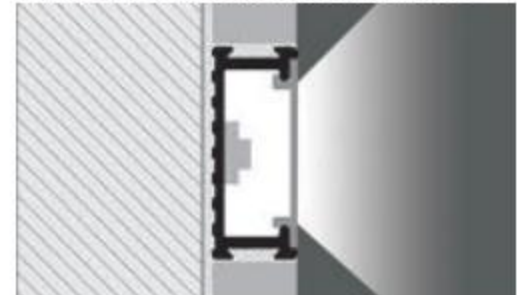



1. Choose "PROLISTEL LED" according to the width and desired finish. 2. Cut "PROLISTEL LED" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press "PROLISTEL LED" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROLISTEL P ALL

ANODIZED, POLISHED, BRUSHED
AND STONE LINE ALUMINIUM

PROLISTEL P ALL is a decorative listel in anodized, polished, brushed and varnished Stone Line aluminium with a flat visible surface. The profile is suitable to decorate the wall coverings in ceramic, mosaic and natural stone. Its particular section and availability in different finishes and two widths, make **PROLISTEL P ALL** a much sought after profile. It could be matched with PROJOLLY SQUARE e PROTERMINAL profiles to decorate the wall coverings and to allow an elegant workmanlike application.

NEWS
KALEIDOS

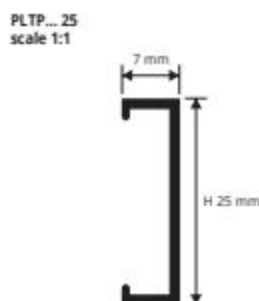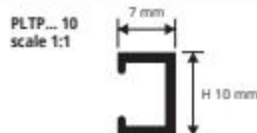

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROLISTEL P ALL" according to the width and desired finish. 2. Cut "PROLISTEL P ALL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press "PROLISTEL P ALL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

ANODIZED ALUMINIUM

thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTPAA 10	10	5,24	14,15
PLTPAO 10	10	5,55	14,99
PLTPAR 10	10	7,25	19,58
PLTPAT 10	10	7,25	19,58
PLTPNEO 10	10	7,33	19,79
PLTPAA 25	25	8,43	22,76
PLTPAO 25	25	8,82	23,81
PLTPAT 25	25	11,20	30,24
PLTPNEO 25	25	11,43	30,86

POLISHED BRUSHED ALUMINIUM

thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTPBS 10	10	7,59	20,49
PLTPBOS 10	10	7,97	21,52
PLTPTS 10	10	10,09	27,24
PLTPNS 10	10	10,21	27,57
PLTPBS 25	25	10,90	29,43
PLTPBOS 25	25	11,42	30,83
PLTPNS 25	25	13,55	36,59

POLISHED ALUMINIUM

thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTPBC 10	10	7,54	20,36
PLTPBO 10	10	7,91	21,36
PLTPBR 10	10	9,74	26,30
PLTPBT 10	10	9,74	26,30
PLTPBN 10	10	9,86	26,62
PLTPBC 25	25	10,90	29,43
PLTPBO 25	25	11,42	30,83
PLTPBR 25	25	12,29	33,18
PLTPBT 25	25	12,29	33,18
PLTPBN 25	25	12,57	33,94

STONE LINE ALUMINIUM

thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PLTPA 10-SL01	10	8,00	21,60
PLTPA 10-SL08	10	8,00	21,60
PLTPA 10-...	10	8,00	21,60
PLTPA 25-SL01	25	12,83	34,64
PLTPA 25-SL08	25	12,83	34,64
PLTPA 25-...	25	12,83	34,64

COLOURS

ANODIZED				POLISHED				BLACK LINE		
AA - Anodized silver aluminium	AR - Anodized copper aluminium	AT - Anodized titanium aluminium	AO - Anodized gold aluminium	BC - Polished chrome aluminium	BO - Polished gold aluminium	BR - Polished copper aluminium	BT - Polished titanium aluminium	BN - Polished black aluminium	NEO - Anodized black aluminium	NS - Polished brushed black aluminium
POLISHED BRUSHED										
BS - Polished brushed aluminium	BOS - Polished brushed gold aluminium	TS - Polished brushed titanium aluminium	RS - Polished brushed copper aluminium							

KALEIDOS

STONE LINE						
SL02 - Stone cream	SL03 - Stone greywary	SL04 - Stone sand	SL05 - Stone gray	SL06 - Stone cristal gray	SL08 - Antrdark	SL13 - Stone oyster grey

PROBORD is a round corner bead profile in polished and brushed stainless steel AISI 304/1.4301-V2A suitable to protect the external corner of wall coverings in ceramic. Its particular section and availability in different finishes, make **PROBORD** a much sought after profile. It can be used with the range of PROLISTEL and PROSHELL profiles to obtain an elegant workmanlike application even in environments subject to high mechanical stresses.

PROBORD

POLISHED AND BRUSHED STAINLESS STEEL
AISI 304/1.4301-V2A



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm - 10/10mm

Article	H mm	€/lm	€/Pc
PEBDAC 08	08	20,39	55,05
PEBDAC 10	10	21,18	57,19
PEBDAC 125	12,5	21,71	58,62

BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm - 10/10mm

Article	H mm	€/lm	€/Pc
PEBDACS 08	08	23,88	64,48
PEBDACS 10	10	24,52	66,20
PEBDACS 125	12,5	25,32	68,36

COLOURS



AC - Polished stainless steel AISI 304/1.4301-V2A
ACS - Brushed stainless steel AISI 304/1.4301-V2A


SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS




1. Choose "PROBORD" according to the tile thickness and desired finish.
2. Cut "PROBORD" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROBORD" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.


PEBDAC/ACS 08
scale 1:1

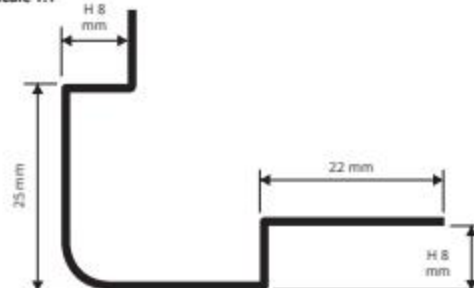

PEBDAC/ACS 10
scale 1:1

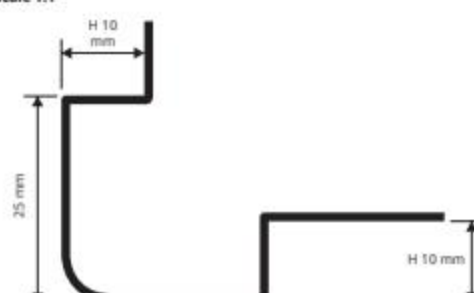

PEBDAC/ACS 125
scale 1:1

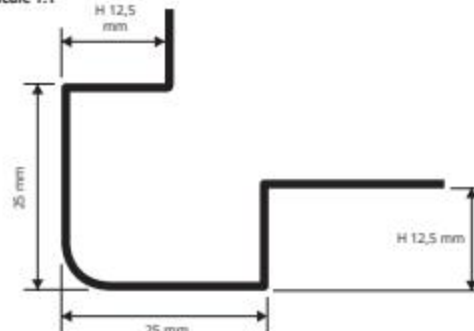

PROEDGE FLEX

SHOCKPROOF NON - TOXIC CO-EXTRUDED
COLORED VINYL RESIN



CO-EXTRUDED PVC - L 40 X 40 mm
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	H mm	€/lm	€/Pc
PFC01 40	40	8,57	23,14

CO-EXTRUDED PVC WITH ADHESIVE - L 40 X 40 mm
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm


Article	H mm	€/lm	€/Pc
PFC01 40A	40	11,47	30,97

COLOURS



01 - White

PFC... 40/40A
scale 1:2

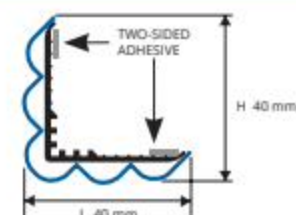

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS




1. Choose "PROEDGE FLEX" according to the desired colour.
2. Cut "PROEDGE FLEX" to the desired length.
3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid.
4. When the surface is perfectly dry, remove the protective film (version with adhesive), place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

PROEDGE AC

POLISHED AND BRUSHED
STAINLESS STEEL AISI 304/1.4301-V2A

PROEDGE AC is a corner bead profile in polished and brushed stainless steel AISI 304/1.4301-V2A, with a radius of curvature of 1.5 mm, suitably shaped to protect the external corner of wall coverings. Its particular section, the availability in two finishes and different widths make **PROEDGE AC** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

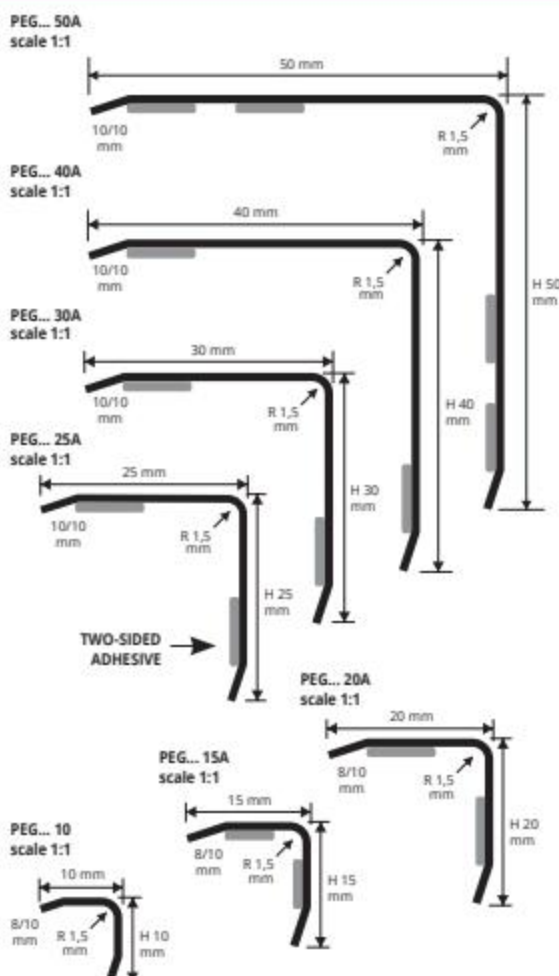

POLISHED AND BRUSHED STAINLESS STEEL
with protective film - bar length 2,7 lm - pack. 81 lm - 8/10 mm

Article	LxH mm	€/lm	€/Pc
PEGAC 10	10 x 10	6,70	18,09
PEGACS 10	10 x 10	8,59	23,19

POLISHED AND BRUSHED STAINLESS STEEL WITH ADHESIVE
with protective film - bar length 2,7 lm - pack. 81 lm - 8/10 mm

Article	LxH mm	€/lm	€/Pc
PEGAC 15A	15 x 15	9,87	26,65
PEGACS 15A	15 x 15	11,77	31,78
PEGAC 20A	20 x 20	11,19	30,21
PEGACS 20A	20 x 20	13,10	35,37

For items without adhesive, write the item without the last A.
E.g.: PEGAC 15 and deduct 1,50 €/lm from the gross price.

COLOURS



Suitable for use in contact with foodstuffs.



POLISHED AND BRUSHED STAINLESS STEEL WITH ADHESIVE
with protective film - bar length 2,7 lm - pack. 40,5 lm - 10/10 mm

Article	LxH mm	€/lm	€/Pc
PEGAC 25A	25 x 25	12,50	33,75
PEGACS 25A	25 x 25	14,46	39,04
PEGAC 30A	30 x 30	17,76	47,95
PEGACS 30A	30 x 30	20,09	54,24

For items without adhesive write the item without the last A.
E.g.: PEGAC 10 and deduct 1,50 €/lm from the gross price.

POLISHED AND BRUSHED STAINLESS STEEL WITH ADHESIVE
with protective film - bar length 2,7 lm - pack. 27 lm - 10/10 mm

Article	LxH mm	€/lm	€/Pc
PEGAC 40A	40 x 40	22,50	60,75
PEGACS 40A	40 x 40	25,48	68,80
PEGAC 50A	50 x 50	26,17	70,66
PEGACS 50A	50 x 50	28,28	76,36

For items without adhesive, write the item without the last A.
E.g.: PEGAC 40 and deduct 1,50 €/lm from the gross price.

PEG... 40A / 50A on demand with thickness 12/10.
Quantity, timing and prices to be agreed.

PROEDGE OT

POLISHED AND CHROMED BRASS

PROEDGE OT is a corner bead profile in polished and chromed brass, with a radius of curvature of 1.5 mm, suitably shaped to protect the external corner of wall coverings. Its particular section, the availability in two finishes and different widths make **PROEDGE OT** a much sought-after profile that allows an elegant workmanlike application.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROEDGE OT" according to the desired finish and width.
2. Cut "PROEDGE OT" to the desired length.
3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid.
4. When the surface is perfectly dry, remove the protective film, place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

COLOURS



POLISHED AND CHROMED BRASS
bar length 2,7 lm - pack. 54 lm - 8/10 mm

Article	LxH mm	€/lm	€/Pc
PEGOL 10	10 x 10	11,72	31,64
PEGOC 10	10 x 10	16,63	44,90

POLISHED AND CHROMED BRASS WITH ADHESIVE
bar length 2,7 lm - pack. 54 lm - 8/10 mm

Article	LxH mm	€/lm	€/Pc
PEGOL 15A	15 x 15	13,39	36,15
PEGOC 15A	15 x 15	19,90	53,73
PEGOL 20A	20 x 20	17,15	46,31
PEGOC 20A	20 x 20	24,53	66,23

For items without adhesive, write the item without the last A.
E.g.: PEGOL 15 and deduct 1,50 €/lm from the gross price.



POLISHED BRASS WITH ADHESIVE
bar length 2,7 lm - pack. 27 lm - 10/10 mm

Article	LxH mm	€/lm	€/Pc
PEGOL 25A	25 x 25	18,10	48,87
PEGOL 30A	30 x 30	24,60	66,42

MIRROR LINE

MIRROR LINE

PROEDGE AL is a corner bead profile in anodized and varnished aluminium suitably shaped to protect the external corner of wall coverings. Its particular section and the availability in four different finishes make **PROEDGE AL** a much sought-after profile that allows a workmanlike application.

PROEDGE AL

ANODIZED AND VARNISHED ALUMINIUM



ANODIZED ALUM. (gold, silver and bronze) **WITH ADHESIVE**
thermo packed - bar length 2,7 lm - pack. 30 Pcs - 81 lm

Article	LxH mm	€/lm	€/Pc
PEGAO 25A	25 x 25	7,31	19,74
PEGAA 25A	25 x 25	7,31	19,74
PEGAB 25A	25 x 25	7,31	19,74

For items without adhesive, write the article without the last A.
E.g.: PEGAO 25 and deduct 1,50 €/lm from the gross price.

WHITE VARNISHED ALUMINIUM - WITH ADHESIVE
thermo packed - bar length 2,7 lm - pack. 30 Pcs - 81 lm

Article	LxH mm	€/lm	€/Pc
PEGA 25-01A	25 x 25	9,12	24,62

COLOURS

ANODIZED		
AO - Anodized gold alum.	AA - Anodized silver alum.	AB - Anod. bronze alum.
01 - White varnished alum.		

PEG... 25A
PEGA 25-01A
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROEDGE AL" according to the desired finish and width.
2. Cut "PROEDGE AL" to the desired length.
3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid.
4. When the surface is perfectly dry, remove the protective film, place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

PROEDGE PVC is a corner bead profile in shockproof non-toxic co-extruded white vinyl resin suitably shaped to protect the external corner of wall coverings. Its particular section and the availability in four different widths make **PROEDGE PVC** a much sought-after profile that allows a workmanlike application.

PROEDGE PVC

SHOCKPROOF NON - TOXIC CO-EXTRUDED
WHITE VINYL RESIN



SHOCKPROOF VINYL RESIN WITH ADHESIVE
bar length 2,7 lm - pack. 30 Pcs - 81 lm

Article	LxH mm	€/lm	€/Pc
PEG 25-01A	25 x 25	6,18	16,69
PEG 30-01A	30 x 30	6,99	18,87

SHOCKPROOF VINYL RESIN WITHOUT ADHESIVE
bar length 2,7 lm - pack. 30 Pcs - 81 lm

Article	LxH mm	€/lm	€/Pc
PEG 25-01	25 x 25	4,21	11,37
PEG 30-01	30 x 30	5,04	13,61

SHOCKPROOF VINYL RESIN WITH ADHESIVE
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	LxH mm	€/lm	€/Pc
PEG 40-01A	40 x 40	7,81	21,09
PEG 50-01A	50 x 50	8,64	23,33


SHOCKPROOF VINYL RESIN WITHOUT ADHESIVE
bar length 2,7 lm - pack. 15 Pcs - 40,5 lm

Article	LxH mm	€/lm	€/Pc
PEG 40-01	40 x 40	5,85	15,80
PEG 50-01	50 x 50	6,68	18,04

COLOURS

01 - White

1. Choose "PROEDGE PVC" according to the desired width.
2. Cut "PROEDGE PVC" to the desired length.
3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid.
4. When the surface is perfectly dry, remove the protective film, place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

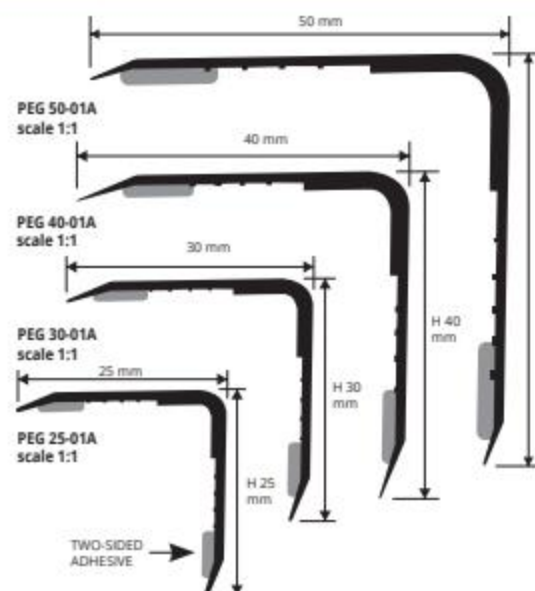


EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS




PROINTER AC

POLISHED AND BRUSHED
STAINLESS STEEL AISI 316/1.4401-V4A

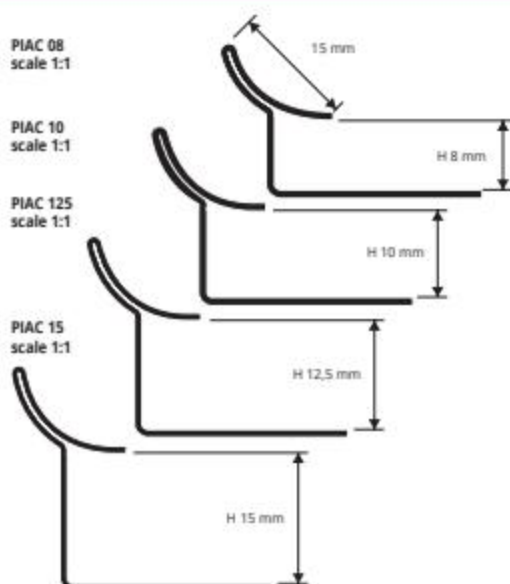

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

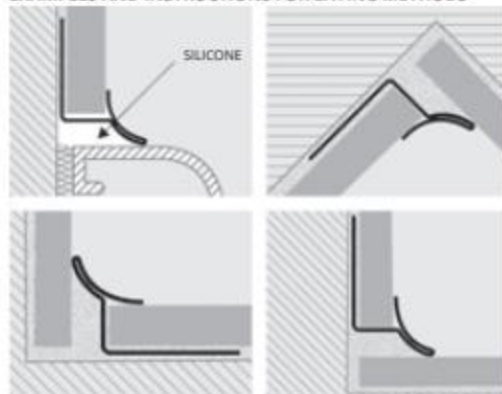

1. Choose "PROINTER AC 316" according to the tile thickness and desired finish.
2. Cut "PROINTER AC 316" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROINTER AC 316" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROINTER AC 316 is a cove-shaped profile in polished, super polished and brushed stainless steel AISI 316 / 1.404 - V4A. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where high resistance to mechanical and chemical stresses are required. Its particular section and the availability in three finishes and special pieces, such as internal and external corners, make **PROINTER AC 316** a much sought after profile. The profile is easy to match with the wall covering and allows a workmanlike application even in environments subject to high mechanical stresses.



POLISHED STAINLESS STEEL AISI 316/1.4404-V4A
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PIACM 08	8	19,50	52,65
PIACM 10	10	20,62	55,67
PIACM 125	12,5	26,29	70,98



BRUSHED STAINLESS STEEL AISI 316/1.4404-V4A
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PIACMS 08	8	24,45	66,02
PIACMS 10	10	28,03	75,68
PIACMS 125	12,5	29,07	78,49


COLOURS



ACM - Polished stainless steel
AISI 316/1.4404-V4A

ACMS - Brushed stainless steel
AISI 316/1.4404-V4A

JOINTS CAN ALSO BE USED FOR PROINTER KL ACC

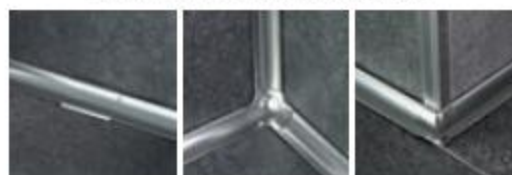

PROINTER JUNCTIONS

Polished stainless steel AISI 316/1.4404-V4A

Article	€/Pc
RIPISACM/1	7,73
RITPISACM/1	7,73
REPISACM/1	7,73
GPISACM/1	4,64
TPISACM/1	6,70

PROINTER JUNCTIONS

Brushed stainless steel AISI 316/1.4404-V4A

Article	€/Pc
RIPISACMS/1	8,24
RITPISACMS/1	8,24
REPISACMS/1	8,24
GPISACMS/1	5,15
TPISACMS/1	7,21


PROINTER KL ACC

STAINLESS STEEL AISI 316/1.4401-V4A

PIKL... 15
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

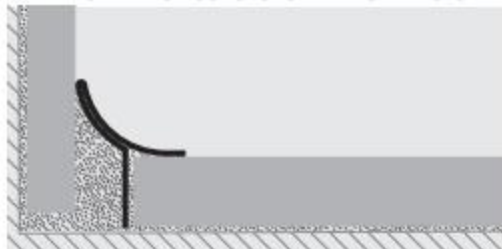

1. Choose "PROINTER KL ACC 316" according to the desired finish.
2. Cut "PROINTER KL ACC 316" to the desired length. 3. Apply the silicone along the floor-wall connection. 4. Press the arrowhead of "PROINTER KL ACC 316" into the silicone evenly until it is completely adherent to the floor and wall.

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS

PROINTER KL ACC 316 is a cove-shaped profile in stainless steel AISI 316/1.4404-V4A. The profile allows to connect the floor and wall coverings in ceramic and mosaic also with low thickness. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where good resistance to mechanical and chemical stresses are required. Its particular section makes **PROSHELL KL ALL 316** a much sought after profile.



POLISHED STAINLESS STEEL AISI 316/1.4404-V4A
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PIKLACM 15	15	16,89	45,6

COLOURS



ACM - Polished stainless steel
AISI 316/1.4404-V4A

ACMS - Brushed stainless steel
AISI 316/1.4404-V4A



BRUSHED STAINLESS STEEL AISI 316/1.4404-V4A
bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm



Article	H mm	€/lm	€/Pc
PIKLACMS 15	15	21,34	57,62

IT IS POSSIBLE TO USE THE JOINTS OF PROINTER AC

PROINTER KL ACC is a cove-shaped profile in stainless steel AISI 304/1.4301-V2A. The profile allows to connect the floor and wall coverings in ceramic and mosaic also with low thickness. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where good resistance to mechanical and chemical stresses are required. Its particular section makes **PROSHELL KL ALL** a much sought after profile.


PROINTER KL ACC

POLISHED AND BRUSHED
STAINLESS STEEL AISI 316/1.4401-V4A



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 8/10mm

Article	H mm	€/lm	€/Pc
PIKLAC 15	15	13,00	35,10

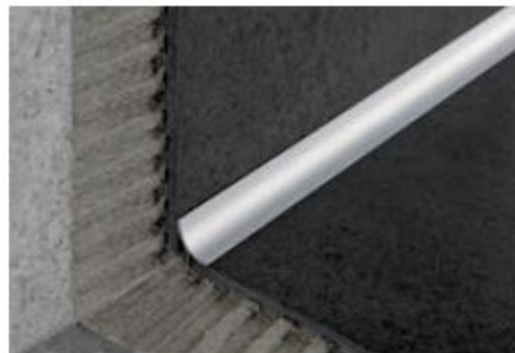

BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack. 40 Pcs - 108 lm - 8/10mm


Article	H mm	€/lm	€/Pc
PIKLACS 15	15	16,42	44,33

COLOURS




SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS

PIKL... 15
scale 1:1

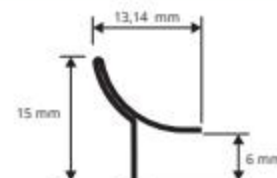

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

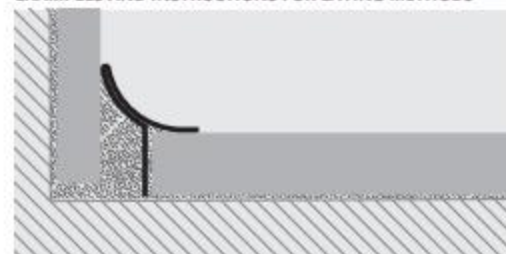

1. Choose "PROINTER KL ACC" according to the desired finish. 2. Cut "PROINTER KL ACC" to the desired length. 3. Apply the silicone along the floor-wall connection. 4. Press the arrowhead of "PROINTER KL ACC" into the silicone evenly until it is completely adherent to the floor and wall.

PROSHELL KL ALL is a cove-shaped profile in polished and chromed brass and anodized and polished aluminium. The profile allows to connect the floor and wall coverings in ceramic and mosaic also with low thickness. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where good resistance to mechanical and chemical stresses are required. Its particular section and availability in five different finishes, make **PROSHELL KL ALL** a much sought after profile.

PROINTER KL ALL

POLISHED AND CHROMED BRASS AND
ANODIZED AND POLISHED ALUMINIUM



POLISHED / CHROMED BRASS thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PIKLLOL 045	4,5	15,70	42,39
PIKLLOC 045	4,5	24,53	66,23

CAPS - VARNISHED PLASTIC

Article	€/Pcs
TPIKLLOL .../1	1,69
TPIKLLOC .../1	1,69



POLISHED CHROME ALUMINIUM / GOLD thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PIKLBC 045	4,5	8,69	23,46
PIKLBO 045	4,5	8,69	23,46

ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PIKLAA 045	4,5	6,09	16,44


CAPS - VARNISHED PLASTIC

Article	€/Pcs
TPIKLAA .../1	1,69
TPIKLBC .../1	1,69
TPIKLBO .../1	1,69

COLOURS



PIKL... 045
scale 1:1

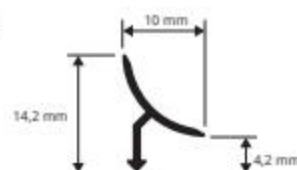

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROINTER KL ALL" according to the desired finish. 2. Cut "PROINTER KL ALL" to the desired length. 3. Apply the silicone along the floor-wall connection. 4. Press the arrowhead of "PROINTER KL ALL" into the silicone evenly until it is completely adherent to the floor and wall.

COLOURS



PROINTER AL

ANODIZED AND POLISHED ALUMINIUM

PROINTER AL is a cove-shaped profile in anodized and polished aluminium. It is particularly suitable to ensure cleanliness and hygiene is suitable in indoors environment where good resistance to mechanical and chemical stresses are required. Its particular section and the availability in four finishes and special pieces, such as internal and external corners, make **PROINTER AL** a much sought after profile. The profile is easy to match with the wall covering and allows a workmanlike application.


PL... 08
scale 1:1



PL... 10
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

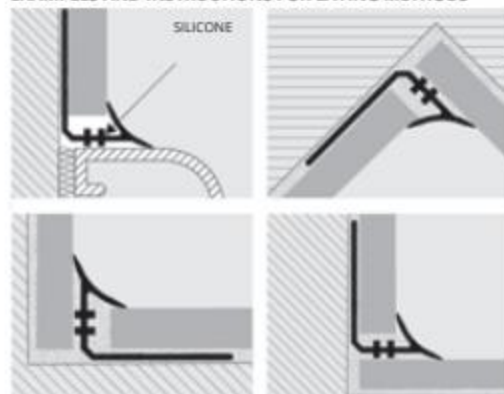

1. Choose "PROINTER AL" according to the tile thickness and desired finish.
2. Cut "PROINTER AL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROINTER AL" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



ANODIZED GOLD OR SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PIAA 08	8	7,18	19,39
PIAA 10	10	7,66	20,68

INTERNAL, EXTERNAL, THREE-WAYS PROINTER CORNER JOINTS ANODIZED GOLD

Article	€/Pc
REPIAA	14,37
RIPIAA	15,02
RITPIAA	14,37

COLOURS

AA - Anodized silver alum.	BC - Polished chrome alum.
----------------------------	----------------------------



POLISHED GOLD OR CHROMED ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PIBC 08	8	11,05	29,84
PIBC 10	10	12,94	34,94

INTERNAL, EXTERNAL, THREE-WAYS PROINTER CORNER JOINTS POLISHED GOLD

Article	€/Pc
REPIBC	17,30
RIPIBC	17,96
RITPIBC	17,30

REPI...



PROTERMINAL, PROJOLLY SQUARE
, PROJOLLY QUART
(NO PROINTER)


RIPI...



PROINTER is a cove-shaped profile in shockproof non - toxic colored vinyl resin. It is particularly suitable to ensure cleanliness and hygiene in public and industrial environments. Its particular section and the availability in different colors and special pieces, such as internal and external corners, make **PROINTER** a much sought after profile. It can be easily matched with the wall covering and allows an elegant workmanlike application.

PROINTER

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN

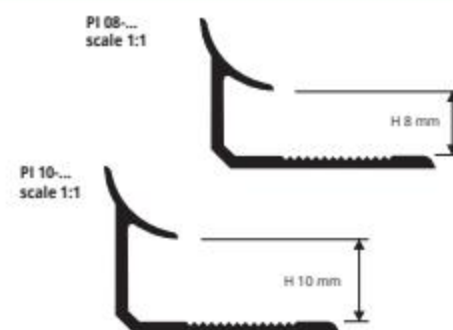

GAMMA COLORI

01 - White	0106 - White Ivory	02 - Light grey
03 - Cement gray	11 - Black	18 - Grey


NON-TOXIC SHOCKPROOF VINYL RESIN

bar length 2,7 lm - pack 20 Pcs - 54 lm (white 108 lm)

Article	H mm	€/lm	€/Pc
PI 08-...	8	1,67	4,51
PI 10-...	10	1,90	5,13

The code of the selected colour must be added to the article code.
E.g.: PI 10-... (chosen colour white) PI 10-01.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

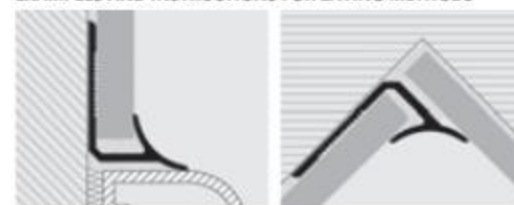

1. Choose "PROINTER" according to the tile thickness and desired colour. 2. Cut "PROINTER" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROINTER" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.

CORNER JOINTS

SHOCKPROOF NON - TOXIC COLORED VINYL RESIN

INTERNAL, EXTERNAL, THREE-WAYS PROINTER CORNER JOINTS

VARNISHED PLASTIC (Vinyl Resin) - pack 1 Pcs

Article	€/pc.
REPI .../1	5,40
RIPi .../1	5,40
RITPI .../1	5,40


GAMMA COLORI

01 - White	0106 - White Ivory	02 - Light grey
03 - Cement gray	11 - Black	18 - Grey

The code of the selected colour must be added to the article code.
E.g.: RIPi.../1 (Chosen colour white 01) RIPi 01/1.
PLEASE CHOOSE THE DESIRED COLOUR CODE FROM OUR COLOUR CHART. SPECIFICATION OF THE HEIGHT IS NOT REQUIRED.



RIPi...

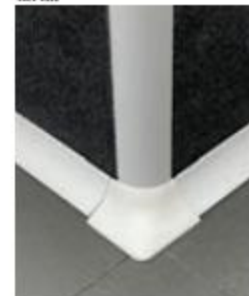

REPI...





RITPI...

PROSHELL

POLISHED AND BRUSHED
STAINLESS STEEL AISI 316L/1.4404-V4A

PROSHELL is a cove-shaped profile in polished and brushed stainless steel AISI 316L/1.4404-V4A particularly suitable to ensure cleanliness and hygiene in every kind of environment where high resistance to mechanical and chemical stresses are required. Its particular section and the availability in two finishes, four heights and special pieces, such as internal and external corners, end caps and junctions, make **PROSHELL** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

internal seal hygienic profiles

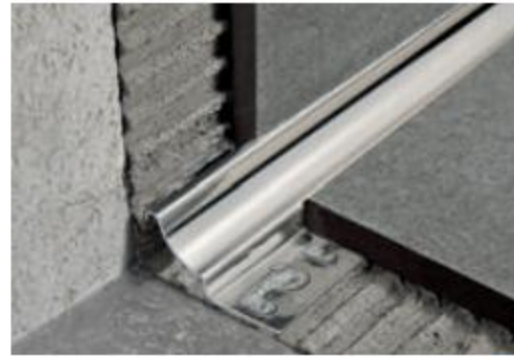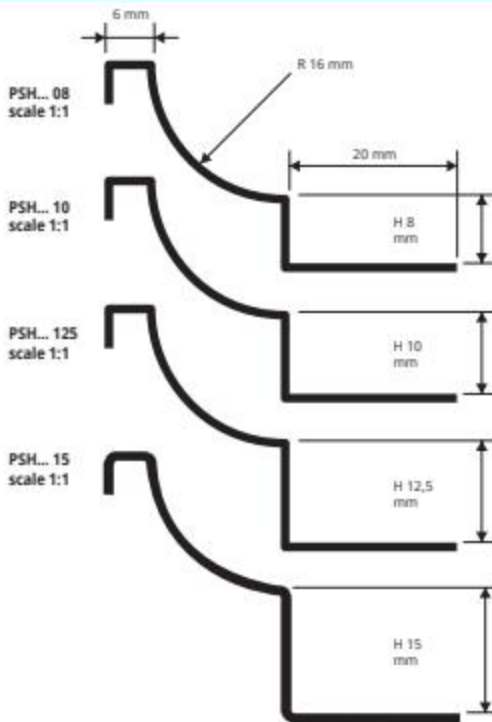

POLISHED STAINLESS STEEL AISI 316L/1.4404-V4A
with protective film
- bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PSHACM 08	8	23,08	62,32
PSHACM 10	10	24,29	65,58
PSHACM 125	12,5	25,83	69,74
PSHACM 15	15	27,20	73,44

BUY PROTERMINAL PVC TO CREATE THE DUAL HEIGHT (SEE BELOW):

Use proterminal PT 06 to reach H 8 mm
Use proterminal PT 08 to reach H 10 mm



BRUSHED STAINLESS STEEL AISI 316L/1.4404-V4A
with protective film
- bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PSHACMS 08	8	25,66	69,28
PSHACMS 10	10	26,96	72,79
PSHACMS 125	12,5	27,53	74,33
PSHACMS 15	15	29,25	78,98

Use proterminal PT 10 to reach H12,5 mm
Use proterminal PT 12,5 to reach H 15 mm

EXAMPLES AND INSTRUCTIONS FOR LAYING

1. Choose "PROSHELL" according to the tile thickness and desired finish. (*) 2. Cut "PROSHELL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROSHELL" into the adhesive. 4. Lay the tiles on floor and wall aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. (*) to obtain double height, use the joint of the same size as the selected profile and choose the PROTERMINAL PVC according to the required thickness, see INSTRUCTIONS FOR LAYING.

COLOURS




ACM - Polished stainless steel
AISI 316L/1.4404-V4A

ACMS - Brushed stainless steel
AISI 316L/1.4404-V4A

PREWELDED CORNER, CAPS and THREE-WAYS JOINTS

POLISHED AND BRUSHED STAINLESS STEEL

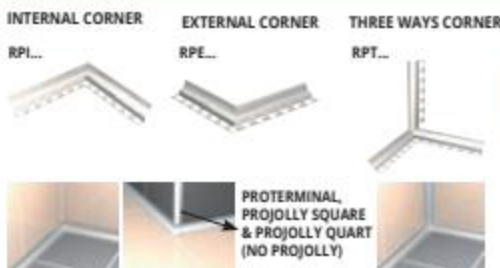

PREWELDED CORNER - POLISHED STAINLESS STEEL
L 100 mm

Article	H mm	€/Pc.
RPIACM ...	08/10/125	29,27
RPIACM 15	15	31,08
RPEACM ...	08/10/125	29,27
RPEACM 15	15	31,08
RPTACM ...	08/10/125	38,35
RPTACM 15	15	40,41

Specify height of joint: E.g.: RPI 8 for H 8 mm.

OVERLAPPING JOINTS
POLISHED AISI 316/1.4404 V4A STAINLESS STEEL

Article	€/Pc.
RPSIACM	9,07
RPSEACM	9,07
RPSTACM	9,07
GPSACM	4,17
TPSACM	4,17

PREWELDED CORNER - BRUSHED STAINLESS STEEL
L 100 mm

Article	H mm	€/Pc.
RPIACMS ...	08/10/125	31,42
RPIACMS 15	15	33,71
RPEACMS ...	08/10/125	31,42
RPEACMS 15	15	33,71
RPTACMS ...	08/10/125	40,41
RPTACMS 15	15	42,73



Specify height of joint: E.g.: RPI 8 for H 8 mm.

OVERLAPPING JOINTS
BRUSHED AISI 316/1.4404 V4A STAINLESS STEEL

Article	€/Pc.
RPSIACMS	9,53
RPSEACMS	9,53
RPSTACMS	9,53
GPSACMS	4,37
TPSACMS	4,37

END CAPS R / L - PLASTIC
pack. 2 Pcs (1 right and 1 left)
PLASTIC JOINTS


Article	€/Pc.
TPSHAC	9,68
TPSHACS	9,68
GISHN 08	4,15
GISHN 10	4,55
GISHN 125	4,99
GISHN 15	5,47

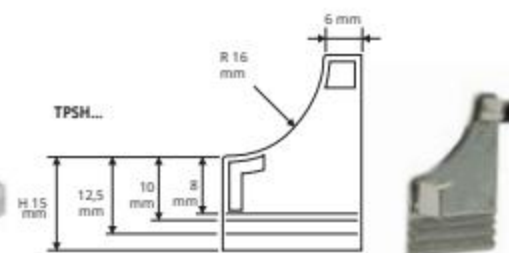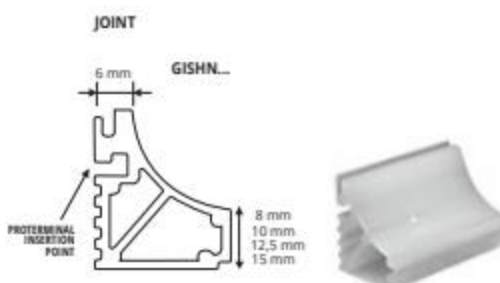

PROSHELL D ALL is a profile in anodized and polished aluminum with a visible 45° sloping surface. The profile allows to connect the floor and wall coverings in ceramic and mosaic with low thickness. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where good resistance to mechanical and chemical stresses are required. Its particular section and availability in three different finishes, make **PROSHELL D ALL** a much sought after profile.

PROSHELL D ALL

ANODIZED SILVER, POLISHED CHROME AND GOLD ALUMINIUM

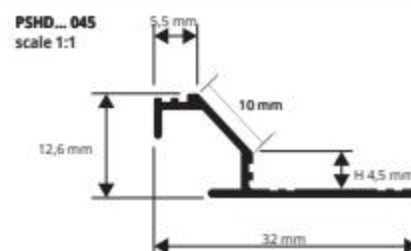

ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PSHDAA 045	4,5	8,57	23,14


POLISHED CHROME/GOLD ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PSHDBC 045	4,5	10,90	29,43
PSHDBO 045	4,5	10,90	29,43

COLOURS



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

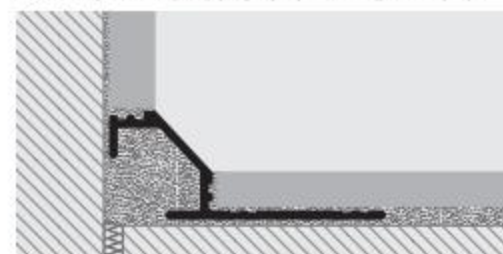

1. Choose "PROSHELL D ALL" according to the desired finish.
2. Cut "PROSHELL D ALL" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROSHELL D ALL" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROSHELL R ALL is a cove-shaped profile in anodized and polished aluminum. The profile allows to connect the floor and wall coverings in ceramic and mosaic with low thickness. It is particularly suitable to ensure cleanliness and hygiene in every kind of environment where good resistance to mechanical and chemical stresses are required. Its particular section and availability in three different finishes, make **PROSHELL R ALL** a much sought after profile.

PROSHELL R ALL

ANODIZED SILVER, POLISHED CHROME AND GOLD ALUMINIUM




ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PSHRAA 045	4,5	8,57	23,14


POLISHED CHROME/GOLD ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PSHRBC 045	4,5	10,90	29,43
PSHRBO 045	4,5	10,90	29,43

COLOURS

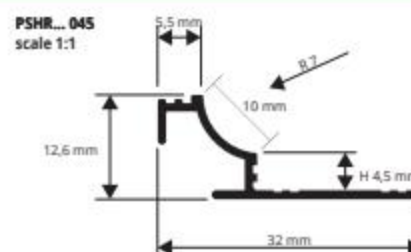

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



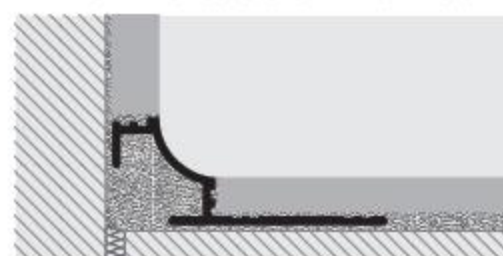


1. Choose "PROSHELL R ALL" according to the desired finish.
2. Cut "PROSHELL R ALL" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROSHELL R ALL" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROSHELL ALL

ANODIZED, POLISHED ALUMINIUM

PROSHELL ALL is a cove-shaped profile in anodized, polished and varnished aluminium particularly suitable to ensure cleanliness and hygiene in indoors environment where good resistance to mechanical and chemical stresses are required. Its particular section and the availability in three finishes, three heights and special pieces, such as internal and external corners, end caps and junctions, make **PROSHELL ALL** a much sought-after profile that allows a workmanlike application.

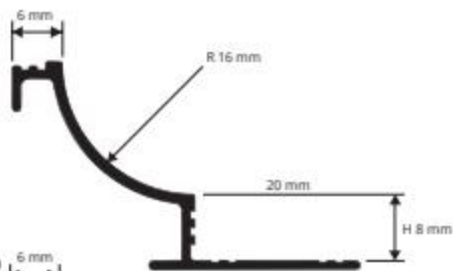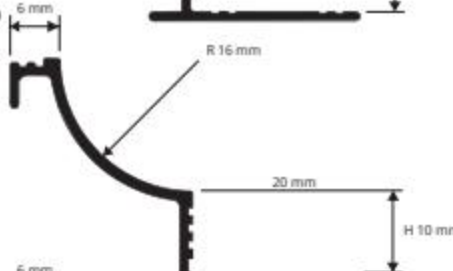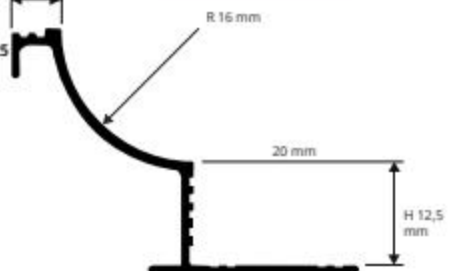PSH... 8
scale 1:1PSH... 10
scale 1:1PSH... 125
scale 1:1

BUY PROTERMINAL PVC OR ALUMINIUM
TO CREATE THE DUAL HEIGHT (SEE NEXT PIC):
Use proterminal PT 08 to reach H 10 mm
Use proterminal PT 10 to reach H 12,5 mm
Use proterminal PT 12,5 to reach H 15 mm



ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PSHAA 08	8	11,04	29,81
PSHAA 10	10	11,17	30,16
PSHAA 125	12,5	11,36	30,67

COLOURS


AA - Anod. Silver alum.	BC - Polished chrome alum.
-------------------------	----------------------------



POLISHED CHROME ALUMINIUM thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PSHBC 10	10	15,60	42,12

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

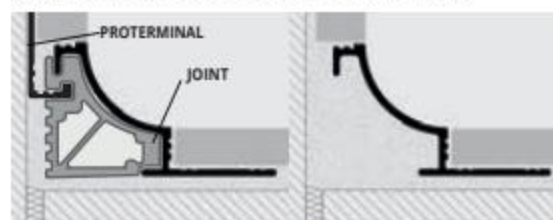

1. Choose "PROSHELL ALL" according to the tile thickness and desired finish. 2. Cut "PROSHELL ALL" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROSHELL ALL" into the adhesive. 4. Lay the tiles on floor and wall aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. (*) to obtain double height, use the joint of the same size as the selected profile and choose the PROTERMINAL PVC or ALUMINIUM according to the required thickness, see INSTRUCTIONS FOR LAYING.

CORNERS, END CAPS and JOINTS

SILVER ANODIZED, POLISHED CHROME ALUMINIUM / PLASTIC

INTERNAL CORNER
RPSH.../1EXTERNAL CORNER
RPSHE.../1END CAP
TPSH.../1JOINT
GISHN...

EXTERNAL/INTERNAL CORNER - ANODIZED SILVER ALUMINIUM

Article	H mm	€/Pc
RPSHIAA .../1	08/10/125	21,30
RPSHEAA .../1	08/10/125	21,30

EXTERNAL/INTERNAL CORNER POLISHED CHROME ALUMINIUM

Article	H mm	€/Pc
RPSHIBC 10/1	10	25,45
RPSHEBC 10/1	10	25,45

JOINTS IN RIGID GREY PLASTIC

Article	H mm	€/Pc
GISHN 08	8	4,15
GISHN 10	10	4,55
GISHN 125	12,5	4,99

END CAPS R / L - ANOD. ALU./POLISHED ALU.
pack. 2 Pcs (1 right and 1 left)

Article	H mm	€/Pack
TPSHAA 08	8	26,51
TPSHAA 10	10	26,51
TPSHBC 10	10	33,15
TPSHAA 125	12,5	33,15

NEWS
KALEICOS

PROSHELL ALL is a cove-shaped profile in anodized, polished and varnished aluminium particularly suitable to ensure cleanliness and hygiene in indoors environment where good resistance to mechanical and chemical stresses are required. Its particular section and the availability in three finishes, three heights and special pieces, such as internal and external corners, end caps and junctions, make **PROSHELL ALL** a much sought-after profile that allows a workmanlike application.

PROSHELL ALL

STONE LINE / EASY LINE ALUMINIUM



STONE LINE ALUMINIUM thermo packed
bar length 2,7 M - pack. 20 Pcs - 54 lm

Article	H mm	€/lm	€/Pc
PSHA 10-SL...	10	17,87	48,25
PSHA 125-SL...	12,5	18,18	49,09

The code of the selected colour must be added to the article code.
E.g.: PSHA 10-SL... (chosen colour stone white) PSHA 10-SL01.

EASY LINE ALUMINIUM thermo packed
bar length 2,7 M - pack. 20 Pcs - 54 lm


Article	H mm	€/lm	€/Pc
PSHA 10-EYP01	10	13,17	35,56
PSHA 10-EYP11	10	13,17	35,56
PSHA 125-EYP01	12,5	15,35	41,45
PSHA 125-EYP11	12,5	15,35	41,45




COLOURS KALEICOS

STONE LINE		
SL01 - Stone white	SL02 - Stone cream	SL04 - Stone sand
SL05 - Stone gray	SL12 - Stone black	
EASY LINE		
EYP01 - MATT white varnished (RAL 9016)	EYP11 - MATT black varnished	

1. Choose "PROSHELL ALL" according to the tile thickness and desired finish.
2. Cut "PROSHELL ALL" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROSHELL ALL" into the adhesive.
4. Lay the tiles on floor and wall aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile. (*) to obtain double height, use the joint of the same size as the selected profile and choose the PROTERMINAL PVC or ALUMINIUM according to the required thickness, see INSTRUCTIONS FOR LAYING.

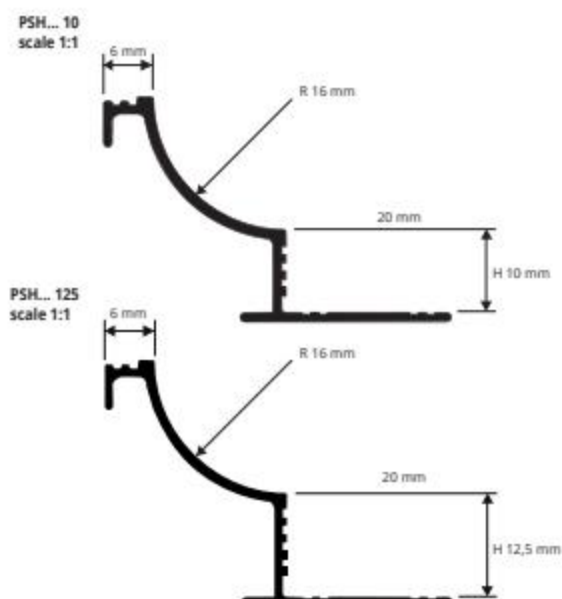

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

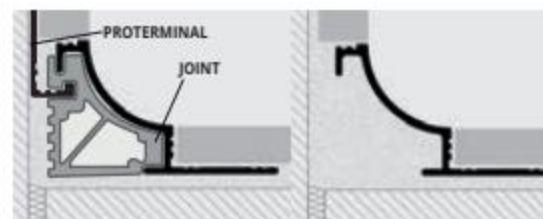

CORNERS, END CAPS and JOINTS

STONE LINE, EASY LINE ALUMINIUM / PLASTIC

EXTERNAL/INTERNAL CORNER - STONE LINE ALUMINIUM

Article	H mm	€/Pc
RPSHA ...-SL.../1	10/12,5	26,64
RPSHEA ...-SL.../1	10/12,5	26,64

END CAPS R / L - STONE LINE ALUMINIUM

pack. 2 Pcs (1 right and 1 left)

Article	H mm	€/Pack
TPSHA ...-SL.../1	10/12,5	17,46

JOINTS IN RIGID GREY PLASTIC

Article	H mm	€/Pc
GISHN 10	10	4,55
GISHN 125	12,5	4,99

EXTERNAL/INTERNAL CORNER - EASY LINE ALUMINIUM

Article	H mm	€/Pc
RPSHA 10-EYP01/1	10	26,64
RPSHA 10-EYP11/1	10	26,64
RPSHA 125-EYP01/1	125	26,64
RPSHA 125-EYP11/1	125	26,64
RPSHEA 10-EYP01/1	10	26,64
RPSHEA 10-EYP11/1	10	26,64
RPSHEA 125-EYP01/1	125	26,64
RPSHEA 125-EYP11/1	125	26,64

END CAPS R / L - EASY LINE ALUMINIUM

pack. 2 Pcs (1 right and 1 left)

Article	H mm	€/Pack
TPSHA 10/EYP01	10	17,46
TPSHA 10/EYP11	10	17,46
TPSHA 125/EYP01	125	17,46
TPSHA 125/EYP11	125	17,46



INTERNAL CORNER
RPSHI.../1

EXTERNAL CORNER
RPSHE.../1



END CAP
TPSH.../1



JOINT
GISHN.../1






PROSGUSCIO DA is a cove-shaped profile in shockproof non - toxic coloured vinyl resin particularly suitable to ensure cleanliness and hygiene in public and industrial environments. Its particular section, the availability in four heights and special pieces, such as internal and external corners, end caps and junctions, make **PROSGUSCIO DA** a much sought-after profile that allows a workmanlike application.

PROSGUSCIO DA

SHOCKPROOF NON - TOXIC COLOURED
VINYL RESIN



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

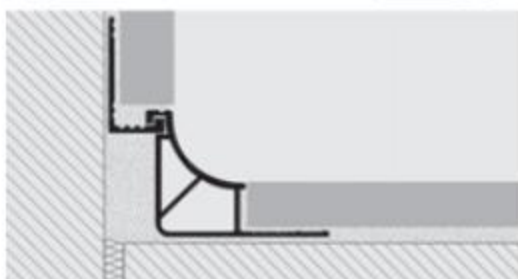

1. Choose "PROSGUSCIO DA" according to the tile thickness and desired colour. 2. Cut "PROSGUSCIO DA" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROSGUSCIO DA" into the adhesive. 4. Lay the tiles on floor and wall aligning them with the profile leaving a 2 mm joint. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation.

NON-TOXIC SHOCKPROOF VINYL RESIN


bar length 2,5 lm - pack. 20 Pc - 50 lm

Article	H mm	€/lm	€/Pc
PS 06-...	6	4,14	10,35
PS 08-...	8	4,50	11,25
PS 10-...	10	4,70	11,75
PS 125-...	12,5	5,19	12,98

The code of the selected colour must be added to the article code. E.g.: PS 06-... (chosen colour white) PS 06-01. The interchangeable flange corresponds to white Proterminal pvc H 6-8-10 mm.

COLOURS

01 - White	03 - Cement gray
------------	------------------

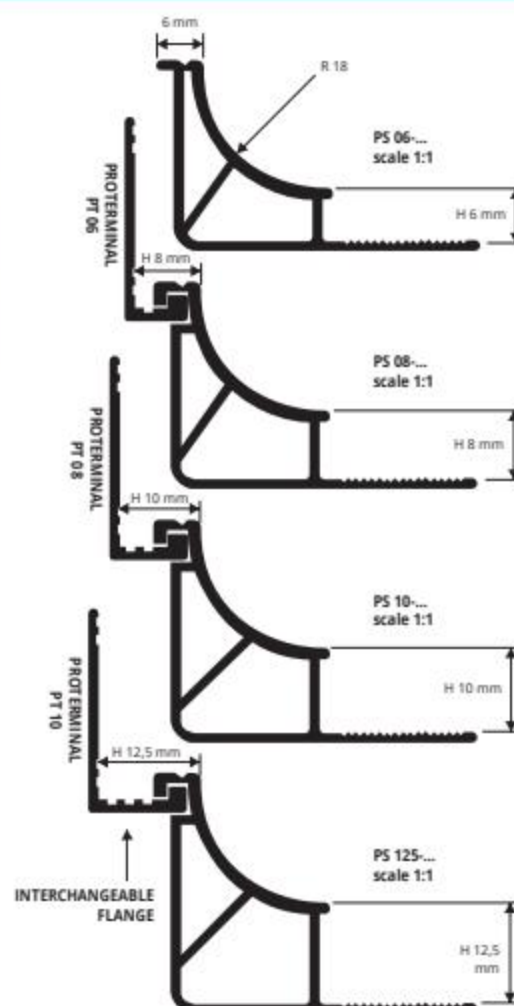

BUY WHITE PROTERMINAL TO CREATE THE DUAL HEIGHT:
Use proterminal PT 06 to reach H 8 mm
Use proterminal PT 08 to reach H 10 mm
Use proterminal PT 10 to reach H 12,5 mm

CORNERS, END CAPS and JOINTS

NON- TOXIC VINYL RESIN

EXTERNAL / INTERNAL CORNER - RVA COLOURED

Article	H mm	€/Pc
RAI ...-.../1	06/08/10/125	2,75
RAE ...-.../1	06/08/10/125	2,75

The code of the selected colour must be added to the article code. E.g.: RAI 06-... (chosen colour white) RAI 06-01.

END CAP 1 RT + 1 LF - RVA COLOURED

Article	H mm	€/Pc
TCE 06-.../1	08/10/125	4,97

The code of the selected colour must be added to the article code. E.g.: TCE 08-... (chosen colour white) TCE 08-01.

JOINTS - RVA COLOURED

Article	H mm	€/Pc
GIN ...-...	06/08/10/125	2,42



PROJOLLY - PROJOLLY QUART

INTERNAL CORNER
RAI...-.../1



EXTERNAL CORNER
RAE...-.../1



END CAP
TCE...-.../1



JOINT
GIN...-.../1




PROROUND

POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A


PROROUND is a cove-shaped profile in polished and brushed stainless steel AISI 304/1.4301-V2A particularly suitable to ensure cleanliness and hygiene in every kind of environment where high resistance to mechanical and chemical stresses are required. Its particular section and the availability in two finishes and special pieces, such as internal and external corners, make **PROROUND** a much sought-after profile that allows a workmanlike application even in environments subject to high mechanical stresses.

internal seal hygienic profiles

PRDAC/35
PRDAC/35A
scale 1:1

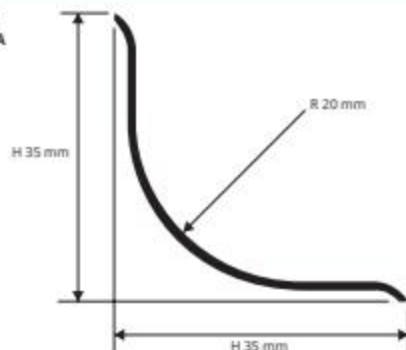

EXAMPLES OF LAYING

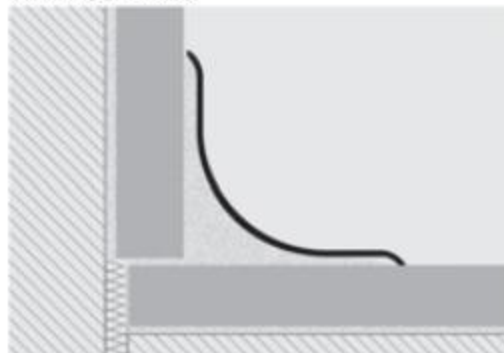

POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
35 x 35 mm - bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PRDAC 35	35	14,99	40,47
PRDAC 35A	35	18,60	50,22



BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
35 x 35 mm - bar length 2,7 lm - pack. 20 Pcs - 54 lm - 10/10 mm

Article	H mm	€/lm	€/Pc
PRDACS 35	35	18,18	49,09
PRDACS 35A	35	21,81	58,89

1. Choose "PROROUND" according to the desired finish and width. 2. Cut "PROROUND" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry, remove the protective film, place correctly the profile and press it without hitting / apply the silicone on the surface where the profile will be laid (version without adhesive) and press it without hitting.

COLOURS



Suitable for use in contact with foodstuffs.

PREWELDED CORNERS and THREE-WAYS JOINTS without gaps

POLISHED AND BRUSHED STAINLESS STEEL



POLISHED STAINLESS STEEL AISI 304/1.4301-V2A

Article	L mm	€/Pc
PRDI/1	100	22,52
PRDE/1	100	22,52
PRTE/1	80	33,75

Brushed STAINLESS STEEL AISI 304/1.4301-V2A

Article	L mm	€/Pc
PRDIS/1	100	23,90
PRDES/1	100	23,90
PRTES/1	80	36,52


PROSANI STRIP & PROSANI STRIP KIT

NON-TOXIC FLEXIBLE WHITE VINYL RESIN


PROSANI STRIP and **PROSANI STRIP KIT** are profiles in non-toxic flexible white vinyl resin particularly suitable to ensure cleanliness and hygiene along the connection between the wall tile coverings and sinks, bathtubs and shower trays. **PROSANI STRIP KIT** is provided with a double-sided butyl tape while **PROSANI STRIP** can be applied with silicone. Their particular section and ease of application, and make **PROSANI STRIP KIT** and **PROSANI STRIP** a much sought after profiles that allow a workmanlike application.

internal seal hygienic profiles

PSS 10
scale 1:1

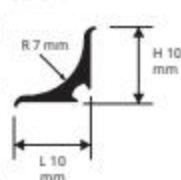

PSS 1035
scale 1:1

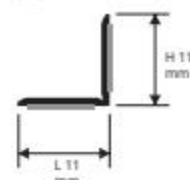

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose the desired profile. 2. Cut the profile to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry, remove the protective film (PROSANI STRIP KIT), place correctly the profile and press it without hitting / apply the equipment double-sided butyl tape on the back of the profile (PROSANI STRIP), apply the silicone along the floor-wall joint and place the profile.



FLEXIBLE WHITE VINYL RESIN

roll 25 lm

Article	LxH mm	€/lm	€/Pc
PSS 10	10 X 10	4,36	109,00

PROSANI STRIP KIT ROLL - WHITE

roll 3,5 lm

Article	LxH mm	€/lm	€/Pc
PSS 1035	11 X 11	0,96	3,36



COLOURS



PROSEAL 50 is a cove-shaped profile in shockproof non - toxic coextruded coloured vinyl resin particularly suitable to ensure cleanliness and hygiene in public and industrial environments. Its particular section and the availability in two different colours and special pieces, such as internal and external corners, end caps and joints, make **PROSEAL 50** a much sought-after profile that allows a workmanlike application.

PROSEAL 50

SHOCKPROOF NON - TOXIC COEXTRUDED
COLORED VINYL RESIN



COEXTRUDED VINYL RESIN NON-TOXIC SHOCKPROOF 2,5 lm - Pack. 40 LM

Article	€/lm	€/Pc
PSA 50-...	9,59	23,98


The code of the selected colour must be added to the article code.
E.g.: PSA 50... (chosen colour white) PSA 50-01.

COEXTRUDED VINYL RESIN NON-TOXIC SHOCKPROOF - ADHESIVE bar length 2,5 lm - Pack. 30 LM

Article	€/lm	€/Pc
PSAA 50-...	13,26	33,15

The code of the selected colour must be added to the article code.
E.g.: PSAA 50... (chosen colour white) PSAA 50-01.

PSA 50-... / PSAA 50-...
scale 1:1

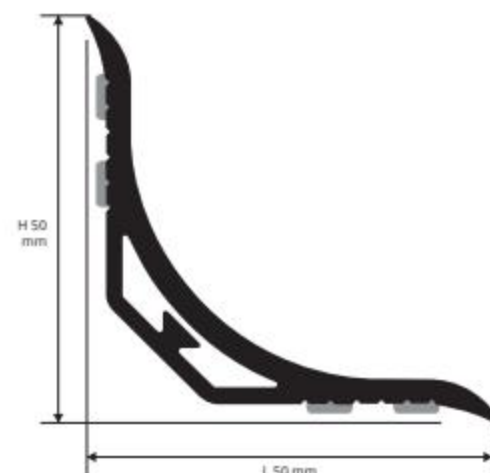

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROSEAL 50" according to the tile thickness and desired finish. 2. Cut "PROSEAL 50" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry, remove the protective film (version with adhesive), place the profile and press it without hitting / apply the double-sided butyl tape on the back of the profile (version without adhesive), apply the silicone along the floor-wall joint and place the profile.

COLOURS

01 - White	03 - Cement Grey

CORNERS and END CAPS

NON - TOXIC VINYL RESIN

INTERNAL / EXTERNAL CORNER AND END CAPS

Article	€/Pack. 10 Pc
TRI 50-.../10	45,76
TRE 50-.../10	45,76
TRT 50-.../10	45,76
TRC 50-.../10	45,76
TGN 50-.../10	45,76

The code of the selected colour must be added to the article code.
E.g.: TRI 50-.../10 (chosen colour white) TRI 50-01/10.



EXTERNAL CORNER



THREE WAYS



END CAP



TRE 50-.../10



TRT 50-.../10



TRC 50-.../10



TGN 50-.../10




TRI 50-.../10

PROSEAL 25

SHOCKPROOF NON - TOXIC COEXTRUDED
COLORED VINYL RESIN

internal seal hygienic profiles

PSA 25-...
PSAA 25-...
scale 1:1

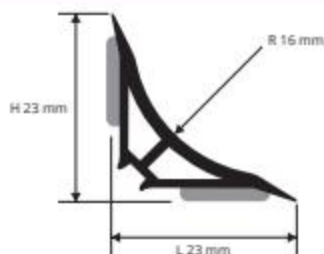

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROSEAL 25" according to the tile thickness and desired finish. 2. Cut "PROSEAL 25" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry, remove the protective film (version with adhesive), place the profile and press it without hitting / apply the double-sided butyl tape on the back of the profile (version without adhesive), apply the silicone along the floor-wall joint and place the profile.

PROSEAL 25 is a cove-shaped profile in shockproof non - toxic coextruded coloured vinyl resin particularly suitable to ensure cleanliness and hygiene in public and industrial environments. Its particular section and the availability in three different colours and special pieces, such as internal and external corners, end caps and joints, make **PROSEAL 25** a much sought-after profile that allows a workmanlike application.



COEXTRUDED VINYL RESIN NON-TOXIC SHOCKPROOF
bar length 2,5 lm - pack 50 LM

Article	€/lm	€/Pc
PSA 25-...	4,42	11,05

The code of the selected colour must be added to the article code.
E.g.: PSA 25-... (chosen colour white) PSA 25-01..

COEXTRUDED VINYL RESIN NON-TOXIC SHOCKPROOF ADHESIVE
bar length 2,5 lm - pack 50 LM

Article	€/lm	€/Pc
PSAA 25-...	7,06	17,65

The code of the selected colour must be added to the article code.
E.g.: PSAA 25-... (chosen colour white) PSAA 25-01..

COLOURS



PROSEAL KIT 25 (1 Pc of 1,80 LM + 2 Pcs of 0,90 lm + 2 INTERNAL CORNERS and 2 END CAPS 1 R and 1 L)

Description	Article	€/KIT
Kit PROSEAL 25	KTPSA 25-01	36,32

CORNERS, END CAPS and THREE-WAYS JOINTS

NON - TOXIC VINYL RESIN



INTERNAL CORNER
TRI 25-.../10



THREE WAYS
TRT 25-.../10



EXTERNAL CORNER
TRE 25-.../10



END CAP
TRC 25-.../10





JOINTS
TGN 25-.../10

INTERNAL / EXTERNAL CORNERS AND END CAPS (for PROSEAL 25)

Article	€/Pack. 10 Pc
TRI 25-.../10	28,12
TRE 25-.../10	28,12
TRT 25-.../10	28,12
TRC 25-.../10	26,89
TGN 25-.../10	26,89


The code of the selected colour must be added to the article code.
E.g.: TRI 25-.../10 (chosen colour white) TRI 25-01/10.

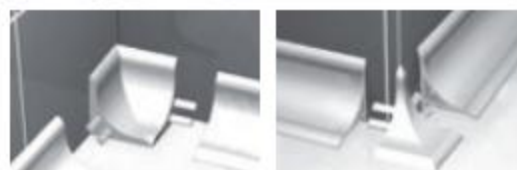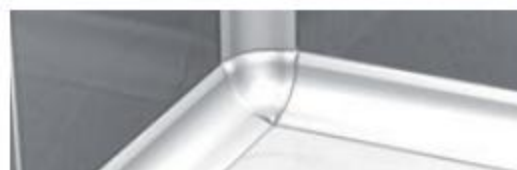

PROSEAL FLEX

NON-TOXIC FLEXIBLE VINYL RESIN

PSF 15
PSF 20
PSF 25

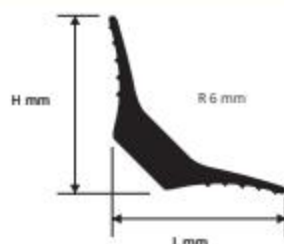

INSTRUCTIONS FOR LAYING

1. Apply a suitable adhesive for resilient flooring on the support. 2. Place "PROSEAL FLEX" over the adhesive. 3. Apply the adhesive on the profile and the support and lay the resilient flooring.



FLEXIBLE BLACK NON-TOXIC VINYL RESIN
bar length 2,5 lm - pack 40 Pcs - 100 lm

Article	L x H mm	€/lm	€/Pc
PSF 15-11	15x15	1,34	3,35
PSF 20-11	20x20	1,63	4,08
PSF 25-11	25x25	2,02	5,05

COLOURS



PROBATH is a cove-shaped profile in shockproof non - toxic coextruded white vinyl resin particularly suitable to ensure cleanliness and hygiene along the connection between the wall tile coverings and sinks, bathtubs and shower trays. Its particular section and the availability in two different height and special pieces, such as internal and external corners, (only for PSB-20) end caps and joints, make **PROBATH** a much sought-after and easy to lay profile that allows a workmanlike application.

PROBATH

SHOCKPROOF NON - TOXIC
COEXTRUDED VINYL RESIN



CO-EXTRUDED VINYL RESIN NON - TOXIC IMPACT - RESISTANT
bar length 2,5 lm - pack. 40 Pcs - 100 lm

Article	H mm	€/lm	€/Pc
PSB 15-01	15	4,72	11,80
PSB 20-01	20	6,07	15,18

AVAILABLE ONLY IN WHITE

COLOURS



01

FOR OTHER COLORS MINIMUM ORDER 400 pcs



PROBATH KIT

Description	Article	€/KIT
Kit PROBATH	KTPSB 20-01	35,65
1 Pc PROBATH of 1,80 lm	PSB 20-01	
2 Pc PROBATH of 0,90 lm	PSB 20-01	
2 Internal Corner	TRI 25-01	
2 End caps	TRC 25-01	

PSB 15-01
scale 1:1



PSB 20-01
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROBATH" according to the desired height. 2. Cut "PROBATH" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry apply the silicone on the back of the profile and place it without hitting.

internal seal hygienic profiles

PROBATH FLEX is a cove-shaped profile in shockproof non - toxic flexible white vinyl resin particularly suitable to ensure cleanliness and hygiene along the connection between the wall tile coverings and sinks, bathtubs and shower trays. Its particular section and the availability in two different height and special pieces, such as internal and external corners, (only for PSB-20) end caps and joints, make **PROBATH FLEX** a much sought-after and easy to lay profile that allows a workmanlike application.

PROBATH FLEX

SHOCKPROOF NON - TOXIC FLEXIBLE
VINYL RESIN



FLEXIBLE WHITE VINYL RESIN
2,5 lm 40 Pcs - 100 lm

Article	H mm	€/lm	€/Pc
PSBF 15-01	15	5,50	13,75
PSBF 20-01	20	6,86	17,15

AVAILABLE ONLY IN WHITE



01 - White

PSBF 15-01
scale 1:1



PSBF 20-01
scale 1:1



1. Choose "PROBATH FLEX" according to the desired height. 2. Cut "PROBATH FLEX" to the desired length. 3. Remove carefully any remains of oil, fat and dirt from the surface where the profile will be laid. 4. When the surface is perfectly dry apply the silicone on the back of the profile and place it without hitting.

internal seal hygienic profiles

CORNERS, END CAPS and THREE-WAYS JOINTS

NON-TOXIC VINYL RESIN

CORNERS INTERNAL / EXTERNAL, THREE-WAYS, JOINTS AND END CAP

Article	€/Pc
TRI 25-01/1	2,96
TRE 25-01/1	2,96
TRT 25-01/1	2,96
TRC 25-01/1	2,70
TGN 25-01/1	2,70

CORNERS INTERNAL / EXTERNAL AND END CAP - (for PSB 15 - PSBF 15)

Article	€/Pc
TPSB 15-01/1	2,70
RIPSB 15-01/1	2,96
REPSB 15-01/1	2,96



EXTERNAL
CORNER
REPSB 15-01



END CAP
TPSB 15-01



INTERNAL
CORNER
RIPSB 15-01



INTERNAL
CORNER
TRI 25-01



EXTERNAL
CORNER
TRE 25-01



END CAP
TRC 25-01



JOINTS
TGN 25-01




THREE
WAYS
TRT 25-01



PROKERLAM LINE

POLISHED AND BRUSHED STAINLESS STEEL AISI 304/1.4301-V2A

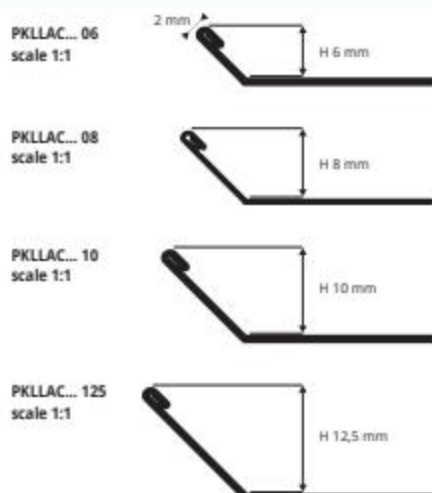

LAYING INSTRUCTIONS



PROKERLAM LINE is a profile in polished and brushed stainless steel AISI 304/1.4301-V2A suitable to protect the external corners of coverings in low thickness. It can be used like connection profile between step tread and riser of stairs coated with ceramic and mosaic with low thickness. Its particular section and the availability in three different heights and finishes and special pieces such as internal and external corners, end caps and joints make **PROKERLAM LINE** a much sought-after profile that allows a workmanlike application even with low thickness coverings.



POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
Bar length 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLAC 045	4,5	8,21	22,17
PKLLAC 06	6	8,46	22,84
PKLLAC 08	8	8,83	23,84
PKLLAC 10	10	9,27	25,03
PKLLAC 125	12,5	9,82	26,51

1. Choose "PROKERLAM LINE" according to the desired finish. 2. Cut "PROKERLAM LINE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROKERLAM LINE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



BRUSHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
2,7 lm 40 PCS - 108 lm


Article	H mm	€/lm	€/Pc
PKLLACS 045	4,5	10,20	27,54
PKLLACS 06	6	10,57	28,54
PKLLACS 08	8	11,06	29,86
PKLLACS 10	10	11,57	31,24
PKLLACS 125	12,5	12,31	33,24

COLOURS



PROKERLAM LINE

ANODIZED, POLISHED, VARNISHED STONE LINE ALUMINIUM

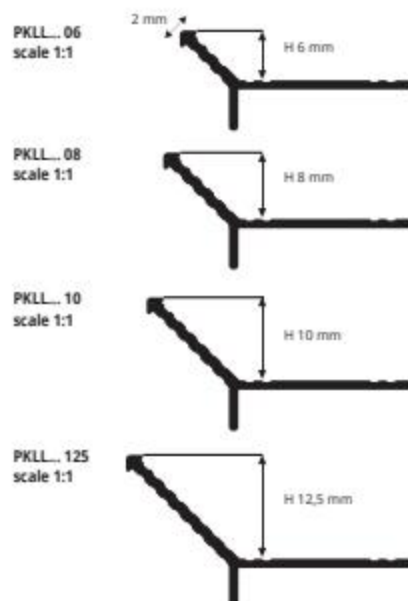

LAYING INSTRUCTIONS



1. Choose "PROKERLAM LINE" according to the desired finish. 2. Cut "PROKERLAM LINE" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROKERLAM LINE" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROKERLAM LINE is a Y-shaped profile in anodized and polished aluminium suitable to protect the external corners of coverings in low thickness. It can be used like connection profile between step tread and riser of stairs coated with ceramic and mosaic with low thickness. Its particular section and the availability in three different heights and finishes and special pieces such as internal and external corners, end caps and joints make **PROKERLAM LINE** a much sought-after profile that allows a workmanlike application even with low thickness coverings.



ANODISED SILVER ALUMINIUM thermo packed
2,7 lm 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLAA 045	4,5	5,55	14,99
PKLLAA 06	6	5,88	15,88
PKLLAA 08	8	6,27	16,93
PKLLAA 10	10	6,66	17,98
PKLLAA 125	12,5	7,19	19,41

COLOURS

ANODIZED	POLISHED
AA	BC - Polished chrome alu.

STONE LINE		
SL01 - Stone white	SL02 - Stone cream	SL03 - Stone greyvory
SL05 - Stone grey	SL08 - Stone antrask	SL18 - Stone white cement
SL12 - Stone black		



POLISHED CHROME ALUMINIUM thermo packed
Bar length 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLBC 10	10	11,29	30,48
PKLLBC 125	125	12,02	32,45

STONE LINE ALUMINIUM thermo packed
Bar length 2,7 lm - Pack 40 PCS - 108 lm

Article	H mm	€/lm	€/Pc
PKLLA 06-SL...	6	9,45	25,52
PKLLA 08-SL...	8	10,07	27,19
PKLLA 10-SL...	10	10,71	28,92
PKLLA 125-SL...	12,5	11,55	31,19

The code of the selected colour must be added to the article code.
E.g.: PKLLA 06-... (chosen colour stone cream) PKLLA 06-SL02.

PROKERLAM SQUARE is a square corner bead profile in anodized and polished aluminium suitable to protect the external corners of coverings with low thickness. It can be used like connection profile between step tread and riser of stairs coated with ceramic and mosaic with low thickness. Its particular section and the availability in three different finishes make **PROKERLAM SQUARE** a much sought-after profile that allows a workmanlike application even with low thickness coverings.

PROKERLAM SQUARE

ANODIZED SILVER, POLISHED CHROME AND GOLD ALUMINIUM



ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLQAA 045	4,5	7,06	19,06



POLISHED GOLD ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLQBO 045	4,5	10,90	29,43

COLOURS

AA - Anodized silver alum.	BC - Polished chrome alum.	BO - Polished gold alum.

POLISHED CHROME ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLQBC 045	4,5	10,90	29,43

PKLQ... 045
scale 1:1



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS



1. Choose "PROKERLAM SQUARE" according to the desired finish.
2. Cut "PROKERLAM SQUARE" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROKERLAM SQUARE" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

PROKERLAM JOLLY is a quarter-circle rounded bead profile in anodized and polished aluminium suitable to protect the external corners of coverings with low thickness. It can be used like connection profile between step tread and riser of stairs coated with ceramic and mosaic with low thickness. Its particular section and the availability in three different finishes make **PROKERLAM JOLLY** a much sought-after profile that allows a workmanlike application even with low thickness coverings.

PROKERLAM JOLLY

ANODIZED AND POLISHED ALUMINIUM SILVER, CHROME AND GOLD



ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLJAA 045	4,5	6,83	18,44



POLISHED CHROME ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLJBC 045	4,5	10,64	28,73


COLOURS

AA - Anodized silver alum.	BC - Polished chrome alum.	BO - Polished gold alum.

POLISHED GOLD ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm	€/lm	€/Pc
PKLJBO 045	4,5	10,64	28,73

PKLJ... 045
scale 1:1

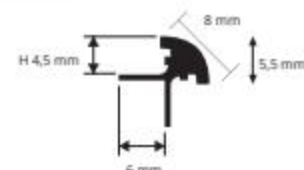

EXAMPLE FOR LAYING



1. Choose "PROKERLAM Jolly" according to the desired finish.
2. Cut "PROKERLAM Jolly" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROKERLAM Jolly" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

KALEIDOS®






NEWS
KALEIDOS

PROSHADOW CEILING is an aluminum profile, anodized or painted, for use on gypsum board ceilings. An LED strip can be applied in the cavity that is created and possibly closed with a polycarbonate plate. The profile allows for a 20 mm perimeter rabbet at the ceiling. **PROSHADOW CEILING** in aluminum is suitable as a perimeter rabbet in any indoor environment.

PROSHADOW CEILING

VARNISHED ALUMINIUM EASY LINE

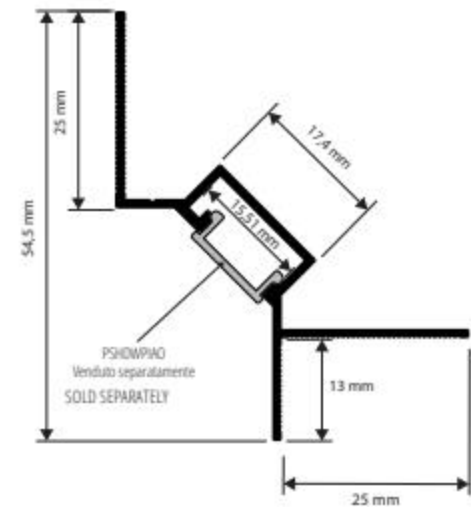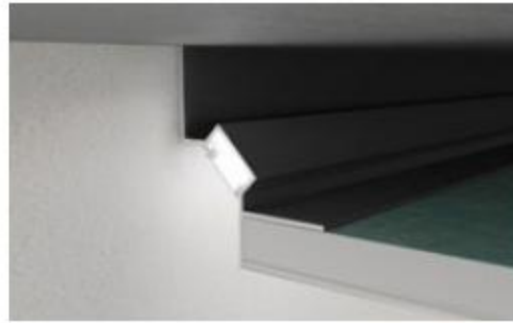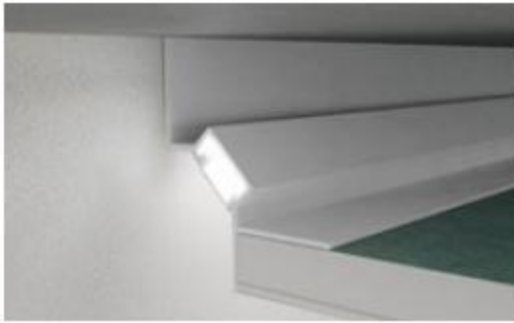

ALUMINIUM EASY LINE thermo packed

bar length 2 lm - pack 20 Pcs - 40 lm

Article	h / H mm	€/lm	€/Pc
PSHDWCE 13-EYP01	25	22,20	44,40
PSHDWCE 13-EYP11	25	22,20	44,40

COLOURS

KALEIDOS

EASY LINE	
EYP01 - MATT white- varnished (RAL 9016)	EYP11 - MATT black varnished

POLYCARBONATE COVER LED PROFILE


bar length 2 ml

Article	€/ml	€/Pcs
PSHDWPIAO	5,39	10,78



1. Choose PROSHADOW CEILING depending on the desired finish;
2. Cut PROSHADOWGAP CEILING to desired length
3. Secure the profile to the wall with adhesive
4. Lay the gypsum board taking care to align it with the horizontal section
5. Immediately remove product residue from the profile surface.


EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

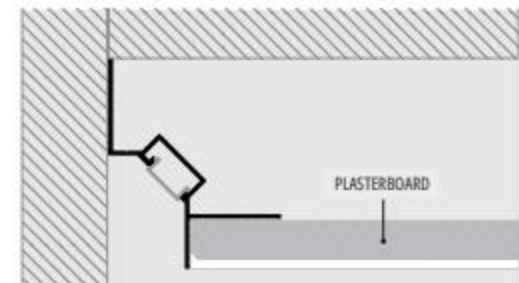

PROTOP

ANODIZED AND POLISHED ALUMINIUM

PROTOP is a rounded profile in anodized and polished aluminium. The profile protects the tile edges and decorates the countertops of kitchens realized with ceramic. Its particular section and elegance, the availability of three different finishes and special pieces such as internal and external corner at 90° and 135°, make **PROTOP** a much sought-after profile that allows an elegant workmanlike application.

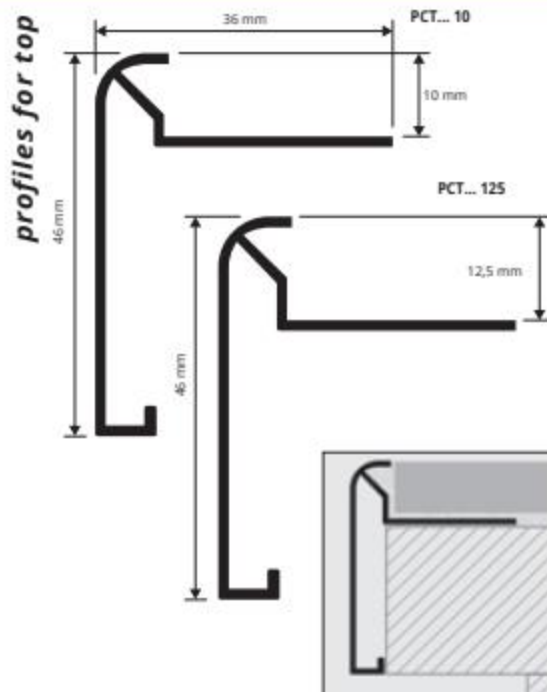

ANODIZED SILVER ALUMINIUM
bar length 2,7 lm - pack. 10 Pcs - 27 lm

Article	H mm	€/lm	€/Pc
PCTAA 10	10	13,94	37,64
PCTAA 125	12,5	14,30	38,61




POLISHED TITANIUM ALUMINIUM
2,7 lm 10 Pcs - 27 lm

Article	H mm	€/lm	€/Pc
PCTBT 10	10	23,27	62,83

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose "PROTOP" according to the tile thickness and desired finish. 2. Cut "PROTOP" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTOP" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

COLOURS



CORNERS

INTERNAL / EXTERNAL CORNERS ANODIZED SILVER ALUMINIUM

Article	€/Pc
EPCTAA 90/1 (90°)	20,45
IPCTAA 90/1 (90°)	20,45
EPCTAA 135/1 (135°)	20,45
IPCTAA 135/1 (135°)	20,45



EXTERNAL CORNER
EPCT... 90



EXTERNAL CORNER
EPCT... 135

INTERNAL / EXTERNAL CORNERS POLISHED TITANIUM ALUMINIUM

Article	€/Pc
EPCTBT 90/1 (90°)	24,17
IPCTBT 90/1 (90°)	24,17
EPCTBT 135/1 (135°)	24,17
IPCTBT 135/1 (135°)	24,17



INTERNAL CORNER
IPCT... 90




INTERNAL CORNER
IPCT... 135

PROTOP T

ANODIZED AND POLISHED ALUMINIUM

PROTOP T is a square profile in anodized and polished aluminium. The profile protects the tile edges and decorates the countertops of kitchens realized with ceramic. Its particular section and elegance, the availability of two different finishes and special pieces such as internal and external corner at 90° and 135°, make **PROTOP T** a much sought-after profile that allows an elegant workmanlike application.

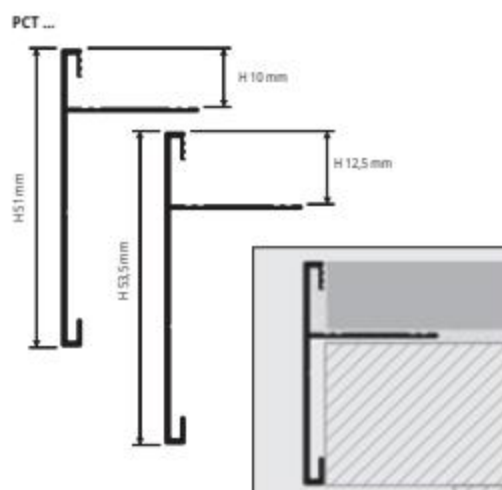

ANODIZED SILVER ALUMINIUM
2,7 lm 10 Pcs - 27 lm

Article	H mm	€/lm	€/Pc
PCTAA 10T	10	13,94	37,64
PCTAA 125T	12,5	14,30	38,61



POLISHED CHROME ALUMINIUM
bar length 2,7 lm - pack. 10 Pcs - 27 lm

Article	H mm	€/lm	€/Pc
PCTBC 10T	10	23,27	62,83
PCTBC 125T	12,5	23,62	63,77

INTERNAL / EXTERNAL CORNER ANODIZED SILVER ALUMINIUM

Article	€/Pc
IEPCTAA 12590T/1 (90°)	20,45
IEPCTAA 1090T/1 (90°)	20,45
IEPCTAA 10135T/1 (135°)	20,45
IEPCTAA 125135T/1 (135°)	20,45



IEPCT... 90T



IEPCT... 135T

INTERNAL / EXTERNAL CORNER ANODIZED CHROME ALUMINIUM

Article	€/Pc
IEPCTBC 12590T/1 (90°)	20,45
IEPCTBC 1090T/1 (90°)	20,45
IEPCTBC 10135T/1 (135°)	20,45
IEPCTBC 125135T/1 (135°)	20,45

COLOURS



EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS
1. Choose "PROTOP T" according to the tile thickness and desired finish. 2. Cut "PROTOP T" to the desired length and apply the adhesive on the support where the profile will be laid. 3. Press the anchoring flange of "PROTOP T" into the adhesive. 4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile. 5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.

